



- NOTES**
1. LOCATED ON "F" PANEL.
 2. RECORDER 113-228A USED FOR SCRAM DISCH. VOL. HOLDING TANK LEVEL (BLACK PEN) AND FOR SCRAM SOLENOID AIR HEADER PRESSURE (RED PEN).
 3. FOR ROOT VALVE SCHEDULE SEE DRAWING F45136C IS20.
 4. FOR INSTRUMENT DIAGRAM SEE DRAWING B-69016-C SH1.

LR NOTES:
PLEASE REFER TO DRAWING LR-18000-C SHEETS 1 AND 2 FOR LR BOUNDARY DRAWING NOTES, SYMBOLS, AND ACRONYMS.

NOTE: THIS DRAWING WAS CREATED USING COMPUTER AIDED DRAFTING. DO NOT MAKE MANUAL CHANGES.

		STA NINE MILE POINT NUCLEAR STATION UNIT NO. 1	
CONTROL ROD DRIVE SCRAM DUMP VOLUME P & I DIAGRAM			
APP	APP	DATE	SCALE
APP MPN	APP	10-8-88	NONE
APP AMC	DATE	DFB	DFB
DES	SCALE	DFB	DFB
DF	SCALE	DFB	DFB
DF	SCALE	DFB	DFB
DF	SCALE	DFB	DFB

REV.	C	A	U	F	DATE	BY	NO.	H.O.	DT	REMARKS	APP

0037