
9.2.6 Condensate Storage Facilities

The U.S. EPR stores condensate in the condenser hotwell and in the demineralized water storage tank. None of the users of demineralized water depend on the hotwell or the demineralized water storage tank for safety-related functions or backup.