

	ONE LINE DIAG. ONLY (E = ELECT. OPER M= MANUALLY OPER)
	AIR CIRCUIT BREAKER 600V AND BELOW
	AIR CIRCUIT BREAKER 2400V AND ABOVE
	DISCONNECT DEVICE
	POTENTIAL TRANS. (NUMBER INDICATES QUANTITY)
	3 - PT'S
	CURRENT TRANS. (NUMBER INDICATES QUANTITY)
	3 - CT'S
	CURRENT TRANS. BUSHING TYPE (NUMBER INDICATES QUANTITY)
	3 - CT'S
	CAPACITOR
	LIGHTNING ARRESTOR
	GROUND
	FUSE
	RESISTOR
	THERMAL ELEMENT
	MAGNETIC OVERLOAD DEVICE
	BATTERY
	CONNECTION
	CONNECTION
	NO CONNECTION
	TERMINAL BLOCK AND NUMBER

	CONTACT OPEN
	CONTACT CLOSED
	CONTACTS OF AUXILIARY RELAYS, AUXILIARY SWITCHES, PRESSURE SWITCHES, ETC. ARE SHOWN FOR OPEN, OFF, DE-ENERGIZED OR DE-ACTUATED CONDITION OF MAIN DEVICE
	BREAKER CONTROL SWITCH AT SWGR C = CLOSE T = TRIP
	MASTER CONTROL/PLANT ITEM OR EQUIPMENT NO. MASTER CONTROL SWITCH TERMINAL NUMBER DENOTES CONTACT CLOSED IN POSITION SHOWN C = CLOSE OR START T = TRIP O = OFF (NEUTRAL) OR OPEN IN CASE OF VALVE CTO = CLOSE, TRIP, OFF (NEUTRAL) SC = SLIP CLOSE ST = SLIP TRIP PO = PULL-OUT

	SELECTOR SWITCH
	CONTACT IS AS SHOWN WHEN OPERATOR IS IN POSITION SHOWN BY ARROW(S). WHEN OPERATOR IS IN DOTTED POSITION CONTACT CHANGES TO OPPOSITE THAT SHOWN

Received w/Ltr

6-28-73

P R C  
APERTURE  
CARDTERA  
APERTURE  
CARD

SO. I. N. T-385	Westinghouse Electric Corporation				WV
	TITLE: CONSOLIDATED EDISON CO.				
	INDIAN POINT STATION UNIT NO.3				
	ELEM. WIRING DIA.		SYMBOLS		
SUB	Sherrard	68	Wiskow	8/11/69	500B971
ATOMIC POWER DIV.				PITTSBURGH, PA., U.S.A.	

8110230033