



74-X3	SL1	MS1	MS2	MS3	MS4	74-X1
ANNUNCIATOR DMS 908 971 54L2	THIS SHEET	THIS SHEET	THIS SHEET	THIS SHEET	THIS SHEET	ANNUNCIATOR DMS 908 971 54L2
74-X4	SL2	MS11	MS12	MS13	MS14	74-X2
ANNUNCIATOR DMS 908 971 54L2	THIS SHEET	THIS SHEET	THIS SHEET	THIS SHEET	THIS SHEET	ANNUNCIATOR DMS 908 971 54L2

14	13	12	11	10	9	8	7	6	5	4	3	2	1
ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2	ANNUNCIATOR DMS 908 971 54L2

NOTES:
 1. SEE MAIN CONTROL BOARD
 2. ALL CONTACTS NOT LABELED OR BROUGHT OUT TO TERMINAL POINTS ARE SPARES.
 3. SEE SHEET FOR SWITCH DEV.
 4. ALL ELECTRICAL SYMBOLS ARE AS SHOWN.

8111070515

8111070515