


Figure 9.5.8-1—Emergency Diesel Generator Air Intake and Exhaust System

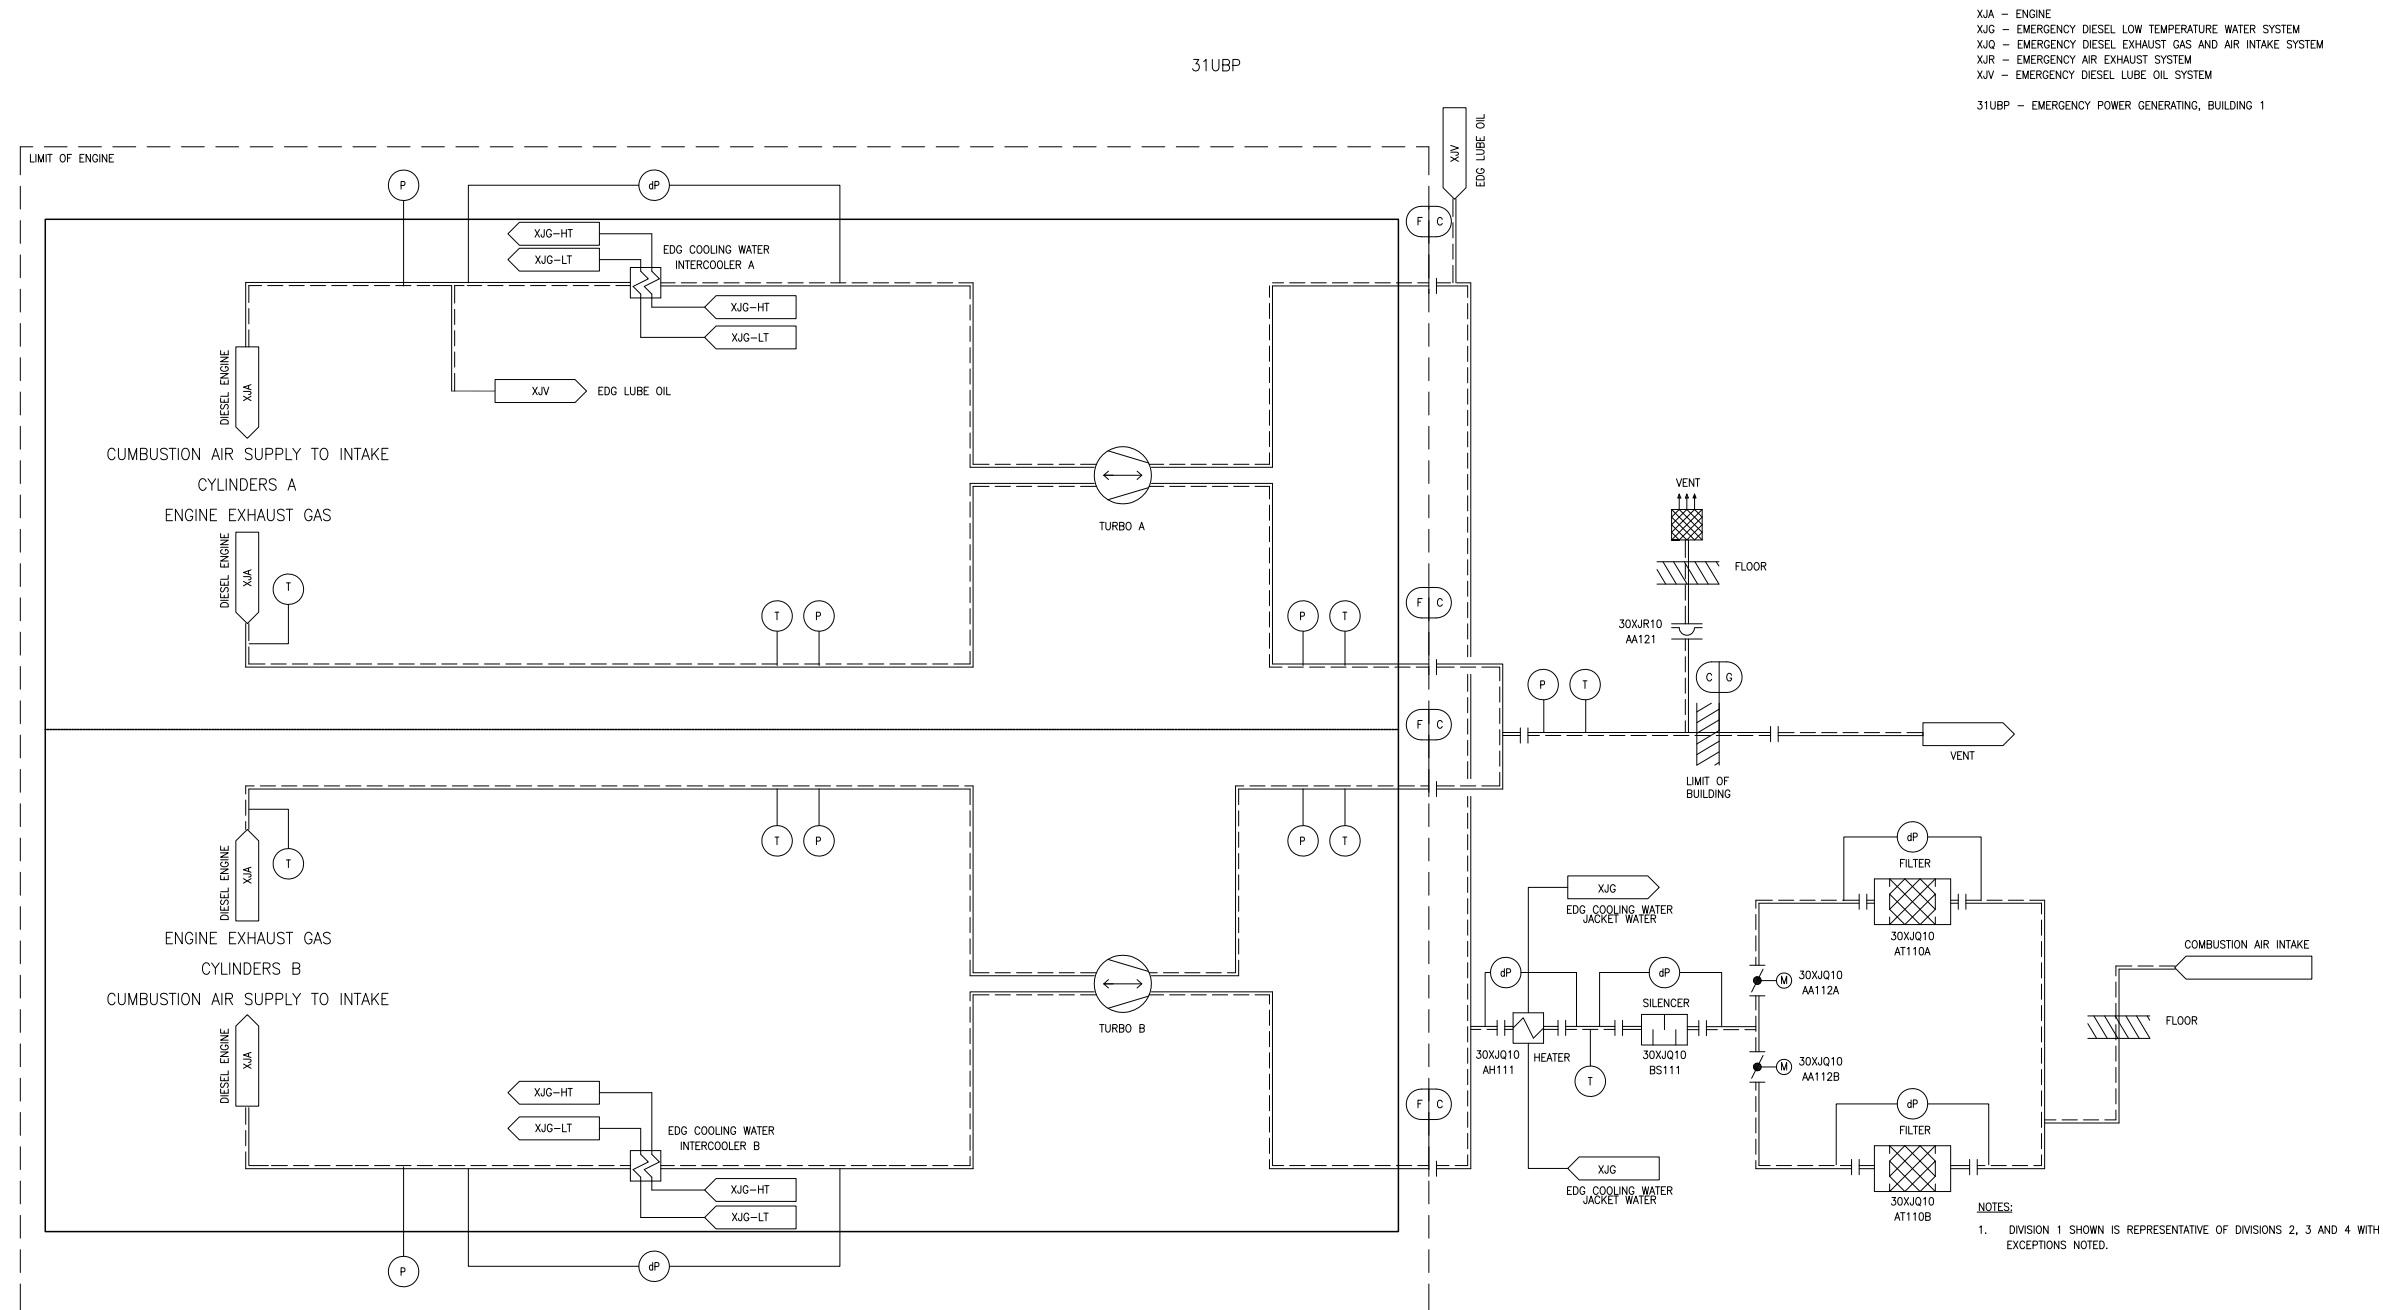

XJA - ENGINE  
 XJG - EMERGENCY DIESEL LOW TEMPERATURE WATER SYSTEM  
 XJQ - EMERGENCY DIESEL EXHAUST GAS AND AIR INTAKE SYSTEM  
 XJR - EMERGENCY AIR EXHAUST SYSTEM  
 XJV - EMERGENCY DIESEL LUBE OIL SYSTEM  
 31UBP - EMERGENCY POWER GENERATING, BUILDING 1

NOTES:  
 1. DIVISION 1 SHOWN IS REPRESENTATIVE OF DIVISIONS 2, 3 AND 4 WITH EXCEPTIONS NOTED.

G	N/A	NSC
F	N/A	I
D	N/A	I I
C	C	I
DESIGN AREA	SSC QUALITY GROUP	SSC SEISMIC CLASS

REV 003  
 XJQ01T2