

OPEN ON UPSCALE FUEL POOL EXHAUST RADIATION SIGNAL REACTOR BLDG VENT HI RAD. OR EQUIP FAILURE ON DRYWELL HI PRES. OR REACTOR LO WATER (SCRAM) LEVEL


OPENS ON LOW/LOW REACTOR WATER LEVEL

OPENS ON UPSCALE FUEL POOL EXHAUST RADIATION SIGNAL

TRIPS ON TORUS/DRYWELL BYPASS PERMISSIVE

OPENS ON DRYWELL BYPASS PERMISSIVE

OPENS ON TORUS BYPASS PERMISSIVE

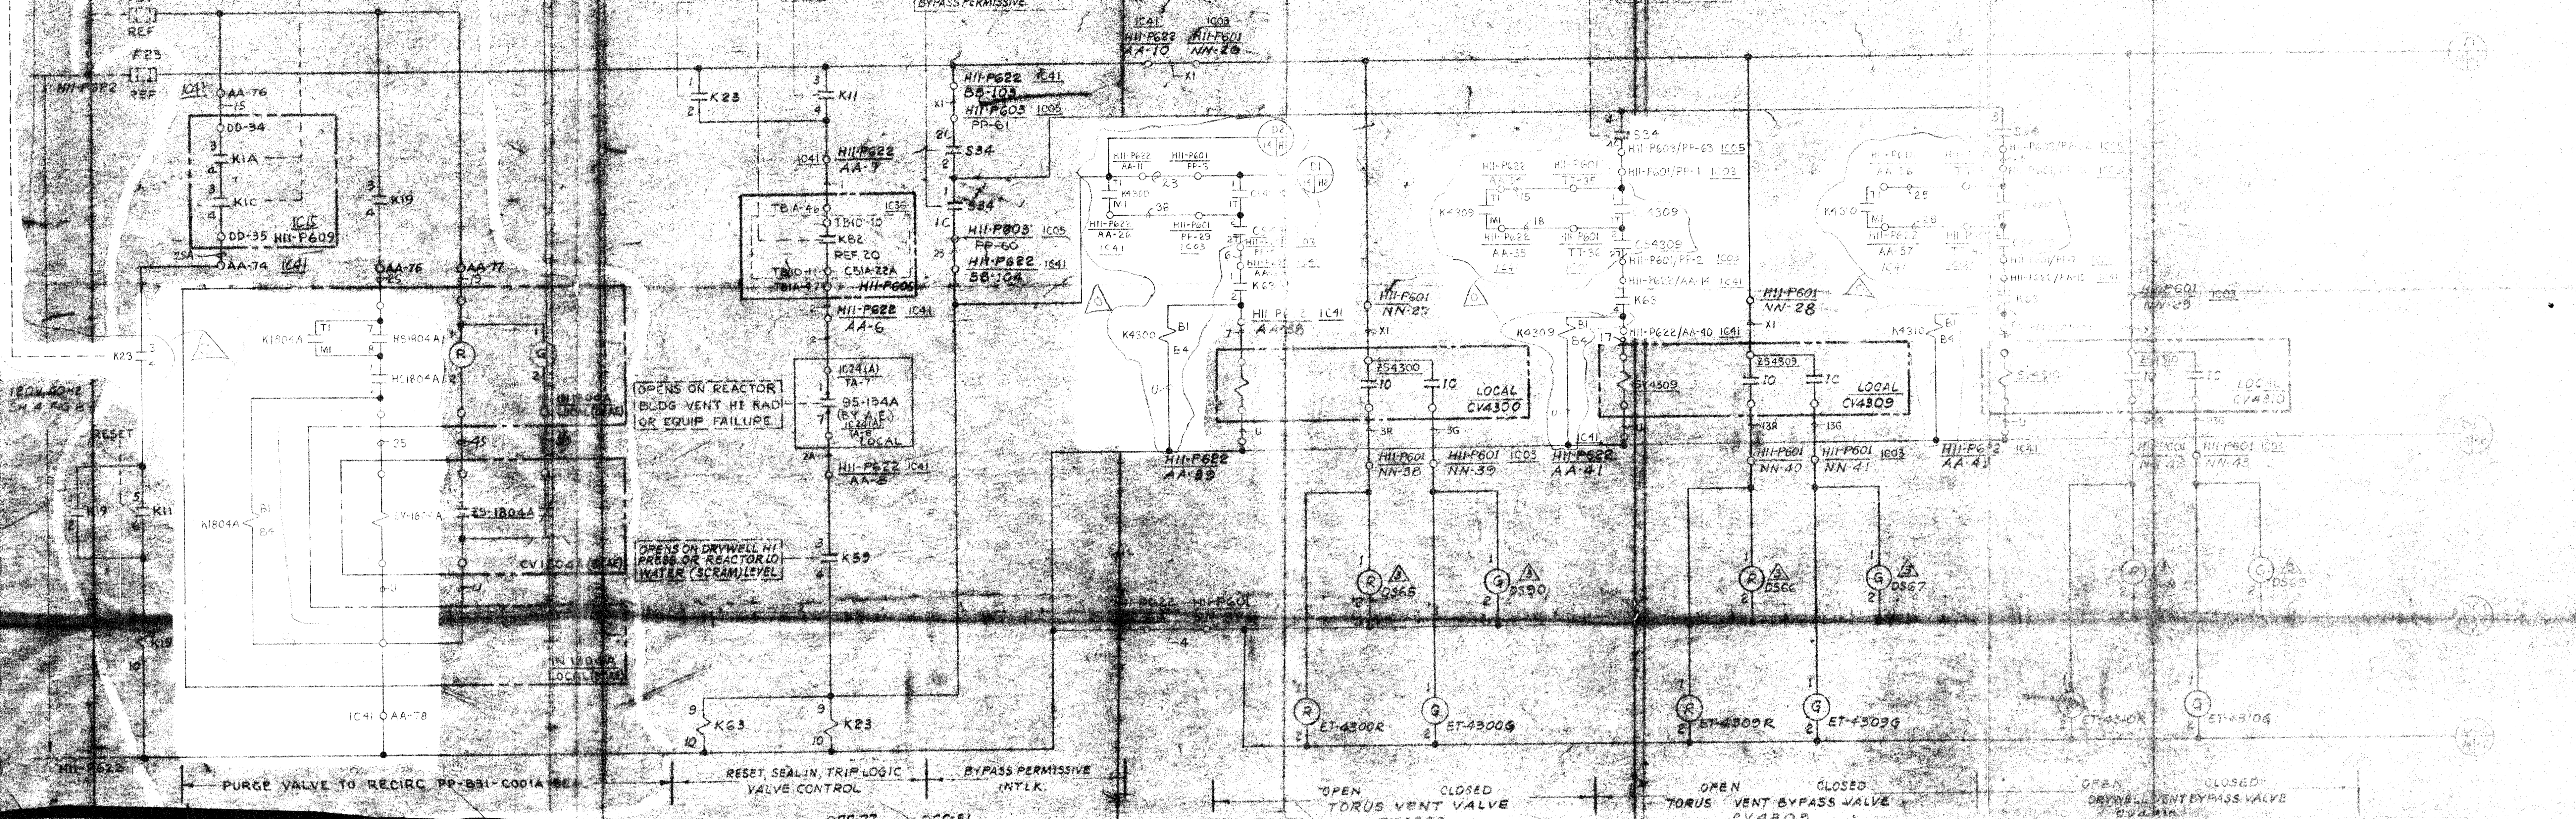


RESET SEAL IN TRIP LOGIC VALVE CONTROL

BYPASS PERMISSIVE INTLK

TORUS VENT VALVE

TORUS VENT BYPASS VALVE

DRYWELL VENT BYPASS VALVE

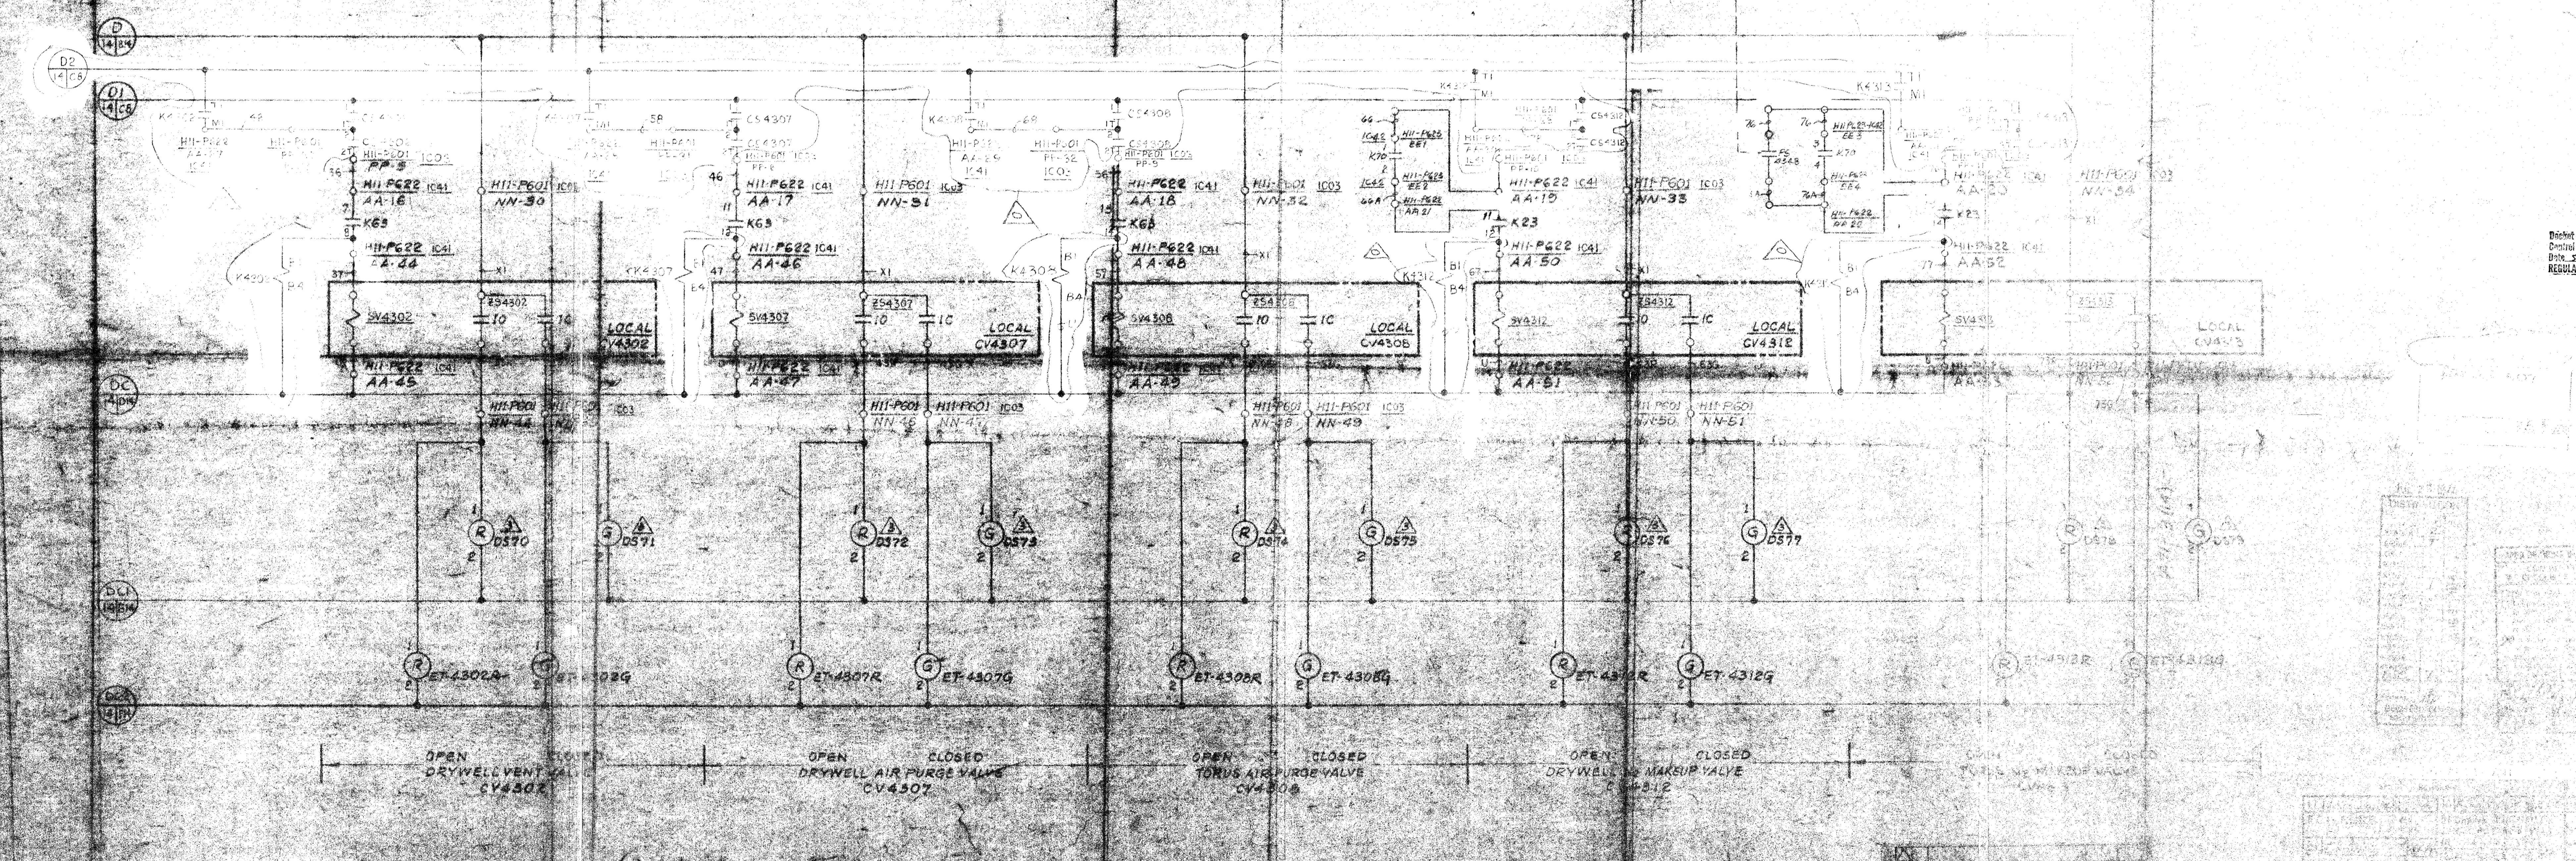

OPEN DRYWELL VENT VALVE

OPEN DRYWELL AIR PURGE VALVE

OPEN TORUS AIR PURGE VALVE

OPEN DRYWELL AIR PURGE VALVE

OPEN DRYWELL AIR PURGE VALVE

ATMOSPHERIC CONTROL NBOARD

Sheet # 33 of 37
Drawing # 2005/5037
Rev. 5-5-66. In Design
REGULATORY CHECKED FILE