

Figure 2.5.4-1—Emergency Diesel Generator Fuel Oil Storage and Transfer System Functional Arrangement Sheet 1 of 4

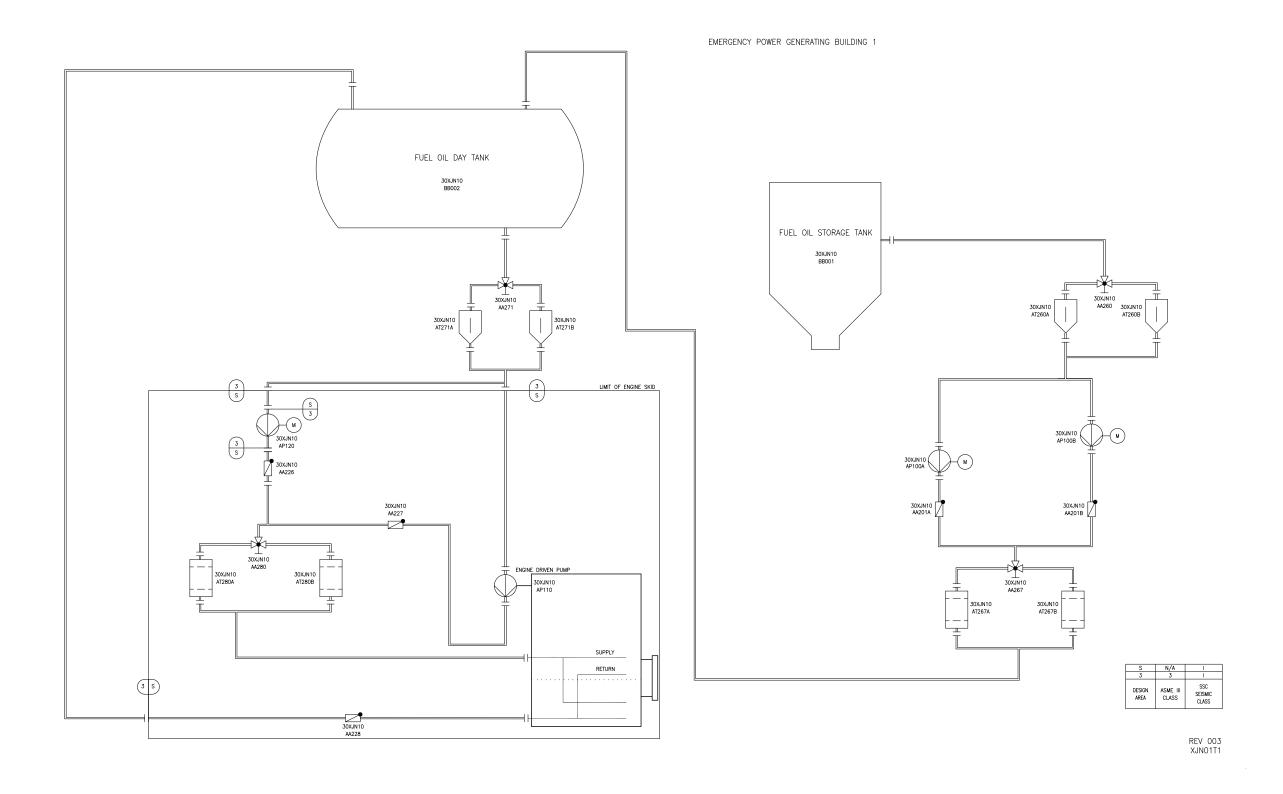




Figure 2.5.4-1—Emergency Diesel Generator Fuel Oil Storage and Transfer System Functional Arrangement Sheet 2 of 4

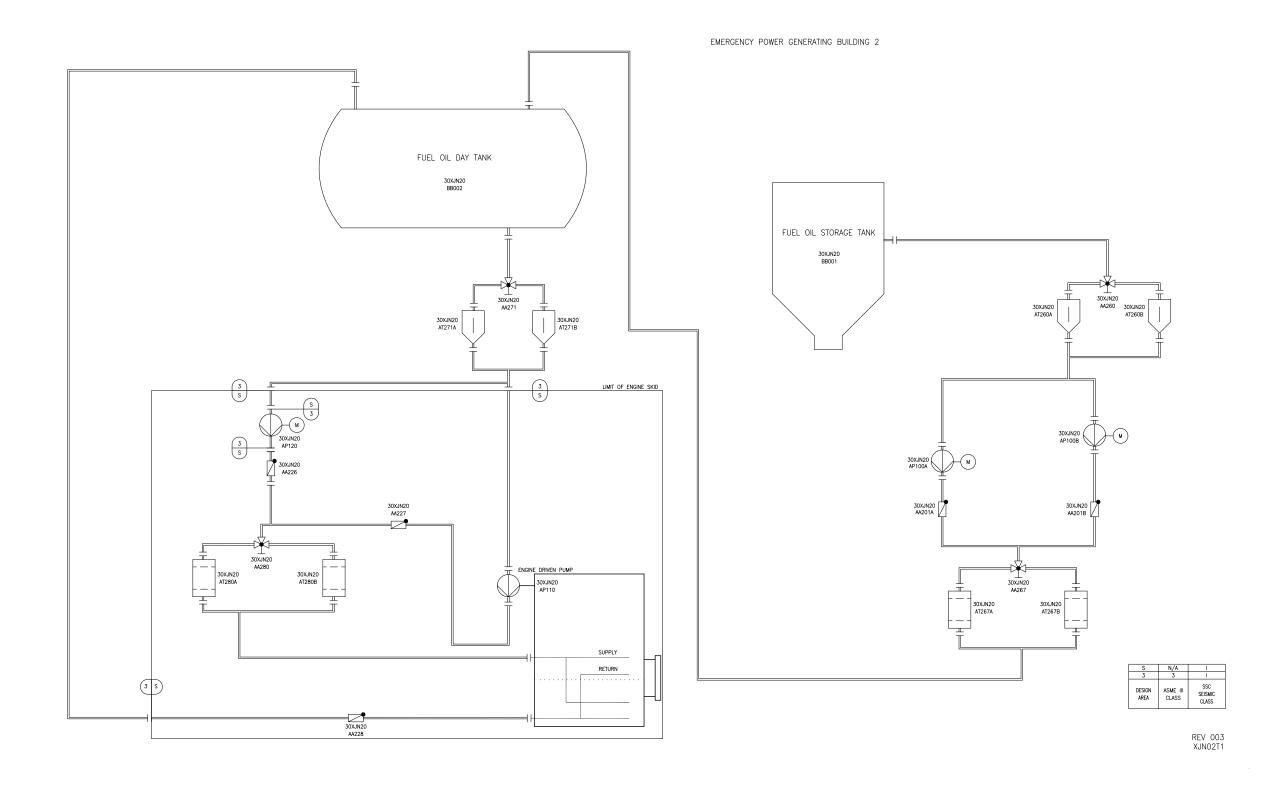




Figure 2.5.4-1—Emergency Diesel Generator Fuel Oil Storage and Transfer System Functional Arrangement Sheet 3 of 4

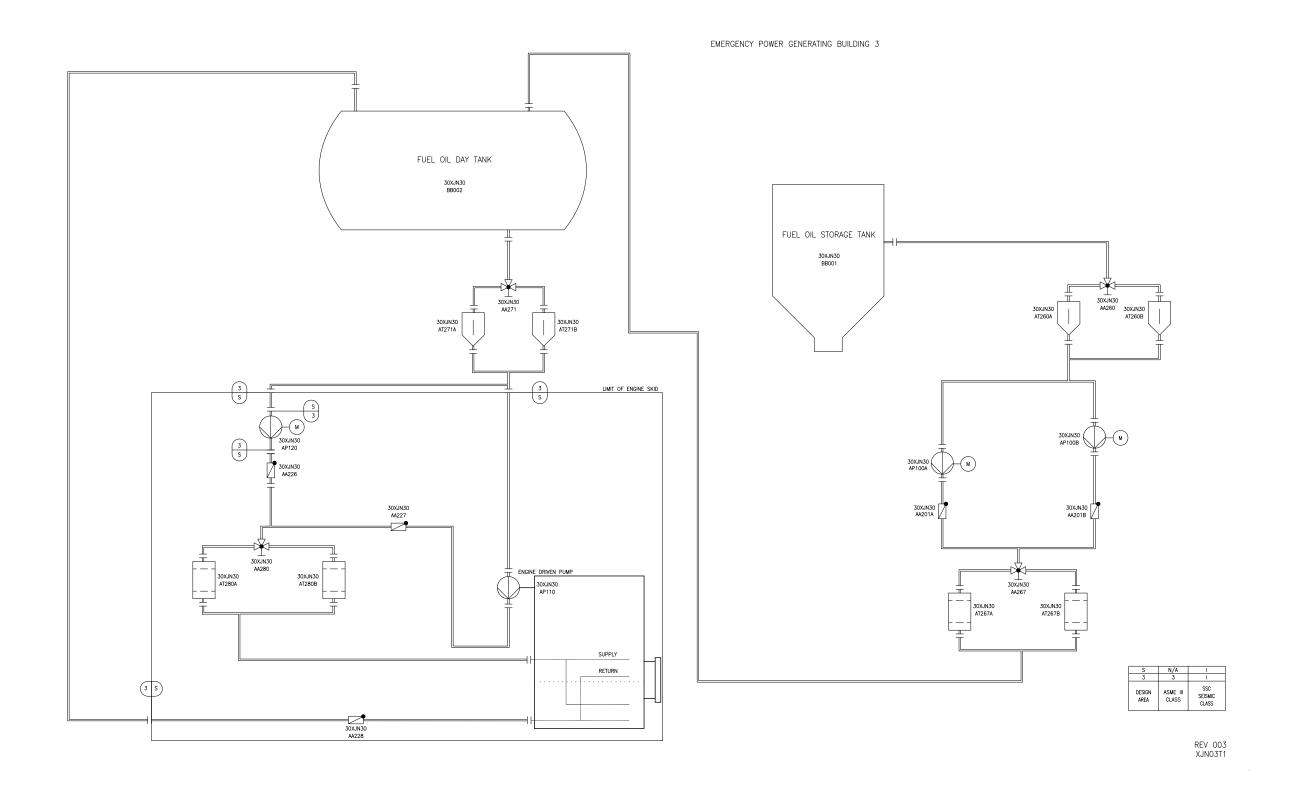




Figure 2.5.4-1—Emergency Diesel Generator Fuel Oil Storage and Transfer System Functional Arrangement Sheet 4 of 4


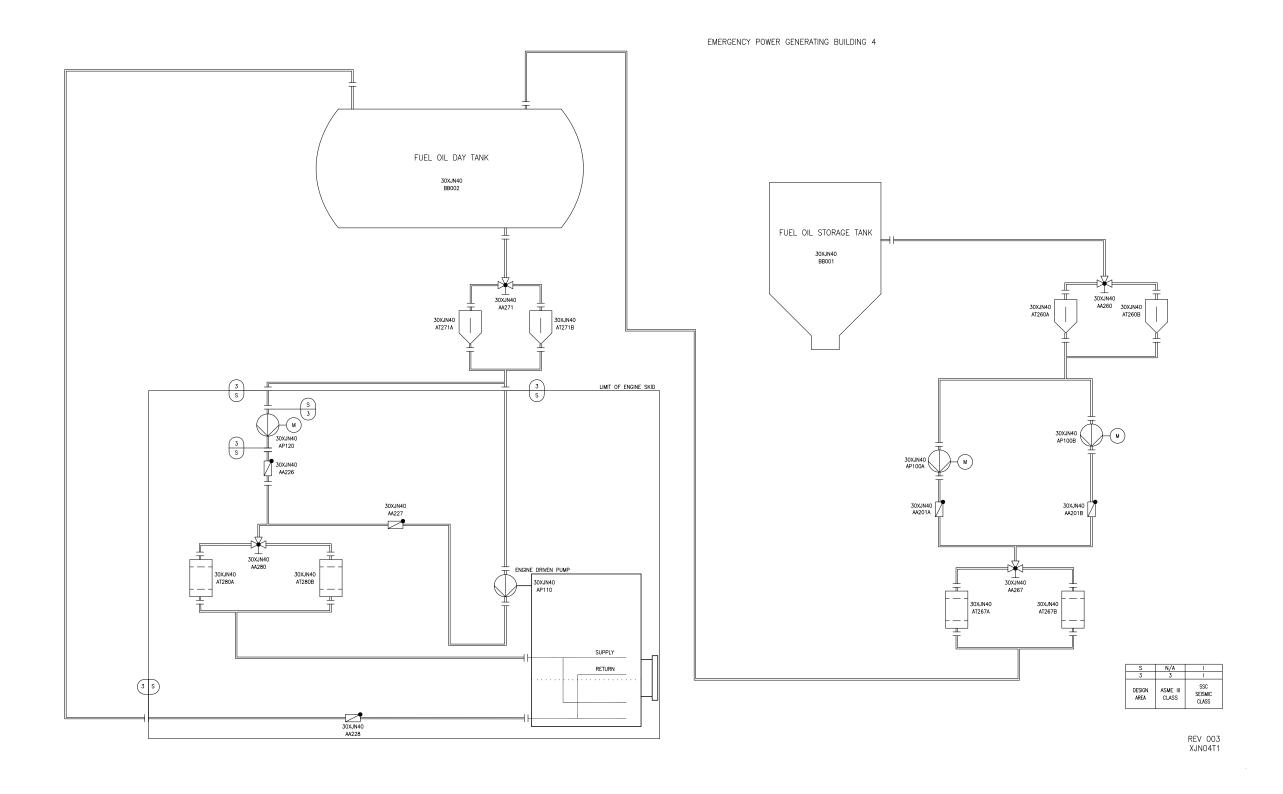




Figure 2.5.4-2—Emergency Diesel Generator Lubricating Oil System Functional Arrangement Sheet 1 of 4

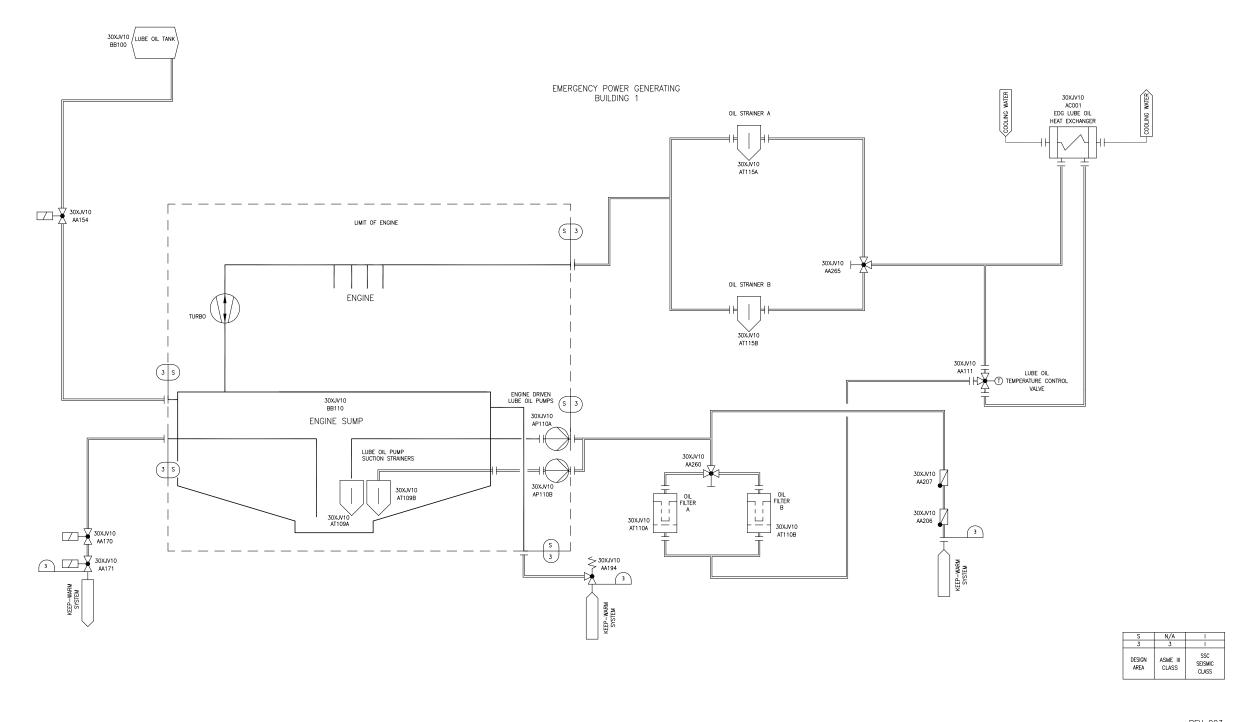

REV 003 XJV01T1



Figure 2.5.4-2—Emergency Diesel Generator Lubricating Oil System Functional Arrangement Sheet 2 of 4


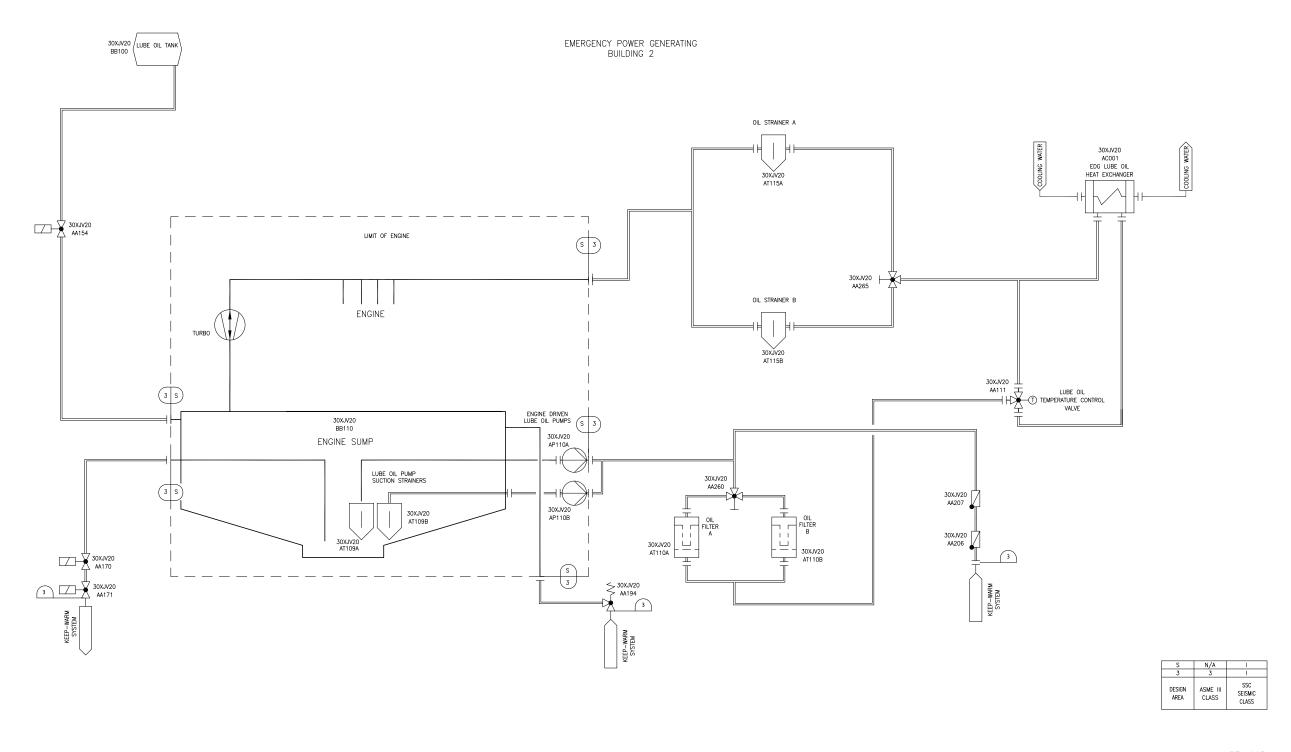





Figure 2.5.4-2—Emergency Diesel Generator Lubricating Oil System Functional Arrangement Sheet 3 of 4

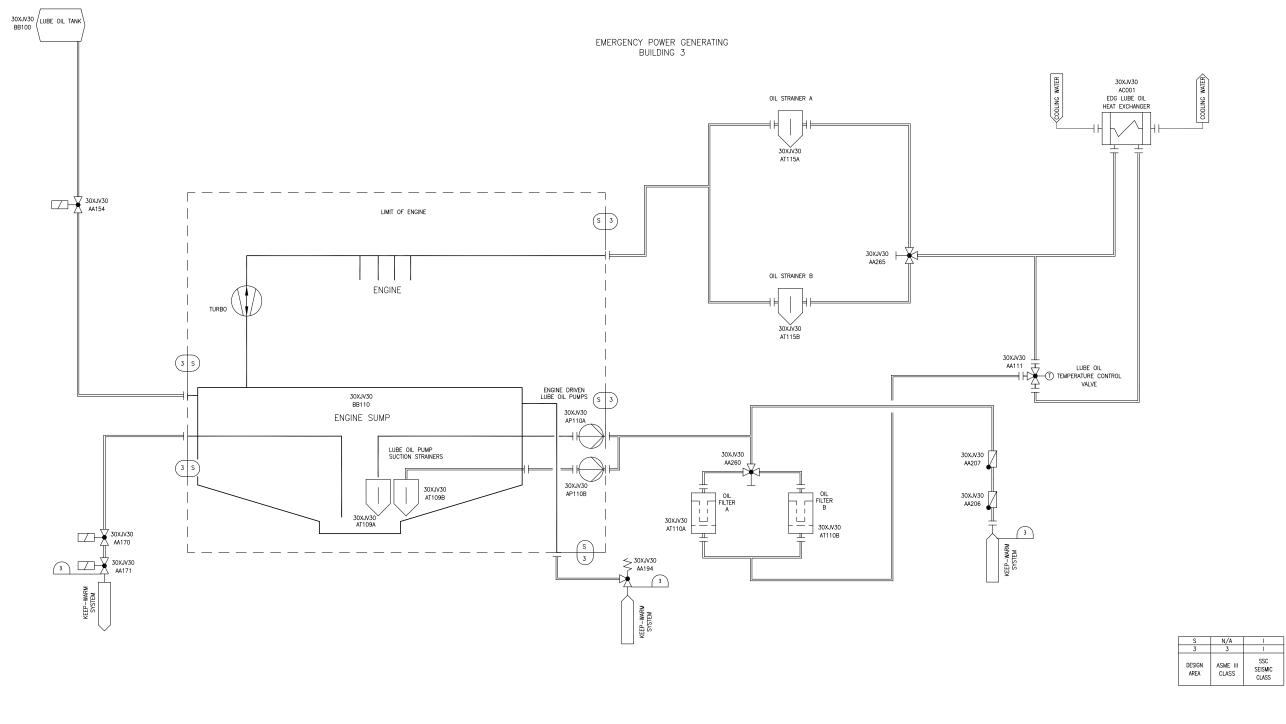

REV 003 XJV03T1




Figure 2.5.4-2—Emergency Diesel Generator Lubricating Oil System Functional Arrangement Sheet 4 of 4

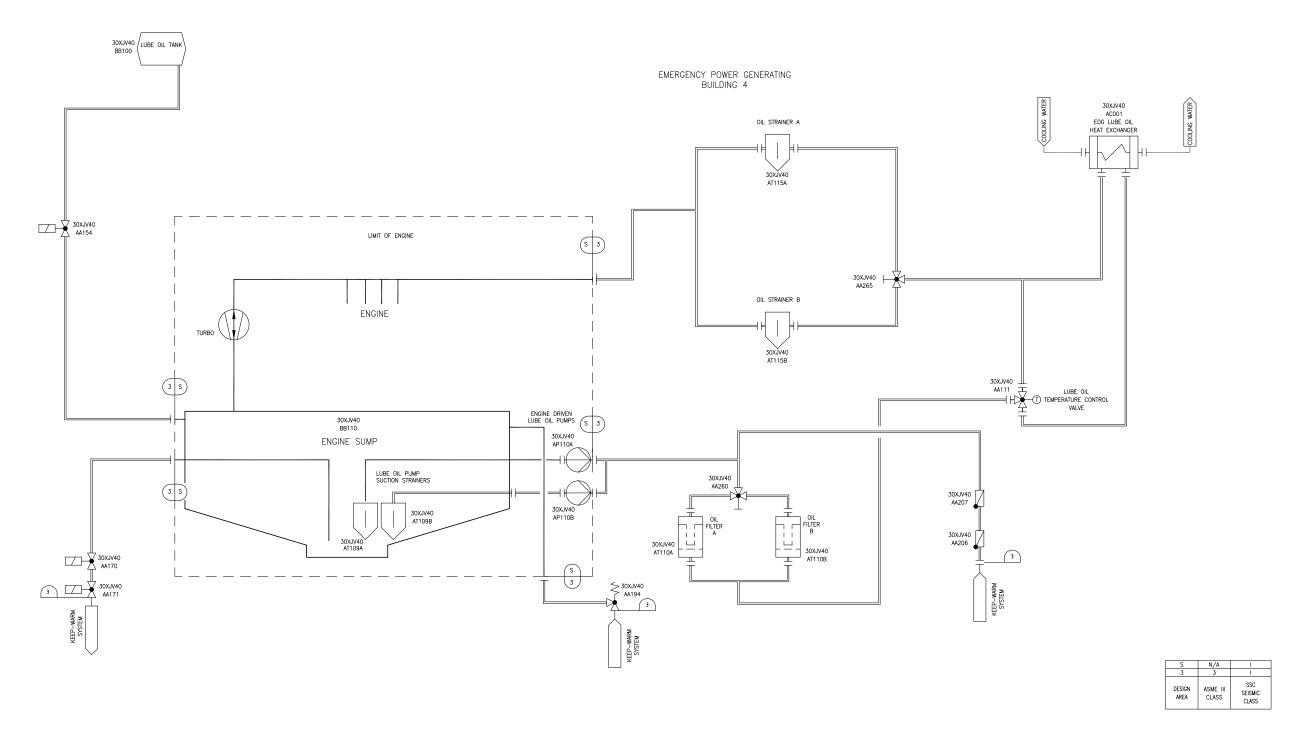

REV 003 XJV04T1




Figure 2.5.4-3—Emergency Diesel Generator Air Intake and Exhaust System Functional Arrangement Sheet 1 of 4

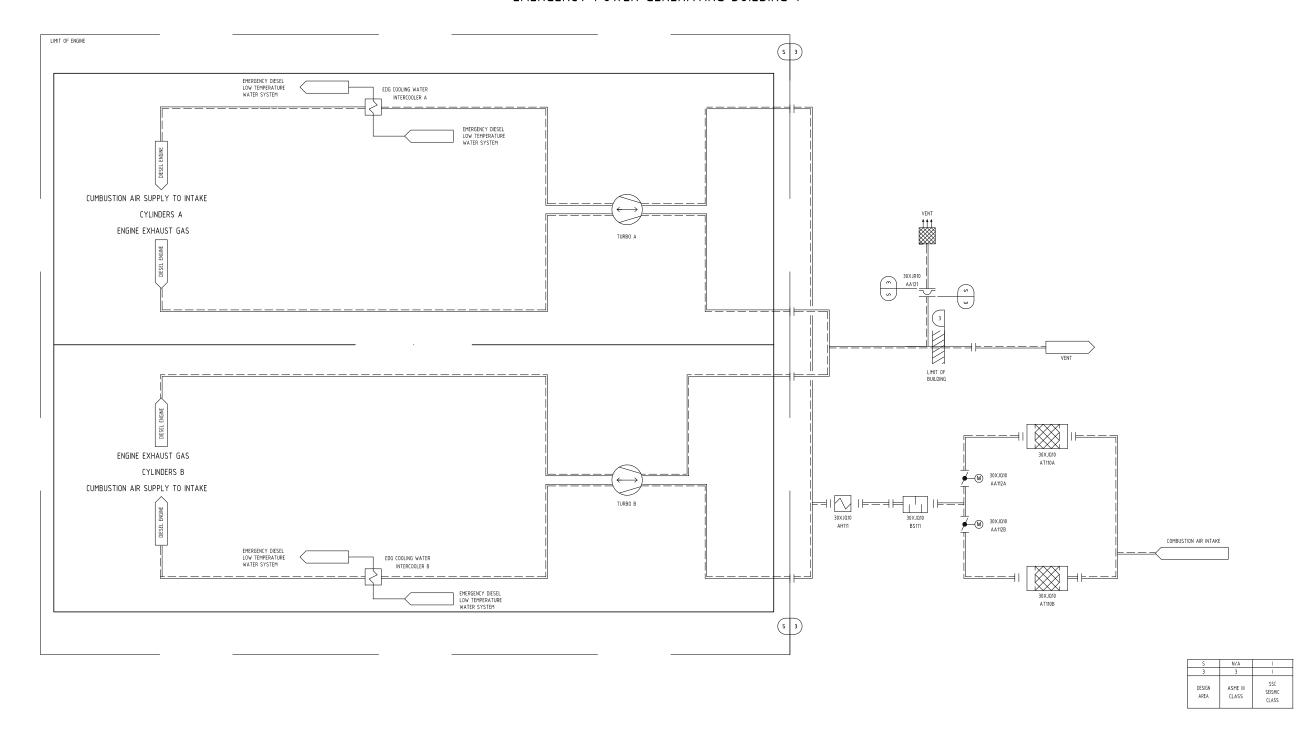

REV 004 XJQ01T1




Figure 2.5.4-3—Emergency Diesel Generator Air Intake and Exhaust System Functional Arrangement Sheet 2 of 4

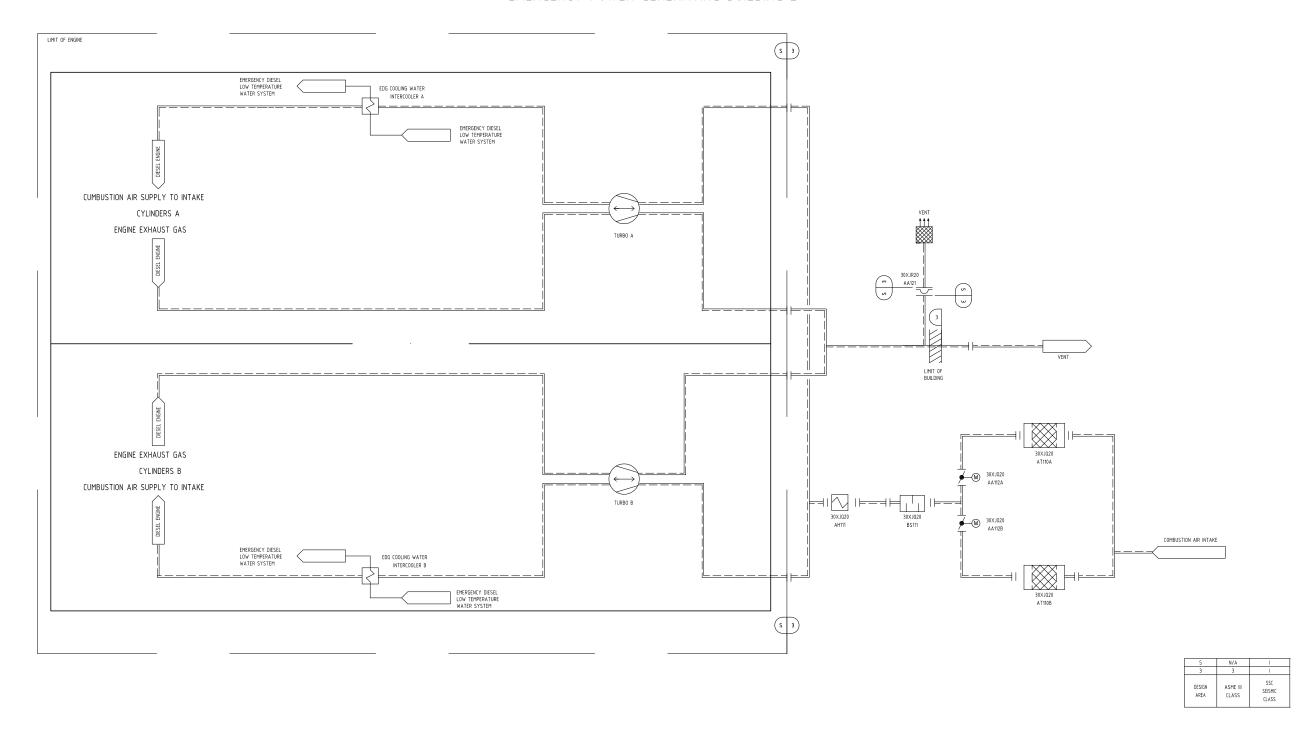

REV 004 XJQ02T1




Figure 2.5.4-3—Emergency Diesel Generator Air Intake and Exhaust System Functional Arrangement Sheet 3 of 4

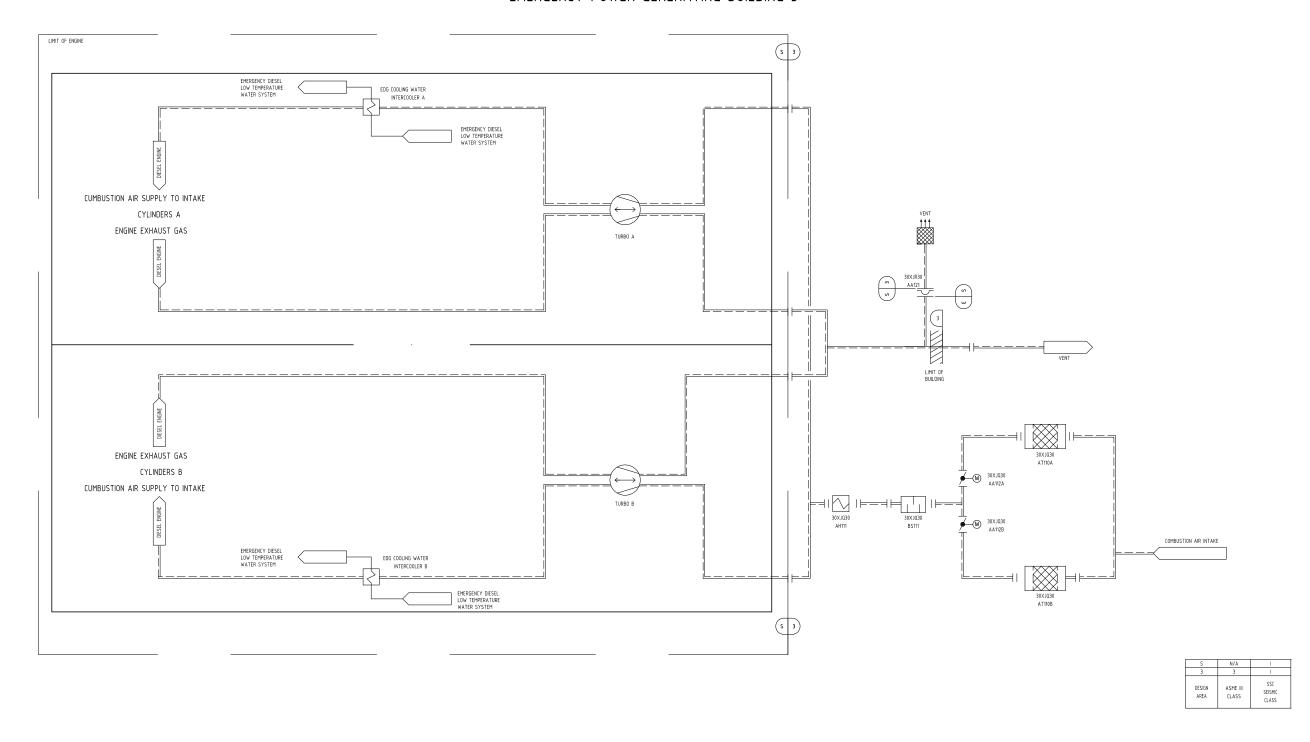

REV 004 XJQ03T1



Figure 2.5.4-3—Emergency Diesel Generator Air Intake and Exhaust System Functional Arrangement Sheet 4 of 4

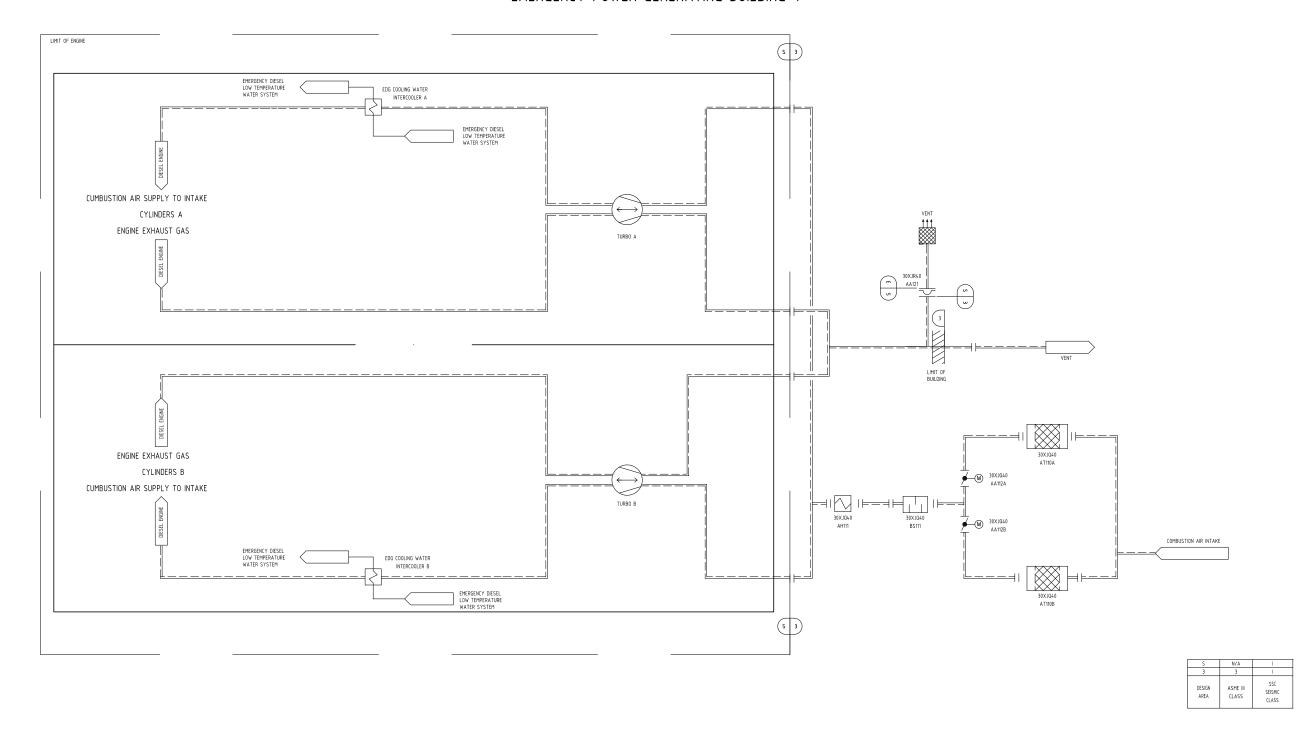

REV 004 XJQ04T1



Figure 2.5.4-4—Emergency Diesel Generator Cooling Water System Functional Arrangement Sheet 1 of 8

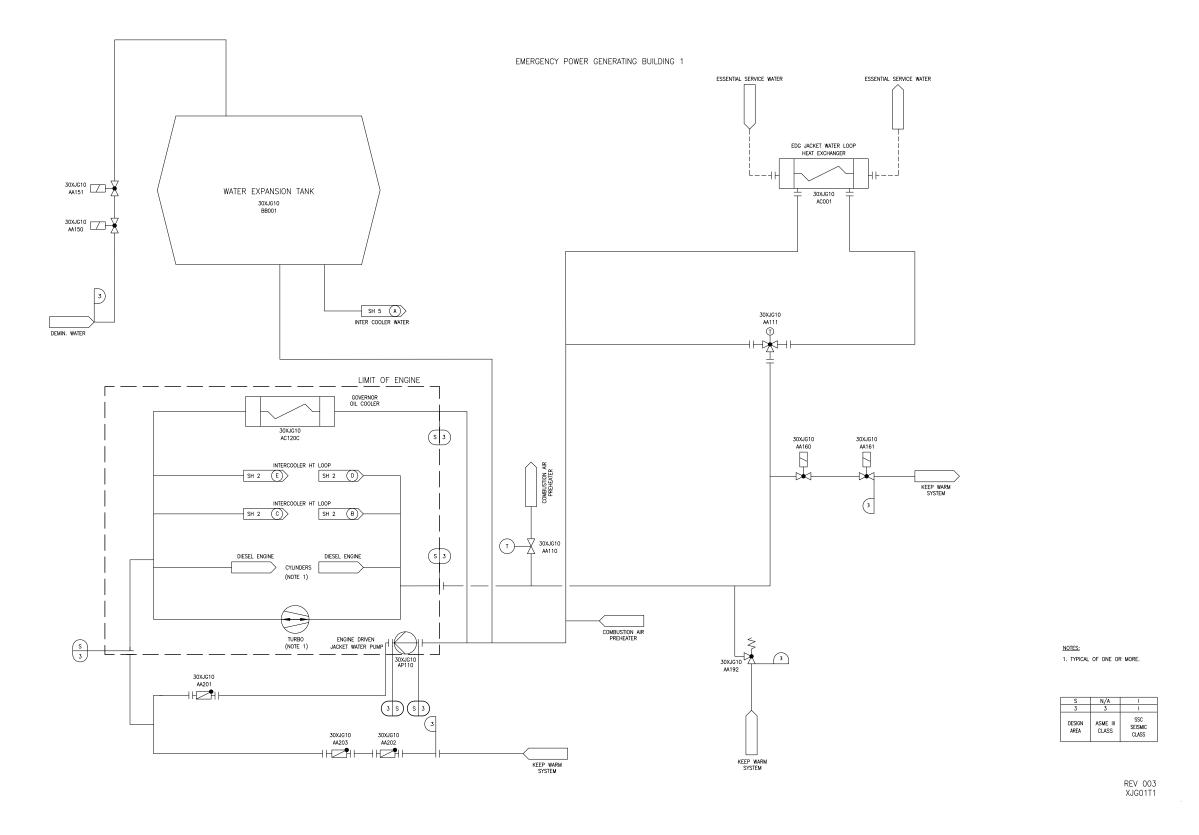




Figure 2.5.4-4—Emergency Diesel Generator Cooling Water System Functional Arrangement Sheet 2 of 8

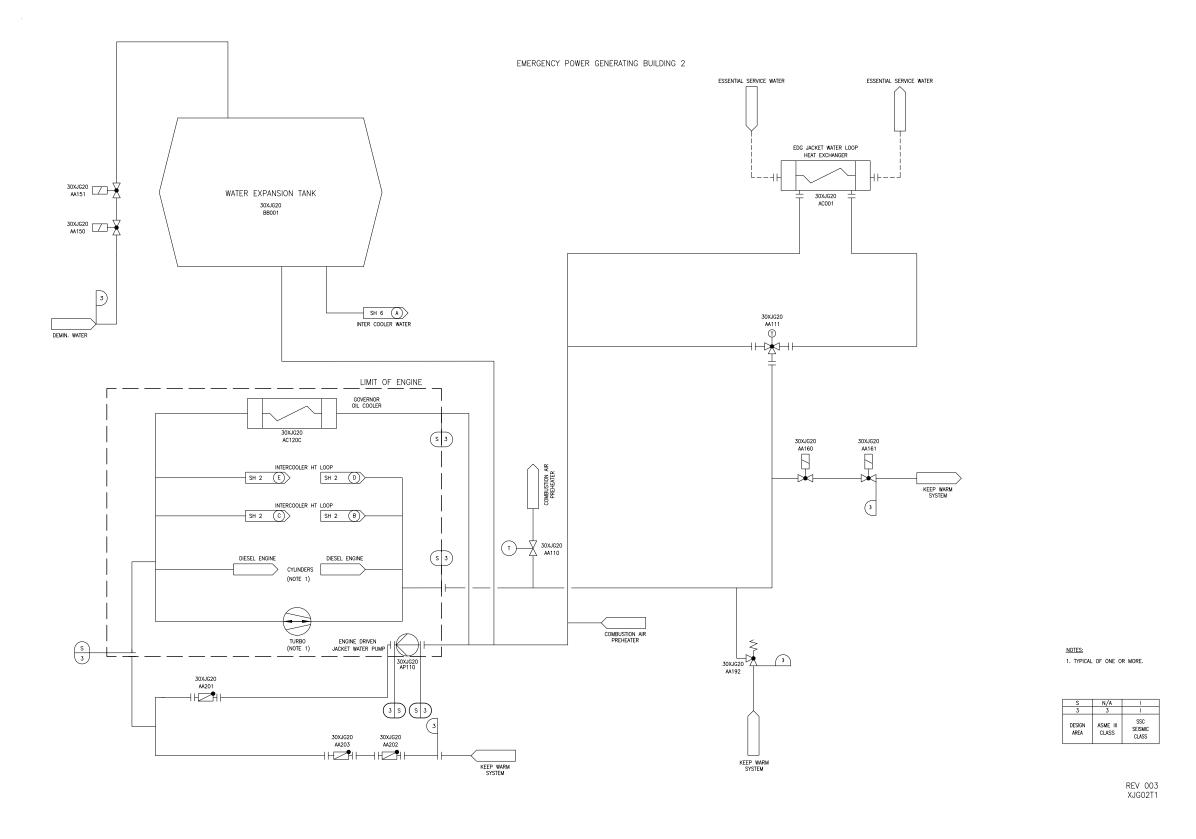




Figure 2.5.4-4—Emergency Diesel Generator Cooling Water System Functional Arrangement Sheet 3 of 8

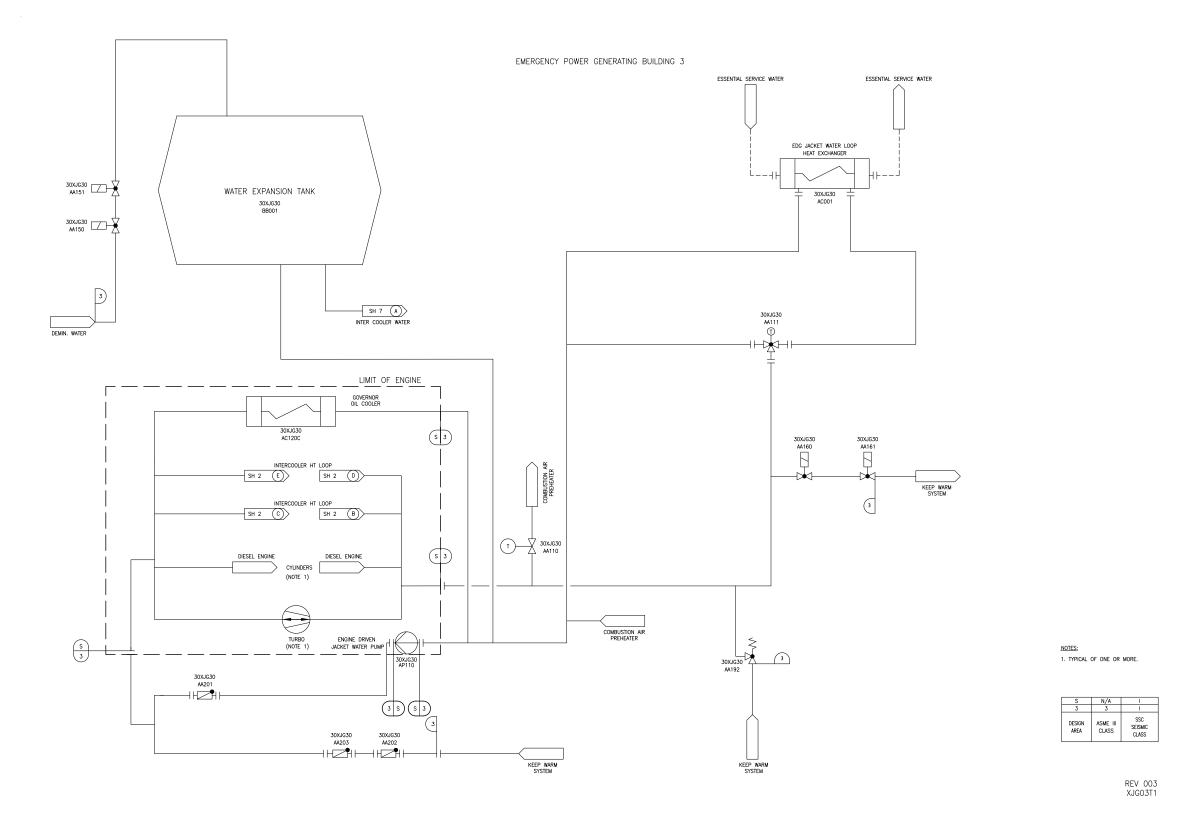




Figure 2.5.4-4—Emergency Diesel Generator Cooling Water System Functional Arrangement Sheet 4 of 8


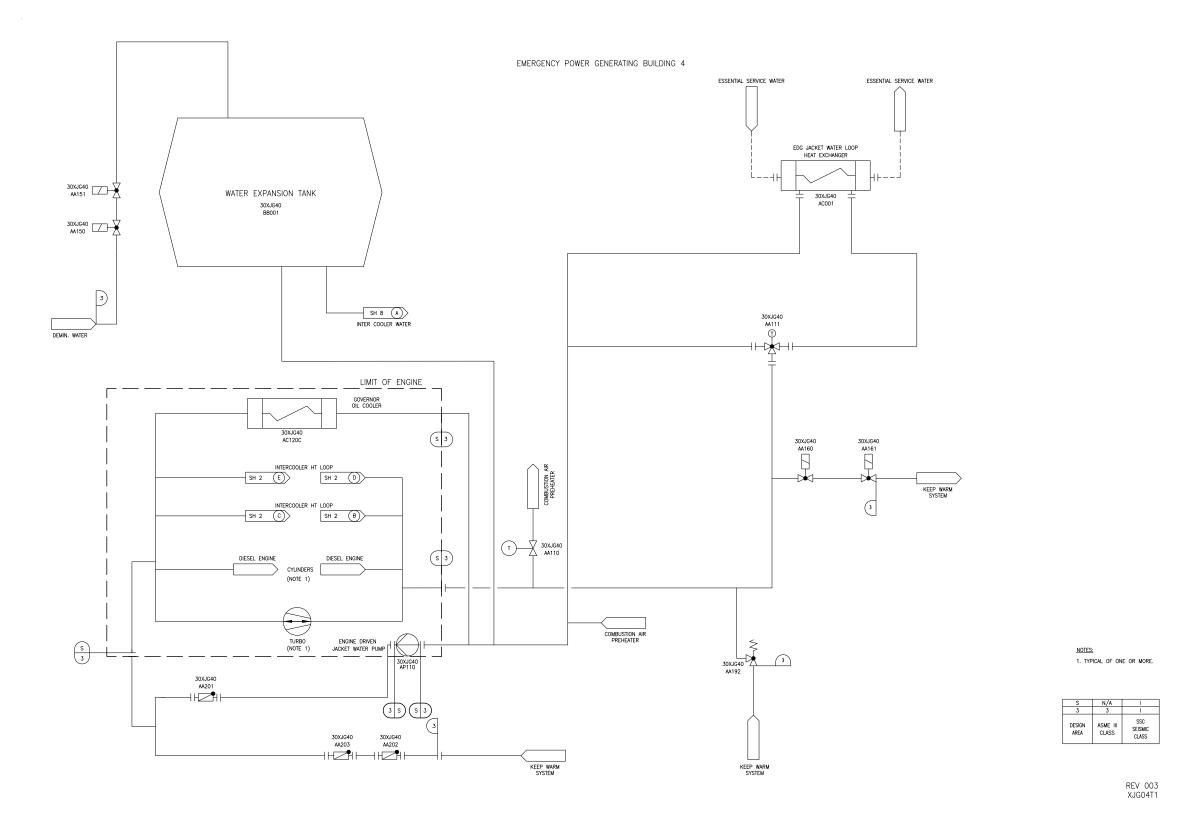




Figure 2.5.4-4—Emergency Diesel Generator Cooling Water System Functional Arrangement Sheet 5 of 8




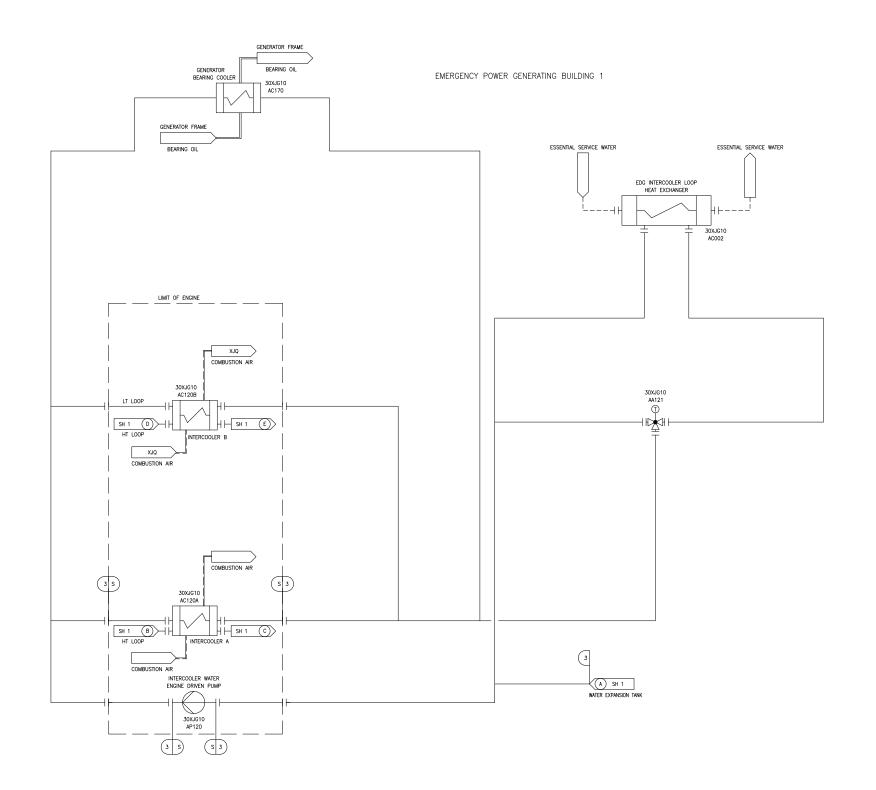

REV 003 XJG05T1




Figure 2.5.4-4—Emergency Diesel Generator Cooling Water System Functional Arrangement Sheet 6 of 8

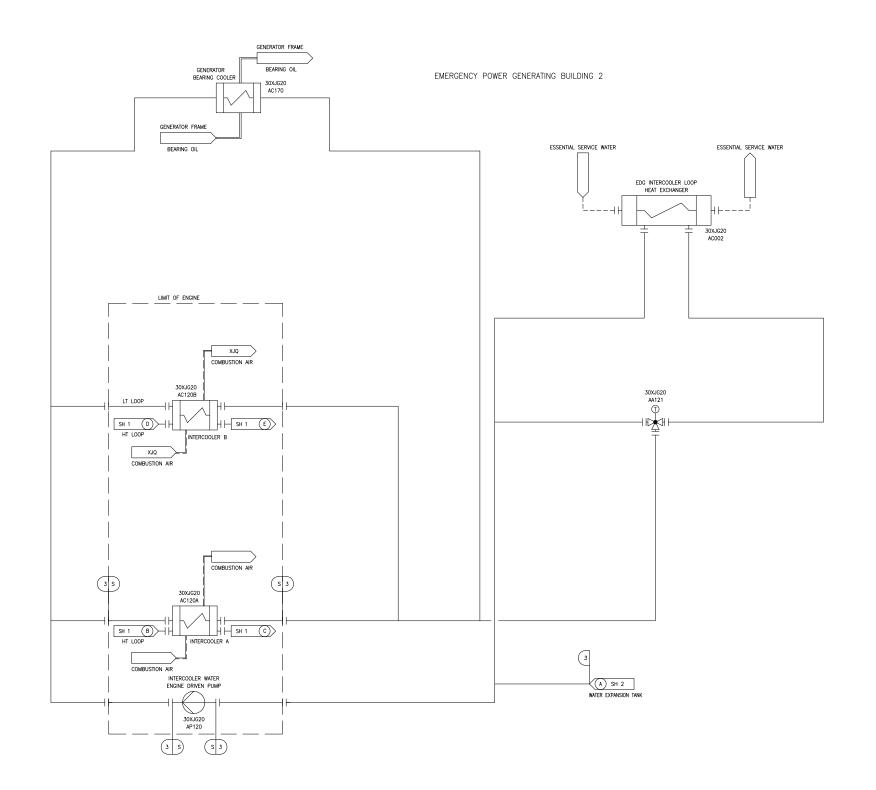

REV 003 XJG06T1



Figure 2.5.4-4—Emergency Diesel Generator Cooling Water System Functional Arrangement Sheet 7 of 8

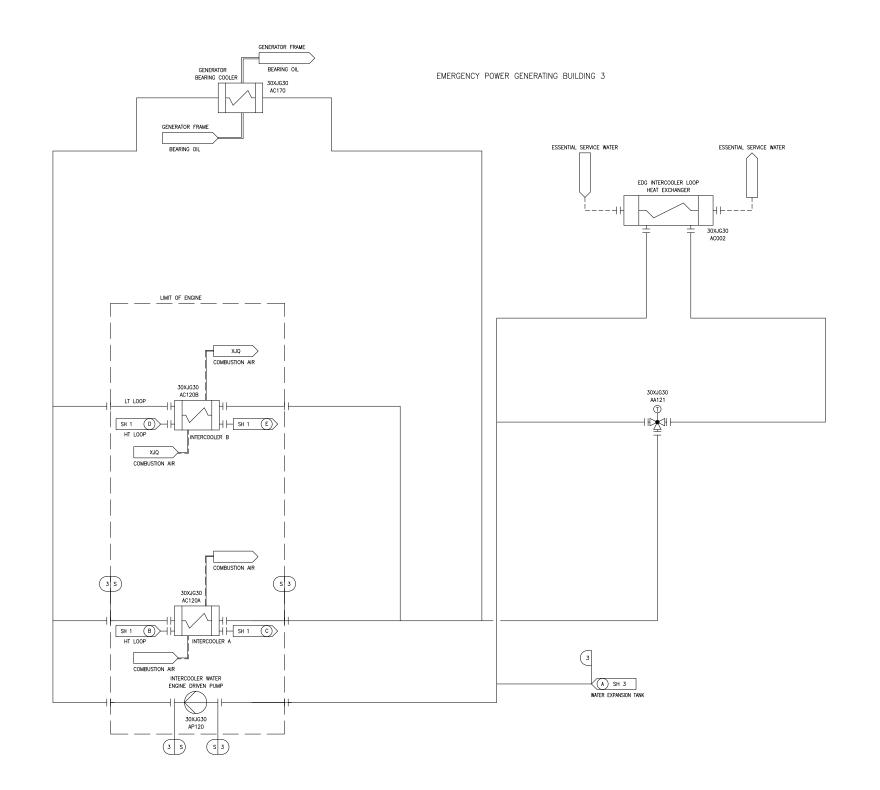

 S
 N/A
 I

 3
 3
 I

 DESIGN
 ASME III
 SSC


 AREA
 CLASS
 SEISMIC

 CLASS
 CLASS

REV 003 XJG07T1



Figure 2.5.4-4—Emergency Diesel Generator Cooling Water System Functional Arrangement Sheet 8 of 8

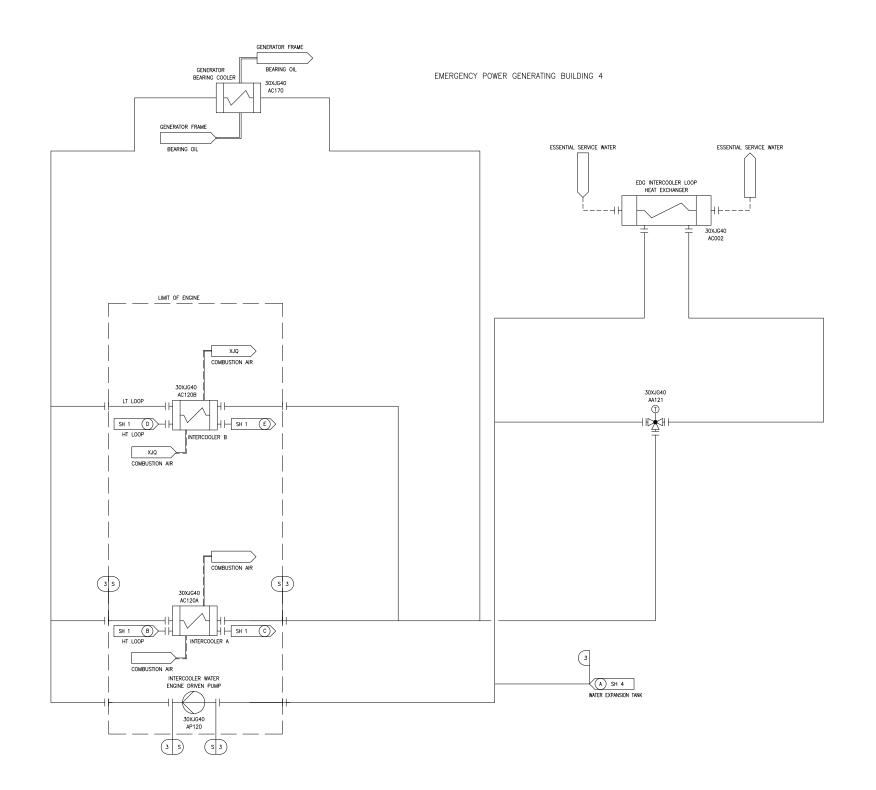

 S
 N/A
 I

 3
 3
 I

 DESIGN
 ASME III
 SSC


 AREA
 CLASS
 SEISMIC


 CLASS
 CLASS

REV 003 XJG08T1



 Figure 2.5.4-5—Emergency Diesel Generator Starting Air System Functional Arrangement Sheet 1 of 4

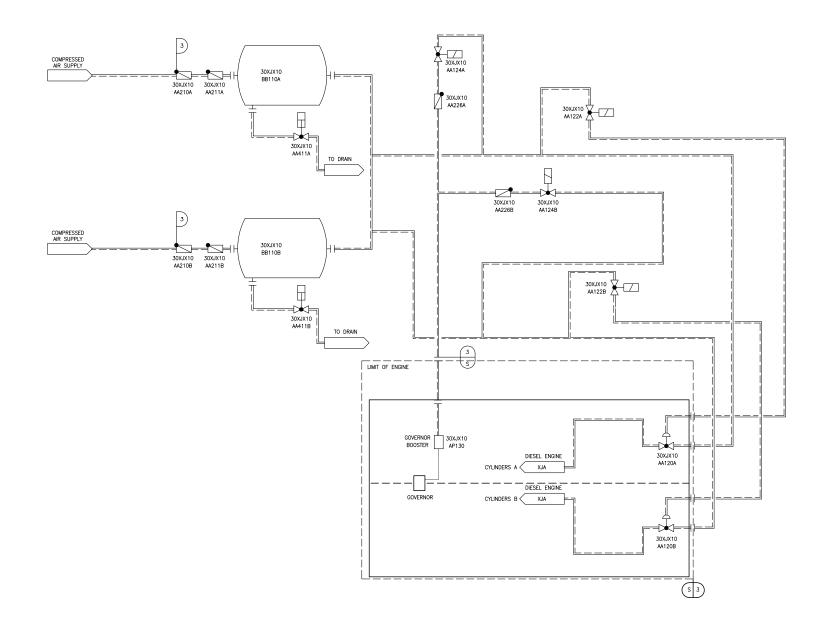





REV 003 XJX01T1



 Figure 2.5.4-5—Emergency Diesel Generator Starting Air System Functional Arrangement Sheet 2 of 4

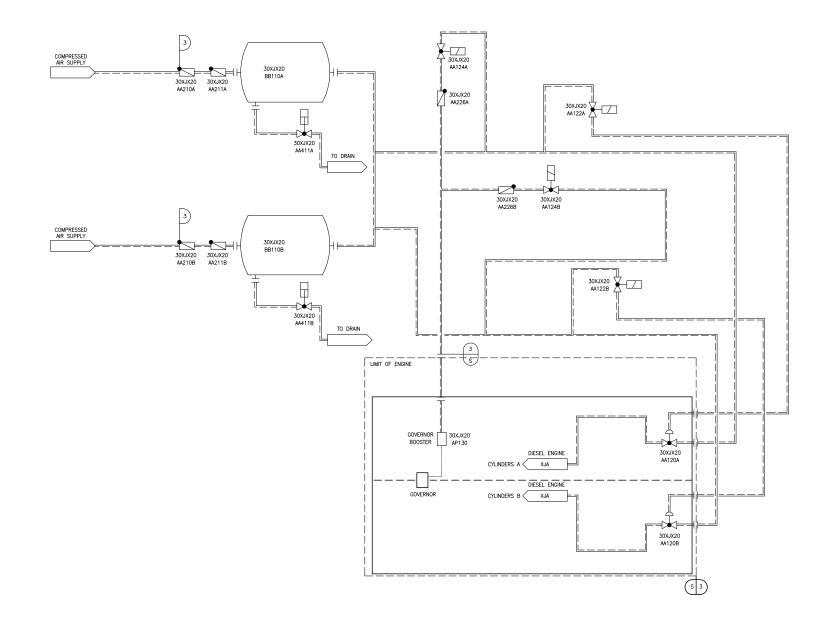





REV 003 XJX02T1



 Figure 2.5.4-5—Emergency Diesel Generator Starting Air System Functional Arrangement Sheet 3 of 4

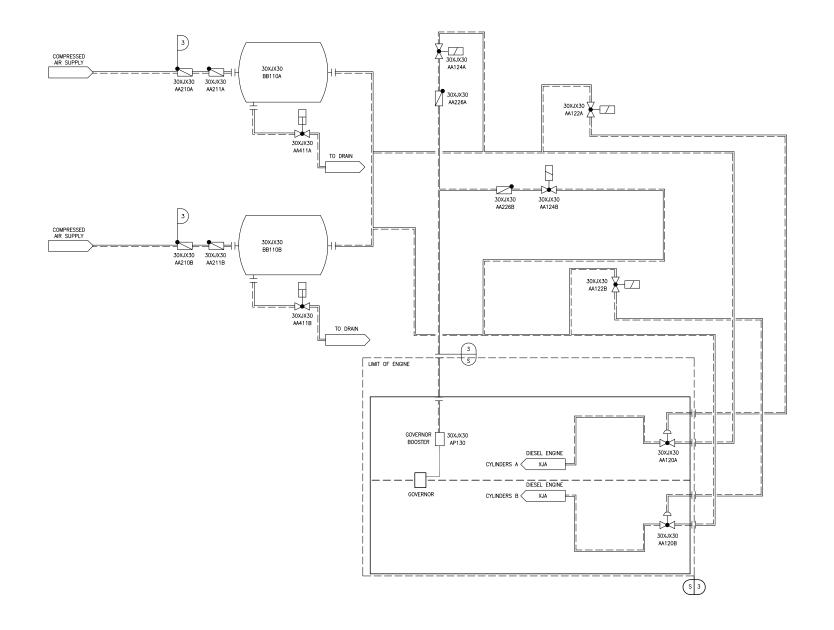





REV 003 XJX03T1



 Figure 2.5.4-5—Emergency Diesel Generator Starting Air System Functional Arrangement Sheet 4 of 4

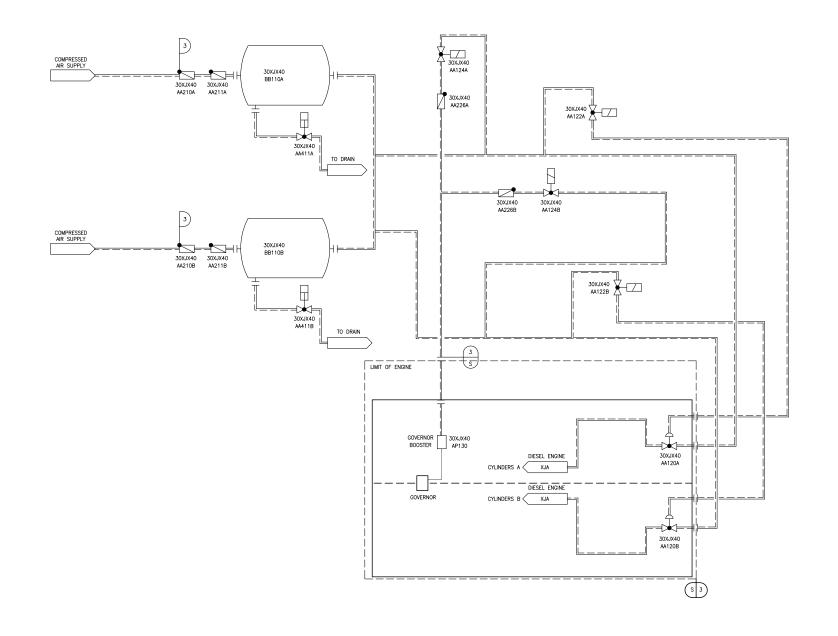



REV 003 XJX04T1