



Figure 2.6.7-1—Electrical Division of Safeguard Building Ventilation System Division 1 and Division 4 Air Intake Functional Arrangement

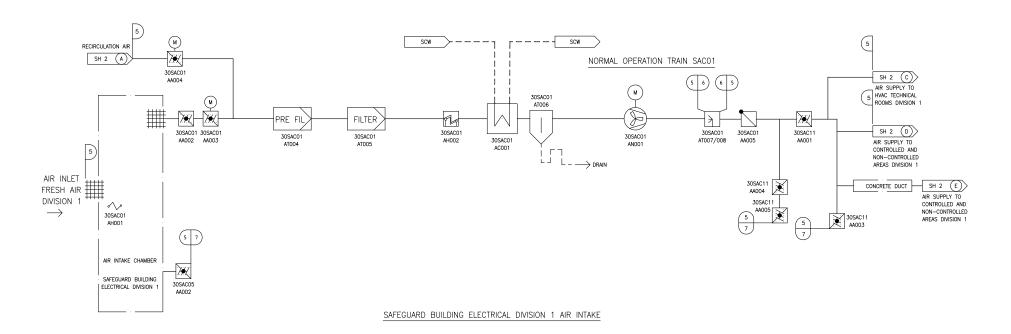

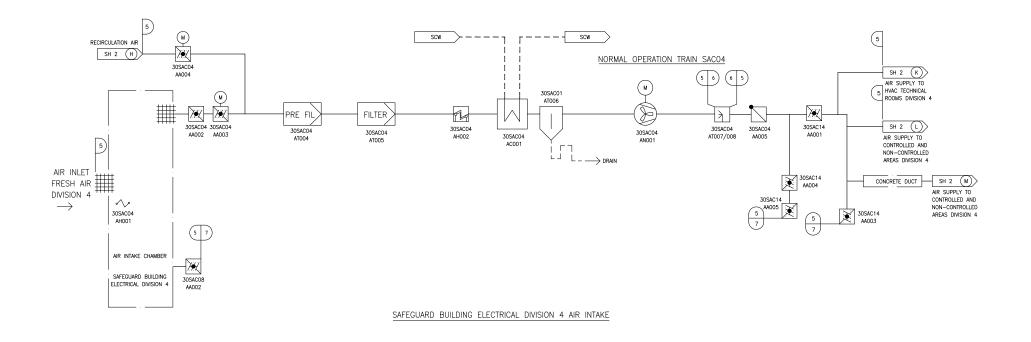



7 AG-1 N/A
6 AG-1 II NS-AQ
5 AG-1 I
DESIGN ASME SEISMIC
AREA CLASS

REV 002 SAC01T1



Figure 2.6.7-2—Electrical Division of Safeguard Building Ventilation System Division 1 and Division 4 Air Supply and Exhaust Functional Arrangement

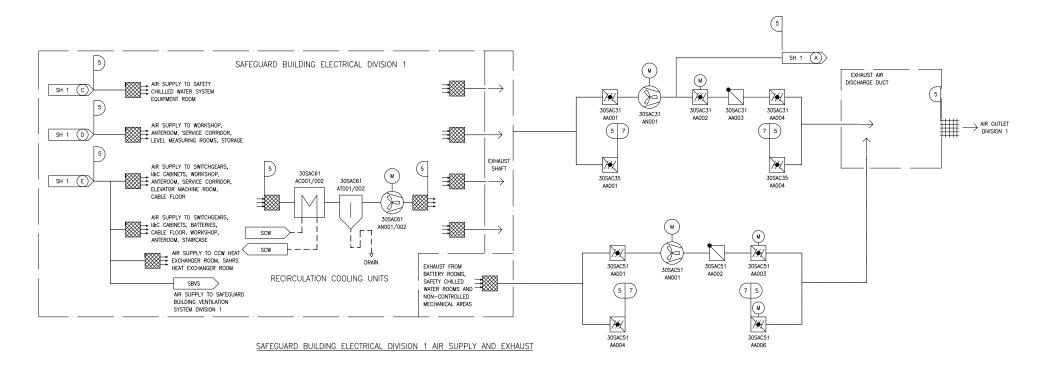

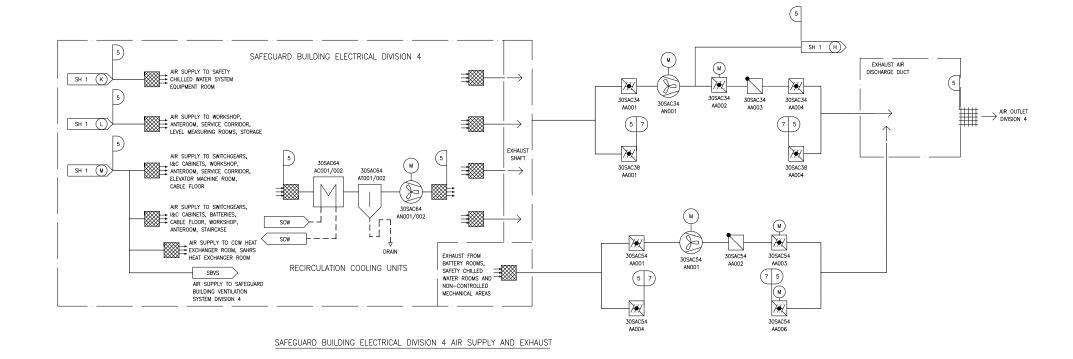



7 AG-1 N/A 5 AG-1 I DESIGN ASME SEISMIC AREA CLASS

> REV 002 SAC02T1



Figure 2.6.7-3—Electrical Division of Safeguard Building Ventilation System Division 2 and Division 3 Air Intake Functional Arrangement

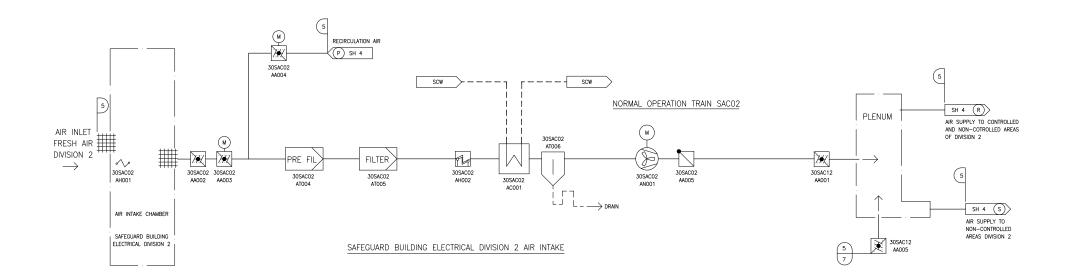

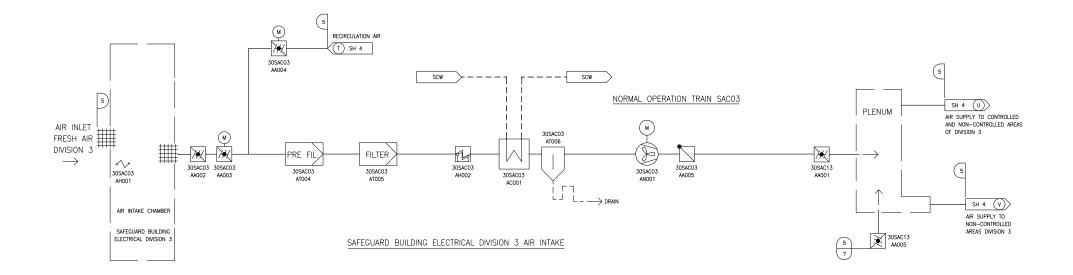



7	AG-1	N/A
5	AG-1	
DESIGN AREA	ASME	SSC SEISMIC CLASS

REV 002 SAC03T1



Figure 2.6.7-4—Electrical Division of Safeguard Building Ventilation System Division 2 and Division 3 Air Supply and Exhaust Functional Arrangement

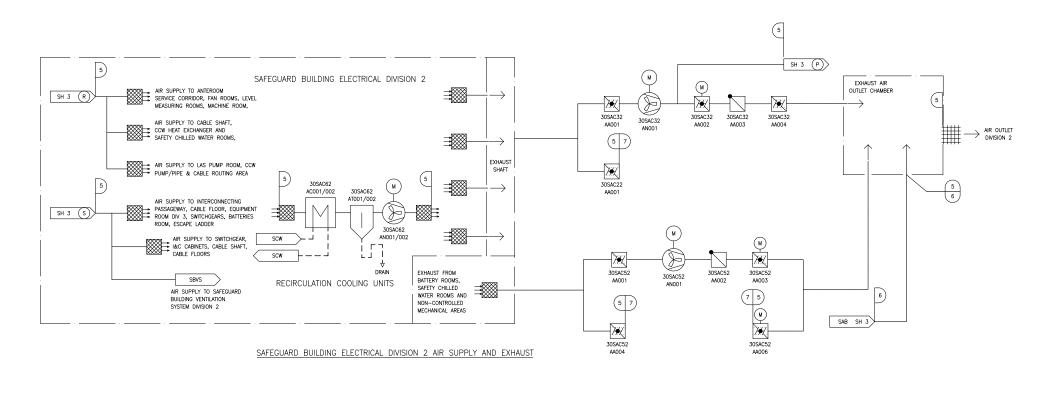

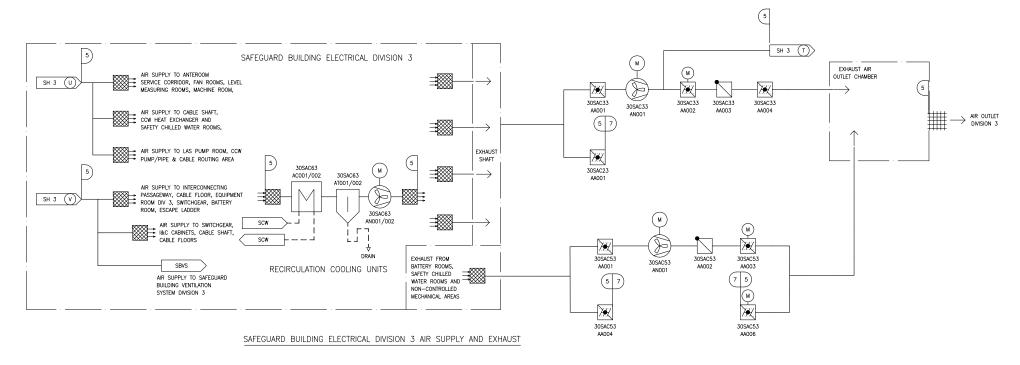

7 AG-1 N/A
6 AG-1 II
5 AG-1 I

DESIGN AREA ASME SEISMIC CLASS

REV 003