


Figure 9.5.8-1—Emergency Diesel Generator Air Intake and Exhaust System

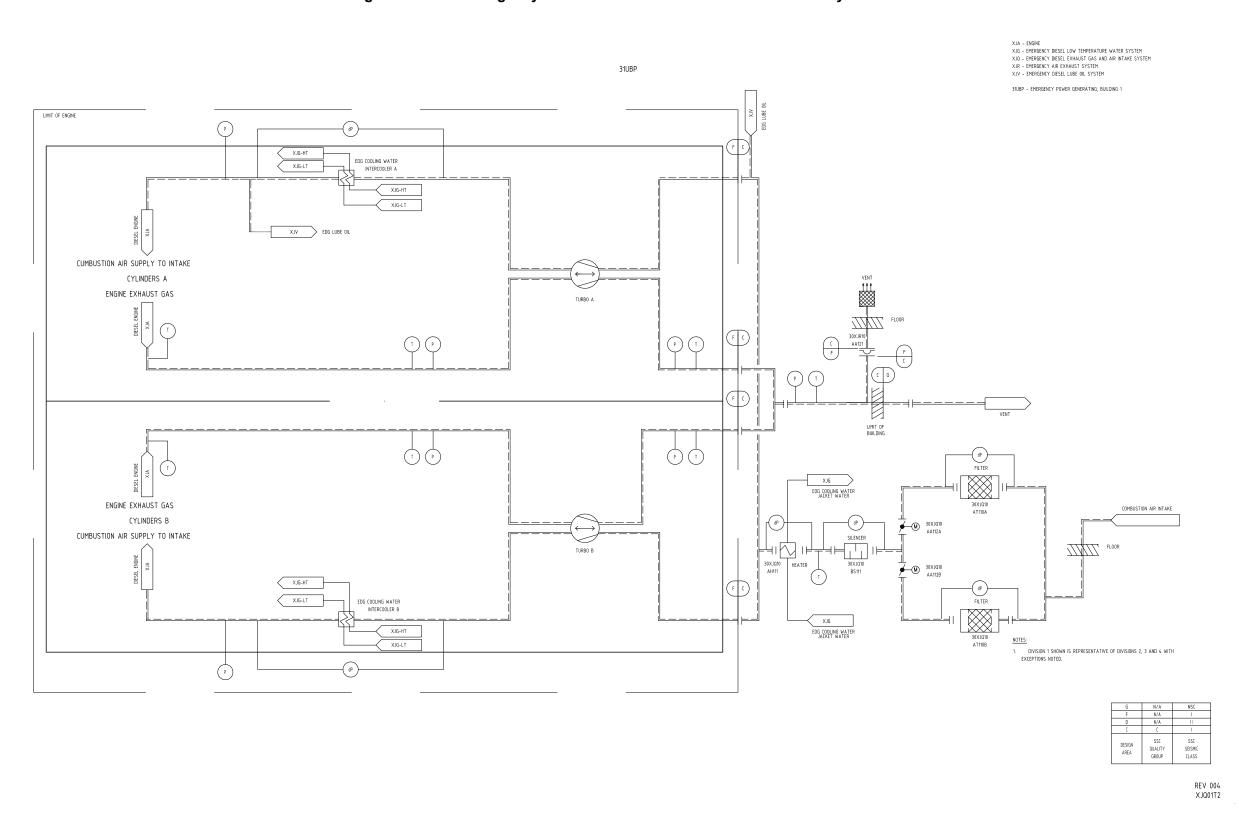

Next File