


Figure 9.5.8-1—Emergency Diesel Generator Air Intake and Exhaust System

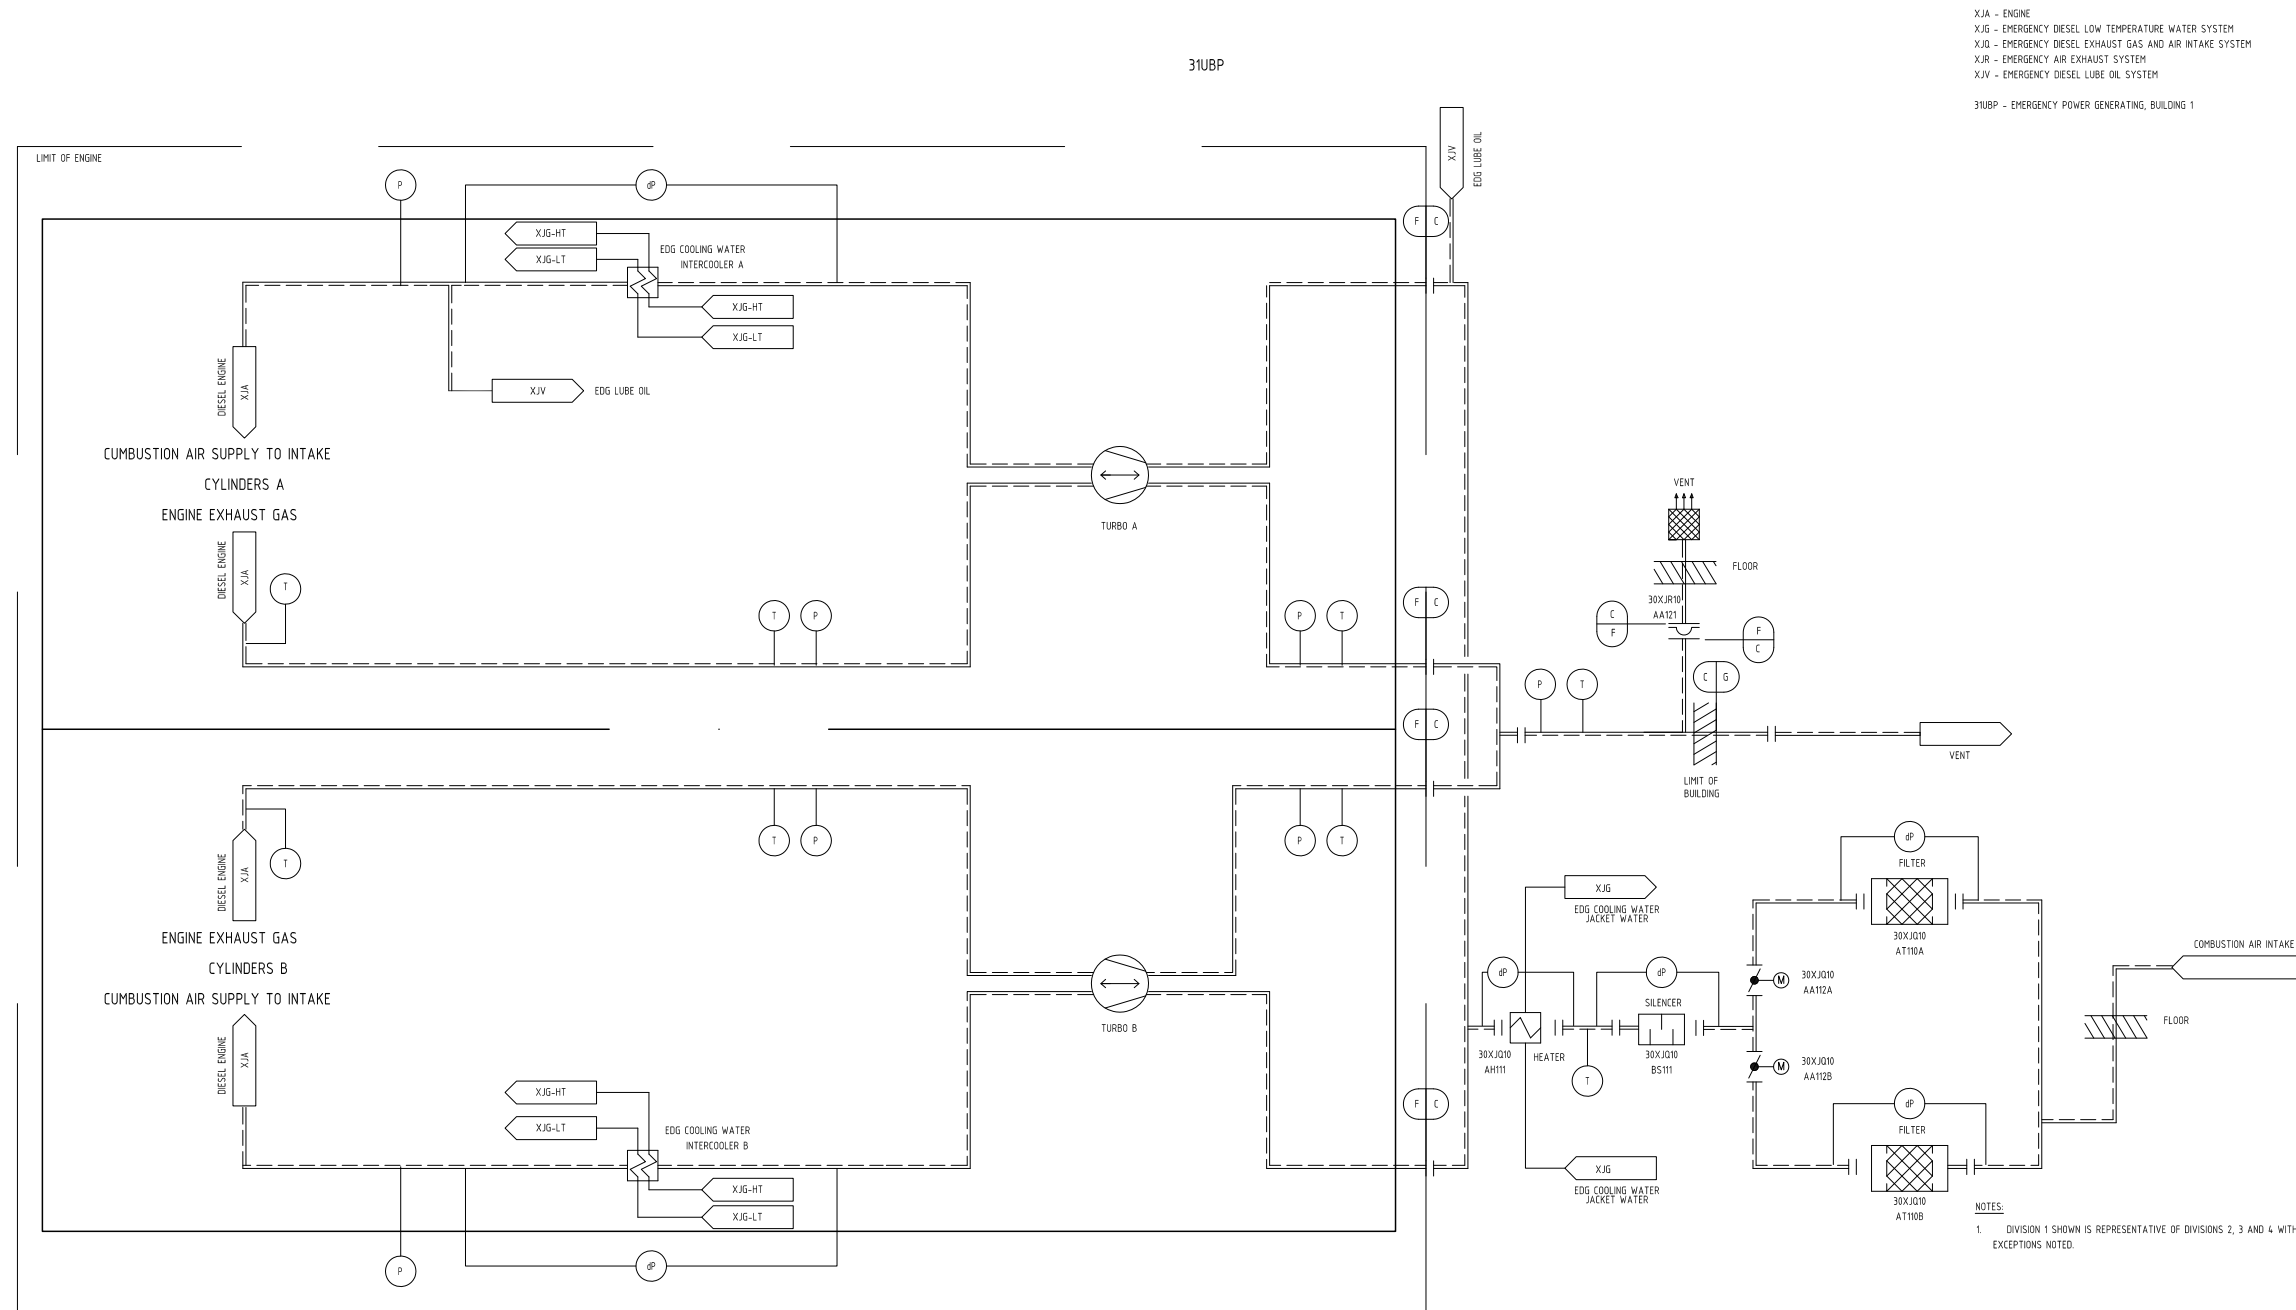

XJA - ENGINE  
 XJG - EMERGENCY DIESEL LOW TEMPERATURE WATER SYSTEM  
 XJD - EMERGENCY DIESEL EXHAUST GAS AND AIR INTAKE SYSTEM  
 XJR - EMERGENCY AIR EXHAUST SYSTEM  
 XJV - EMERGENCY DIESEL LUBE OIL SYSTEM  
 31UBP - EMERGENCY POWER GENERATING, BUILDING 1

G	N/A	NSC
F	N/A	I
D	N/A	II
C	C	I
DESIGN AREA	SSC QUALITY GROUP	SSC SEISMIC CLASS

REV 004  
 XJQ01T2