

NOTES

1- REMOVABLE JUMPER FOR INSERTION OF CUSTOMER'S BLOCKING CONTACT TO STOP ALL FORCED COOLING WHEN CONTACTS OPEN.

2- REMOVABLE JUMPER FOR INSERTION OF CUSTOMER'S INITIATING CONTACT TO START FIRST STAGE OF COOLING WHEN TRANSFORMER IS ENERGIZED.

3- PRESSURE RELIEF DEVICE CONTACTS ARE SHOWN IN NORMAL POSITION. CONTACTS SWITCH WHEN PRESSURE RELIEF DEVICE OPERATES AND REMAINS SWITCHED UNTIL RESET TO THE NORMAL POSITION.

4- LEADS A & C OF PHASE MONITOR MAY HAVE TO BE INTERCHANGED FOR PROPER PHASE SEQUENCE.





NOTES CONT:

5. REMOVABLE JUMPER FOR INSERTION OF CUSTOMER'S BLOCKING CONTACT TO STOP ALL FORCED COOLING WHEN CONTACTS OPEN.

6. REMOVABLE JUMPER FOR INSERTION OF CUSTOMER'S INITIATING CONTACT TO START FIRST STAGE OF COOLING WHEN TRANSFORMER IS ENERGIZED.

7. PRESSURE RELIEF DEVICE CONTACTS ARE SHOWN IN NORMAL POSITION. CONTACTS SWITCH WHEN PRESSURE RELIEF DEVICE OPERATES AND REMAINS SWITCHED UNTIL RESET TO THE NORMAL POSITION.

8. LEADS A & C OF PHASE MONITOR MAY HAVE TO BE INTERCHANGED FOR PROPER PHASE SEQUENCE.

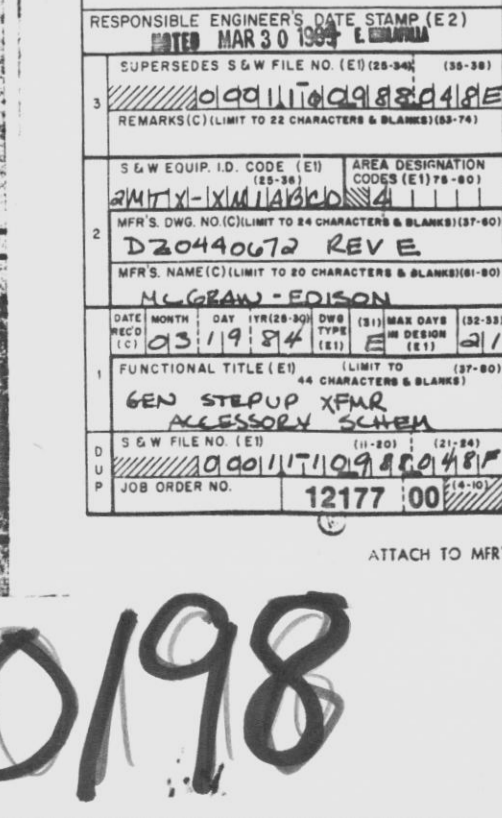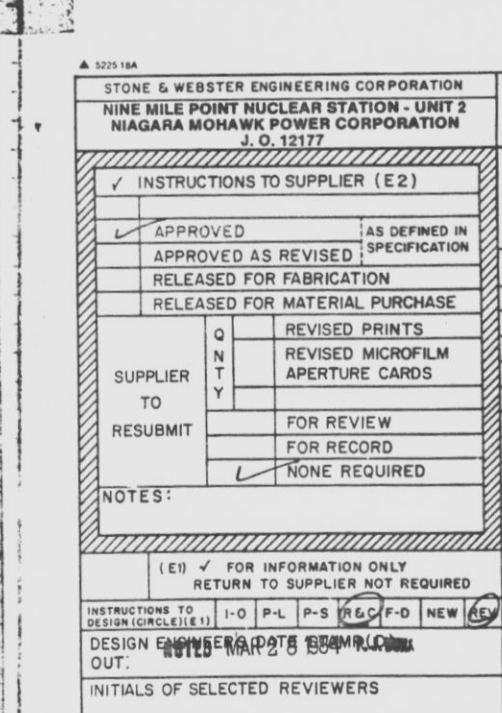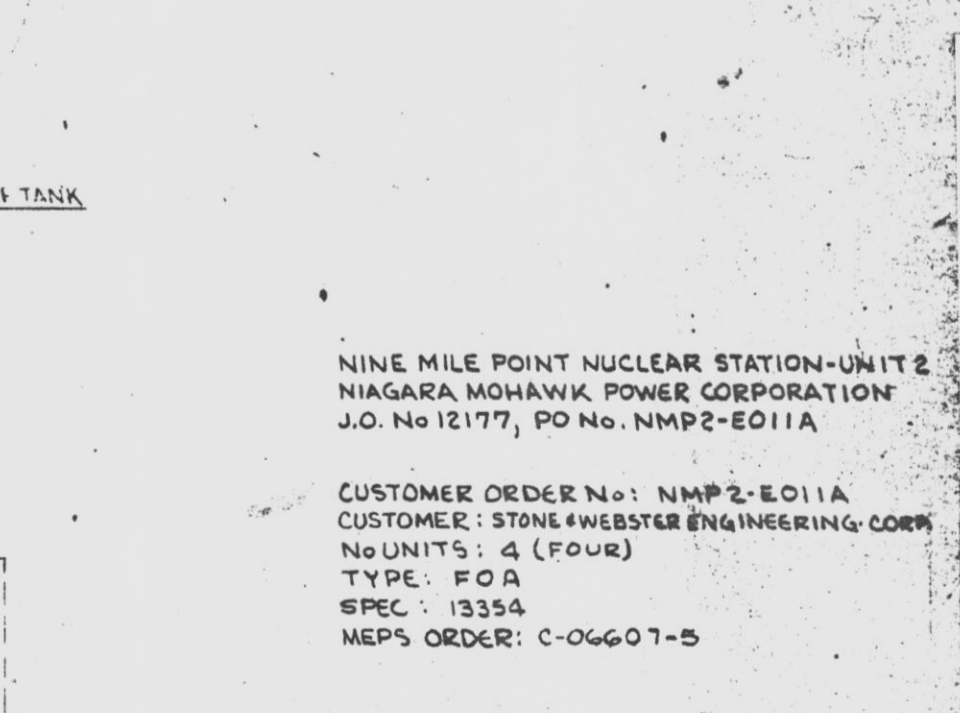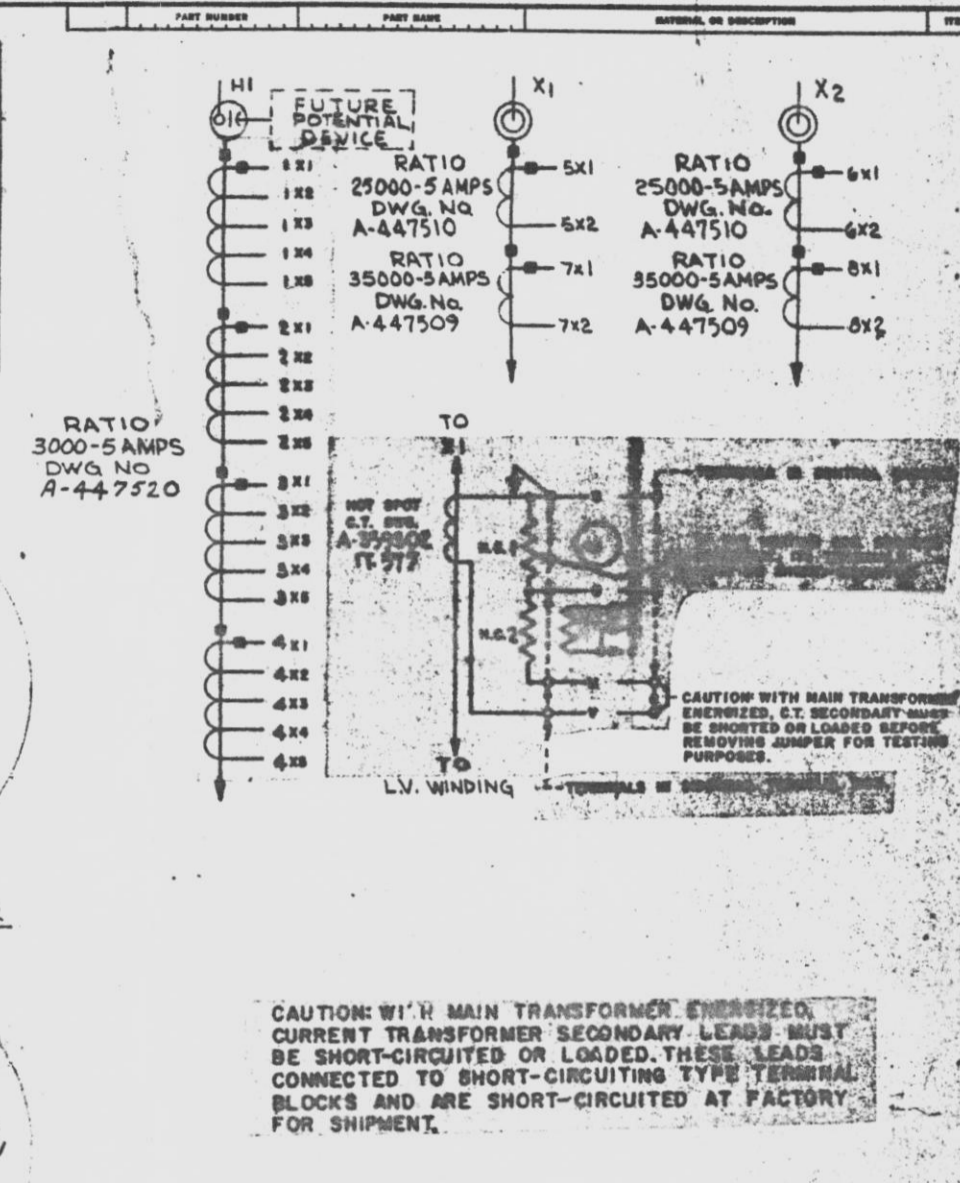

ATTACH TO MRS.

9305740198