

TABLE 3.3.7.4-1 (Continued)

RHR SYSTEM (Continued)

HV-43-1F023A	Control-Recirculation pump A suction valve
HSS-43-191	Control-Transfer switch
HV-51-1F007A	Control-1A RHR pump minimum flow bypass valve
HV-51-1F048A	Control-1A heat exchanger shell side bypass
HV-51-1F015A	Control-1A shutdown cooling injection valve
HV-51-1F016A	Control-Reactor containment spray
HV-51-1F017A	Control-1A RHR loop injection valve
HV-51-1F024A	Control-1A RHR loop test return
HV-51-1F027A	Control-Suppression pool sparger isolation
HV-51-1F047A	Control-1A Heat exchanger shell side inlet
HV-51-1F003A	Control-1A Heat exchanger shell side outlet
HV-51-1F049	Control-RHR Discharge to radwaste outboard isolation
HV-51-125A	Control-1A/1C test return line to suppression pool

RHR SERVICE WATER SYSTEM

HSS-12-015A-2	Control-Spray pond/cooling tower select
HSS-12-015C-2	Control-Spray pond/cooling tower select
HSS-12-016A-2	Control-Spray/bypass select
HSS-12-016C-2	Control-Spray/bypass select

TABLE 3.6.3-1 (Continued)

PART A - PRIMARY CONTAINMENT ISOLATION VALVES

LIMERICK - UNIT 1

3/4 6-30

PENETRATION NUMBER	FUNCTION	INBOARD ISOLATION BARRIER	OUTBOARD ISOLATION BARRIER	MAX. ISOL. TIME, IF APP. (SEC) (26)	ISOL. SIGNAL(S) IF APP. (20)	NOTES	P & ID
237-1	SUPPRESSION POOL CLEANUP PUMP SUCTION	HV52-127	PSV52-127 HV52-128	60 NA 60	B,H 11,22 B,H 11,22	4,11,22 11,22 11,22	52
237-2	SUPPRESSION POOL LEVEL INSTRUMENTATION		HV52-139 SV52-139	45 6		10 10	52
238	RHR RELIEF VALVE DISCHARGE		HV-C-51-1F104B PSV51-106B	NA NA		11 19	51
239	RHR RELIEF VALVE DISCHARGE		HV-C-51-1F103A PSV51-106A	NA NA		11 19	51
241	RCIC VACUUM RELIEF	HV49-1F084	HV49-1F080	40 40	H,KA H,KA	4,11,24 11,24	49