DOCUMENT	REVISION DISTRIBUTION SHEET - UNIT II OFF NORMAL & EMERGENCY OPER.	PROCEDURE
	FILE NUMBER 2-0120035	n
DOCUMENT	REVISION NUMBER /	7)
DOCUMENT	DISTRIBUTED ON 4/4/83	11
DOCUMENT	SENT TO:	
COPY	TRANSMITTER CORV	

COPY	DOCUMENT HOLDER	TRANSMITTAL RETURNED	 DOCUMENT HOLDER	TRANSMITTAL RETURNED
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	MASTER  D. A. Sager  N. G. Roos TSC  Control Room II  Training		UNCONTROLLED COPIES  NRC - Region II Attn: EPPS Branch H. Paduano - GO A. W. Bailey G. Anglehart - CE  G. Regal Ugelow, Al -Backfil Training - Marcy Be  J. Spodick T. Vogan - GO G. J. Boissy  R. R. Jennings H. M. Mercer  R. J. Frechette Resident NRC NRC - IE: HQ Attn: Chief, Nucl Branch C. Burns - CE	ECI

PROCESSED 3Y: Haux 8305030244 830422 PDR ADDCK 05000389 PDR DATE 4/4/83

# FLORIDA POWER & LIGHT COMPANY ST. LUCIE UNIT 2 OFF-NCRMAL OPERATING PROCEDURE 2-0120035 REVISION 1

#### 1.0 TITLE:

PRESSURIZER PRESSURE AND LEVEL-OFF-NORMAL OPERATION

#### 2.0 APPROVAL:

Reviewed	by Facility	Review Gr	roup		March 1,	1983
Approved	by J. H.	Barrow (f	for) Plant	Manager	March 1,	1983
Rev. 1	Reviewed, by	FRG		MARCH	18	19 83
Approved	by A /+1	un	Plant N	Manager A	il!	1920

#### 3.0 PURPOSE:

This procedure provides instructions for operator action in the event of malfunction of Pressurizer pressure and level control systems, or pressure transient caused by inadvertant operation of the auxiliary spray valves.

#### 4.0 SYMPTOMS:

- 4.1 Pressurizer High-Low Pressure alarm, Channel X or Y.
- 4.2 Pressurizer High-Low Level alarm, Channels X or Y.
- 4.3 Pressurizer Low-Low Level alarm, Channels X or Y.
- 4.4 Pressurizer Proportional Heaters Low Level trip.
- 4.5 Pressurizer Back-up Heaters Low Level Trip Control Switch Isolated.
- 4.6 Safety or Relief Valve(s) open alarm.

FOR INFORMATION ONLY

This document is not controlled. Before use, verify information with a controlled document.

#### 5.0 INSTRUCTIONS:

- 5.1 Immediate Automatic Actions:
  - 5.1.1 Abnormal Pressurizer Pressure Condition.
    - 1. Pressurizer safety valves open at 2500 psia.
    - High pressure reactor trip and power operated reliefs open at 2375 psia.
    - 3. High pressure alarm actuates at 2340 psia.
    - Proportional heaters cycle from minimum output at 25 psi above setpoint, to maximum output at 25 psi below setpoint.
    - Spray valves cycle from full closed at 25 psi above setpoint, to full open 25 psi below setpoint.
    - Backup heaters energize at < 2200 psia and de-energize at > 2200 psia.
    - 7. Low pressure alarm actuates at 2100 psia.
    - TM/LP reactor trip initiates at 1887 psia minimum pressure.
    - 9. SIAS initiates at 1708 psia.
  - 5.1.2 Abnormal Pressurizer Level Condition.
    - 1. All Pressurizer heaters deenergize at 26.9% indicated level, and respective Pressurizer Heater Transformer Feeder Breaker opens.
    - Low level alarm actuates and signal to start the back-up Charging Pump is received at -5% below RRS setpoint.
      - NOTE: Only one back-up Charging Pump is in the level control system.
    - 3. The back-up Charging Pump receives a signal to start at -3% below RRS setpoint, decreasing.
    - 4. The back-up Charging Pump receives a signal to stop at -1% below RRS setpoint, increasing, and minimum letdown (29 gpm).



#### 5.0 INSTRUCTIONS: (Cont.)

#### 5.1 (Cont.)

#### 5.1.1 (Cont.)

- 5. All back-up heaters energize and a back-up stop signal to the back-up Charging Pump is received at + 4.0% above RRS setpoint.
- 6. Maximum letdown is 138 gpm at 9% above RRS setpoint.
- 7. High level alarm actuates at 10% above RRS setpoint.

#### 5.2 Immediate Operator Actions:

#### 5.2.1 Abnormal Pressurizer Pressure.

- Ensure Pressurizer spray, and Proportional and Backup heaters are operating properly in automatic. If not, shift spray valve controller to MANUAL, and energize or deenergize heaters, whichever is applicable.
- Ensure power operated relief valves are closed. If open, isolate by closing V-1476 and/or V-1477 (power operated relief isolation valves). Refer to OP #2-0120036, "Pressurizer Relief/Safety Valve-Off-Normal Operation".
- 3. Ensure SE-02-03 and SE-02-04 (Auxiliary spray valves) are closed. If open, attempt to close using key switch. If still open, stop all Charging Pumps and isolate letdown. Refer to OP #2-0210030, "Charging and Letdown Off-Normal Operation".
- Ensure pressure normaly is not caused by a large rate of change of T<sub>ave</sub>.

CAUTION: During blackout conditions with the Diesel Generators supplying power, the control bistables for the Back-up heaters are not energized, and must be bypassed.

Therefore in a blackout, the control switches on RTGB-203 must be reset and the Key Switch selected to PRESSURE OVERRIDE to regain heater control. Note, however, this will only energize Bl and B4 banks of Backup heaters.

#### 5.0 INSTRUCTIONS: (Cont.)

#### 5.2 (Cont.)

- 5.2.2 Abnormal Pressurizer Level.
  - Ensure selected RRS channel is operating properly. If not, shift to operable channel.
  - Ensure the backup Charging Pump starts and letdown flow is decreasing, or the backup Charging Pump stops and letdown flow is increasing, whichever is applicable.
  - Ensure level anomaly is not caused by a large rate of change in T<sub>ave</sub>.

#### 5.3 Subsequent Actions.

- 5.3.1 Check that Pressurizer Safety Valves are not leaking or have actuated by observing downstream header temperature indication and Quench Tank indications.
- 5.3.2 Ensure AOV-2515, AOV-2516, and AOV-2522 (Letdown Isol) are open.
- 5.3.3 Ensure SE-02-01 and SE-02-02 (Charging Isol) are open.
- 5.3.4 Ensure LCV-2110P and LCV-2110Q (Pressurizer Level Control) are operating properly.
- 5.3.5 Ensure PCV-2201P and PCV-2201Q (Letdown Pressure Control) are operating properly.
- 5.3.6 Manually start the third Charging Pump, if conditions require.
- 5.3.7 Ensure Letdown Valve Limiter Bypass switch and Pressurizer Level Bypass control switches are in the NORMAL positions.

#### 5.0 INSTRUCTIONS: (Cont.)

#### 5.3 (Cont.)

- 5.3.8 Compare letdown flow, charging flow, charging pump header pressure, and VCT level for indications of leaks or lifting relief valves in the CVCS system. Refer to OP #2-0120035, "Charging and Letdown-Off-Normal Operation".
- 5.3.9 Ensure that Power Operated Relief Valve (V-1474 and 1475) hand switches are in the proper mode for existing plant conditions.
  - NOTE: (1) Switch in NORMAL RANGE:

RCS Temperature > 320°F RCS Pressure > 490 psia

(2) Switch in LTOP:

RCS Temperature < 320°F RCS Pressure < 460° psia.

- 5.3.10 If Pressurizer level decrease cannot be immediately explained, refer to OP #2-0120035, "Excessive Reactor Coolant System Leakage".
- 5.3.11 With < 27% level on Channel X, the 'A' Pressurizer Heater Transformer feeder breaker trips and the 'B' side 480v breakers trip. With < 27% level on Channel Y, the 'B' Pressurizer Tranformer feeder breaker trips and the 'A' side 480v breakers trip. The key operated override switch placed in the LEVEL OVERRIDE position will reset the 480v breakers.
  - NOTE: (1) With Channel 'X' selected, and if Channel 'X' fails low, all heaters trip. The operator must then select Channel Y and LEVEL OVERRIDE to get power to the 'B' side heaters. (i.e., Pl. B4, B5, and B6).
    - (2) With Channel 'X' selected, and if Channel 'Y' fails low, all heaters trip. The operator must then select LEVEL OVERRIDE to get power to the 'A' side heaters. (i.e., Pl, Bl, B2, B3).

9

#### 6.0 REFERENCES:

- 6.1 St. Lucie Unit 2 FSAR.
- 6.2 C-E Setpoint Guidelines.
- 6.3 F.P.L. Training Lesson Outline #91.

#### 7.0 RECORDS REQUIRED:

- 7.1 Normal log entries.
- 7.2 Applicable chart recorders.
- 7.3 If pressure transient was caused by inadvertant auxiliary spray valva actuation, document transient per AP # 2-0010134, "Component Cyclic and Transient Limits Records".

DOCUM DOCUM DOCUM	MENT REVISION DISTRIBUTED ON MENT DISTRIBUTED ON MENT SENT TO:	2-03	0 - 5- DAT	WATER CANAL	
COPY	DOCUMENT HOLDER	TRANSMITTAL RETURNED		DOCUMENT HOLDER	TRANSMITTAL RETURNED
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	MASTER  D. A. Sager  N. G. Roos TSC  Control Room II  Training			UNCONTROLLED COPIES  NRC - Region II Attn: EPPS Branch H. Paduano - GO A. W. Bailey G. Anglehart - CZ  G. Regal Ugelow, Al -Backfi Training - Larry Bai  J. Spodick T. Vogan - GO G. J. Boissy  R. R. Jennings H. M. Mercer A. Pell R. J. Frechette Resident NRC NRC - IE: HO Attn: Chief, Nucl Branch C. Burns - CE	er


PROCESSED BY: Faile DATE 4-5-83

9

# FLORIDA POWER & LIGHT COMPANY ST. LUCIE UNIT 2 OFF-NORMAL OPERATING PROCEDURE NO. 2-0360030 REVISION 0

1.	TITLE: Operational	Requirements for Eme	rgency Cooling W	later Canal
2.	PREPARED BY: RR	JENNINAS		3/25 19 83
3.	SUBCOMMITTEE REVIEW B	Y: JP Brannin	FP&L PR	3/25 19 83
4.	REVIEWED BY FACILITY			3/25 1983
5.	APPROVED BY:	-Barri A PI	ant Manager	4/4 1983

## FLORIDA POWER & LIGHT COMPANY ST. LUCIE UNIT 2 OFF-NORMAL OPERATING PROCEDURE NO. 2-0360030 REVISION 0

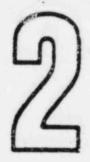

#### 1.0 TITLE:

Operational Requirements for the Emergency Cooling Water Canal

#### 2.0 REVIEW AND APPROVAL:

Reviewed by Facility Review Group_		3/25 19 83
Approved by globania	1 Prant Manager_	4/4 19 80
Revision Reviewed by FRG		19
Approved by	Plant Manager	19

#### 3.0 PURPOSE:

The Emergency Cooling Water System consists of a canal connecting Big Mud Creek to the intake in front of the circulating water intake structure. This secondary source will be used only in the event that the primary source from the Atlantic Ocean becomes inoperable. For normal operation the barrier wall across the Ultimate Heat Sink (UHS) separates the intake canal from Big Mud Creek.

An operable UHS ensures that sufficient cooling capacity is available to either (1) provide normal cooldown of the facility, or (2) to mitigate the effects of accident conditions within acceptable limits.

#### 4.0 SYMPTOMS:

- 4.1 Intake structure low water level (Annunciators LA-1 and LB-1)
- 4.2 Intake local level indication less than -9 ft.
- 4.3 Intake water temperature high (TR-21-2)

FOR INFORMATICH ONLY
This document is not cont olled. Before use,
verify information with a controlled document.

### ST. LUCIE UNIT 2 OFF-NORMAL OPERATING PROCEDURE NO. 2-0360030, REVISION O OPERATIONAL REQUIREMENTS FOR EMERGENCY COOLING WATER CANAL

#### 5.0 INSTRUCTIONS:

- 5.1 The Operations Supervisor shall determine the need to operate the UHS.
- 5.2 The Operations Supervisor shall notify the Duty Call Supervisor.
- 5.3 The turbine generator and associated equipment will be shut down per OP 2-0030125.
- 5.4 The Circulating Water System shall be shut down per OP 2-0620020.
- 5.5 Implement the Emergency Plan as necessary in accordance with EPIP 3100021E, "Duties of the Emergency Coordinator."
- 5.6 The reactor shall be shut down and placed in mode 3.
  - NOTE: The reactor shall be in mode 3 within one hour of
    (1) reaching an intake water level of less than -10.5 ft., or
    (2) an average intake temperature of greater than or equal to
    96°F.
- 5.7 Within 12 hours after placing the reactor in mode 3, the flow barrier wall valves I-SE-37-1 and I-SE-37-2 shall be opened providing cooling water from Big Mud Creek. Notify Unit 1 Control Room to open and verify by alarm (E-44).
  - NOTE: In the event barrier valves fail to open on signal, a temporary air jumper hose is available at barrier valve's air supply and steps 5.7.1.1 through 5.7.1.4 may be performed to manually open barrier valves.

#### 5.7.1 Operation Procedure

- 5.7.1.1 Allow normal movement in open direction before attaching hose so upper piston void can intake air preventing a vacuum from forming.
- 5.7.1.2 Attach hose to upper piston connection.
- 5.7.1.3 Unlock and open supply air valve (BA 3 key).
- 5.7.1.4 Regulate 1-2 psig intervals until valve opens (normally <5 psig opens valve).
- 5.8 Continue reactor cooldown per OP 2-0030127.



Page 3 of 3

### ST. LUCIE UNIT 2 OFF-NORMAL OPERATING PROCEDURE NO. 2-0360030, REVISION O OPERATIONAL REQUIREMENTS FOR EMERGENCY COOLING WATER CANAL

# 9

#### 6.0 REFERENCES:

- 6.1 St. Lucie Unit 2 FSAR, Section 9.2.5
- 6.2 Unit 2 Technical Specification Section 3.7.5.1
- 6.3 Circulating Water System Normal Operation, OP 2-0620020
- 6.4 Turbine Shutdown, OP 2-0030125
- 6.5 Reactor Cooldown from Mode 3, OP 2-0030127

#### 7.0 RECORDS REQUIRED:

7.1 Normal log entries

DOCUMENT	REVISION DISTE		OFF NORMAL & HOVE OF THE	י מפרס פסטמפרוים פ
DOCUMENT	TITLE D	C GEOOND	ISO/ATION	Y PROCEDERS
DOCUMENT	FILE NUMBER	2-096	.0030	
DOCUMENT	REVISION NUMBE	RO		//
DOCUMENT	DISTRIBUTED ON		183	-//
DOCUMENT	SENT TO:		DATE	
NO. DO	COMENT SOLDER	TRANSMITTAL CO	DOCUMENT HOLDER	TRANSMITTAL RETURNED

COPY	DOCUMENT SOLDER	TRANSMITTAL RETURNED	DOCUMENT ROLDER	TRANSMITTAL RETURNED
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	MASTER  D. A. Sager  N. G. Roos TSC  Control Room II  Training		UNCONTROLLED COPIES  NRC - Region II Attn: EPPS Branch H. Paduano - GO A. W. Bailey G. Anglehart - CE  G. Regal Ugelow, Al -Backf Training - Larry B.  J. Spodick T. Vogan - GO G. J. Boissy  R. R. Jennings H. M. Mercer A. Pell R. J. Frechette Resident NRC NRC - IE: HQ Attn: Chief, Nuc Branch C. Burns - CE	chief

PROCESSED BY: Hand DATE 4/4/83

# FLORIDA POWER & LIGHT COMPANY ST. LUCIE PLANT UNIT 2 OFF-NORMAL OPERATING PROCEDURE NO. 2-0960030 REVISION 0

1.0	THE THE TE
TOO	TITLE:

DC GROUND ISOLATION

#### 2.0 REVIEW AND APPROVAL:

Reviewed	by	Facility	Review Group	М	ARCH	9		19 85
Approved	by	4	1+ Barron	- Plant	Manager_		4-1	1900
Revision		Reviewed	by FRG	~				19
Approved	by			Plant	Manager			19

#### 3.0 PURPOSE:

- 3.1 Provide instructions for isolating a DC system ground without affecting plant operation.
- 3.2 Discussion:

This procedure shall be used as a guideline for DC ground location and isolation. The Nuclear Plant Supervisor and the Nuclear Watch Engineer shall use any section, in any order, as they deem necessary to maintain the plant stability and to insure that no limiting condition for operation from the Standard Technical Specification is violated.

#### 4.0 PRECAUTIONS AND LIMITS:

Maintain two way radio communication between control center and operating point. Verify control center operator is observing ground light on RTGB-20i when isolating circuits to minimize time each circuit is switched off.

#### 5.0 RELATED SYSTEM STATUS:


None

#### 6.0 REFERENCES:

- 6.1 Ebasco Power Distribution Motor Data 2998-B-335 series drawings
- 6.2 Ebasco Control Wiring Diagrams 2998-B-327 series drawings

#### 7.0 RECORDS REQUIRED:

Plant Work Order for the grounded circuits

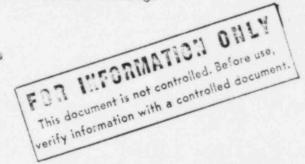

#### 8.0 INSTRUCTIONS:

- 8.1 If the ground appears on a bus which is tied to the 2A, 2B, or 2C DC bus, then proceed to Step 8.1.1. If the ground is on a separate isolated bus, then proceed to Step 8.1.5.
  - 8.1.1 Energize the standby battery charger and verify that all the 125V DC buses are being supplied from their respective chargers.
  - 8.1.2 Open or verify open the following breakers:
    - 8.1.2.1 Brk. 60310, 125V DC bus 2C
    - 8.1.2.2 Brk. 60335, tie to Swgr. 2A
    - 8.1.2.3 Brk. 60333, tie to Swgr. 2B
  - 8.1.3 The 2AB 125V DC bus is now isolated from the 2A and 2B 125V DC buses, and the 2C V DC bus is isolated from the 2AB 125V DC bus. Determine which DC bus is grounded.
  - 8.1.4 Return the 125V DC system to its original lineup.
- 8.1.5 Proceed to the appropriate section as follows:

125V DC bus 2A ground: Section 8.2

125V DC bus 2B ground: Section 8.3

125V DC bus 2AB ground: Section 8.4

125V DC bus 2C ground: Section 8.5

- 8.2 Isolate a ground on 125V DC bus 2A as follows:
  - 8.2.1 Breaker 2-60101 (PSL 1/PSL 2 Inst. Air Tie Valves PCV-18.5 and PCV-18.6)

8.2.2 Breaker 2-60102 (Spare)

#### 8.0 INSTRUCTIONS: (Cont.)

#### 8.2 (Cont.)

- 3.2.3 Breaker 2-60103 (480V 2A-1): Momentarily open and reclose breaker. If ground does not clear, proceed to Section 8.2.4. If the ground did clear, proceed to 480V LC Swgr. 2A1 and perform the following:
  - 8.2.3.1 At the rear of each compartment listed below, momentarily remove and replace the close and trip circuit fuses for the listed breakers:

co	MPT. BRE.	AKER E	QUIPMENT	
2	В 2-4		ain Feed - tation Service	Transformer
3	C 2-4	0107 S	tation Air Comp	ressor
5	B 2-4	0111 H	ypochlorite MCC	2A10
5	C 2-4		ain Transformer ooling Source #	
6	A 2-4		ain Transformer ooling Source #	
6:	B 2-40	0115 T	urbine Area MCC	2A1
6	C 2-40	0116 I	ntake Area MCC	2A3
7	B 2-40	0119 T	urbine Area MCC	2C
7	C 2-40	0120 T	urbine Bldg. Cr	ane #2
7	D 2-40	0121 R	ad Waste MCC 2A	2

8.2.4 Breaker 2-60104 (6900V Swgr. 2A1)

#### 8.0 INSTRUCTIONS: (Cont.)

8.2 (Cont.)

- 8.2.5 Breaker 2-60105 (480V Swgr. 2A-2): Momentarily open and reclose breaker. If the ground did not clear, proceed to Section 8.2.6. If the ground did clear, proceed to 480V Swgr. 2A-2 and perform the following:
  - 8.2.5.1 At the rear of each compartment listed below, momentarily remove and replace the close and trip circuit fuses for the listed breakers:

COMPT.	BREAKER	EQUIPMENT
 4B	2-40211	2HVE-10A
 4C	2-40212	CEA MG Set 2A
5A	2-40214	2HVS-4A

- 8.2.6 Breaker 2-60106 (4160V Swgr. 2A-2): Momentarily open and reclose breaker. NOTE: Annunciator window B4 and B12 will alarm. If the ground did not clear, proceed to Section 8.2.7. If the ground did clear, proceed to 4160V Swgr. 2A-2 and perform the following:
  - 8.2.6.1 Open cubicle 1 and momentarily remove and replace the close and trip circuit fuses for breaker 2-20101. If the ground did not clear, momentarily remove and replace the 4160V 2A-2 undervoltage fuses. Close cubicle 1.
  - 8.2.6.2 Open cubicle 2 and momentarily remove and replace the close and trip circuit fuses for breaker 2-20102. If the ground did not clear, momentarily remove and replace the startup standby transformer 2A lockout relay fuses. NOTE: Annunciator window B12 will annunciate. Close cubicle 2.
  - 8.2.6.3 Open cubicle 10 and momentarily remove and replace the close and trip circuit fuses for breaker 2-20110. If the ground did not clear, momentarily remove and replace the 4160V Swgr. 2A-2 differential relay fuses. NOTE: Annunciator window B4 will alarm.

- 8.0 INSTRUCTIONS: (Cont.)
  - 8.2 (Cont.)
    - 8.2.6 (Cont.)
      - 8.2.6.4 Open the cubicles listed below and momentarily remove and replace the close and trip circuit fuses for the listed breakers:

	CUBICLE	BREAKER	EQUIPMENT
	03	2-20102	CWP 2A1
_	04	2-20104	CWP 2B1
	05	2-20105	SGBD MCC 1B-9 Transformer
	06	2-20106	TCWP 2A
	07	2-20107	Condensate Pump %A
	08	2-20108	Htr. Drain Pump 2A
	09	2-20109	Feed to 4160V Swgr. 2A3

- 8.2.7 Breaker 2-60107 (125V DC PP218): Momentarily open and reclose breaker. See Appendix E for load list.
  - 8.2.8 Breaker 2-60108 (Test Station for 6.9KV Swgr. 2Al and 2Bl): Momentarily open and reclose breaker.
  - 8.2.9 Breaker 2-60109 (Comp. Cooling Water Surge Tank):
    Momentarily open and reclose breaker. NOTE: LCV-14-1
    (CCW surge tank inlet) fails closed.
  - 8.2.10 Breaker 2-60110 (Unit Aux XFMER 2A Control Cabinet):
    Momentarily open and reclose breaker. NOTE: Annunciator
    window C-48 will alarm.
  - 8.2.11 Breaker 2-60111 (DC LP 227): Momentarily open and reclose breaker. See Appendix E for load list.
  - 8.2.12 Breaker 2-60112 (S/U Standby XFMER 2A Control Cabinet):
    Momentarily open and reclose breaker. NOTE: Annunciator
    B-21 will alarm.
  - 8.2.13 Breaker 2-60113 (480V Pzr. Htr. Bus 2A3 Sudden Pressure Relay Ckt.): Momentarily open and reclose breaker.

#### 8.0 INSTRUCTIONS: (Cont.)


8.2 (Cont.)

- 8.2.14 Breaker 2-60114 (Main XFMER 2A Control Cabinet):

  Momentarily open and reclose breaker. NOTE: Annunciator
  window C-36 will alarm.
- 8.2.15 Breaker 2-60115 (RTGB-205 and 203): Momentarily open and reclose breaker. See Appendix E for load list, FF1 to FF28 (RTGB-205), FF1 to FF12 (RTGB-203).
- 8.2.16 Breaker 2-60116 (4160 Swgr. 2A-3): Momentarily open and reclose breaker. NOTE: Annunciator windows B4, 15, 52, 54, 56, 57 and 59; E-46; G-44, R (LATER) will alarm. If the ground did not clear, proceed to Section 8.2.17. If the ground did clear, proceed to 4160V Swgr. 2A-3 and perform the following:
  - 8.2.16.1 Open cubicle 6 and momentarily remove and replace the close and trip circuit fuses for breaker 2-20206, CCWP 2A. NOTE: Annunciator window S-51 will alarm. If the ground did not clear, momentarily remove and replace the 4160V Swgr. 2A-3 differential relay fuses. NOTE: Annunciator window B-4 will alarm.
  - 8.2.16.2 Open cubicle 11 and momentarily remove and replace the close and trip circuit fuses for breaker 2-20211, Diesel Generator 2A. NOTE: Annunciator wildow B-56 will alarm. If the ground does not clear, momentarily remove and replace the 4160V Swgr. 2A-3 load shedding relay fuses.

    NOTE: Annunciator window B-15 will alarm.
  - 8.2.16.3 Open the cubicles listed below and momentarily remove and replace the close and trip circuit fuses for the listed breakers. NOTE: Listed annunciator windows will alarm.

ANN. WINDOW	COMPT.	BREAKER	EQUIPMENT
R-55	1	2-20201	HPSI Pump 2A
R-58	2	2-20202	LPSI Pump 2A
R-51	3	2-20203	Cont. Spray ZA
B-59	4	2-20204	Feed to Prz. Htr. 2A3
	5	2-20205	CEDM Cooling Fan 2HVE-21A
E-46	7	2-20207	ICWP 2A
B-54	8	2-20208	Feed to 4160V 2AB
B-52	9	2-20209	Supply from 4160V 2A2
B-47	10	2-20210	Feed to 480V LC 2A2
G-44	12	2-20212	AFWP 2A

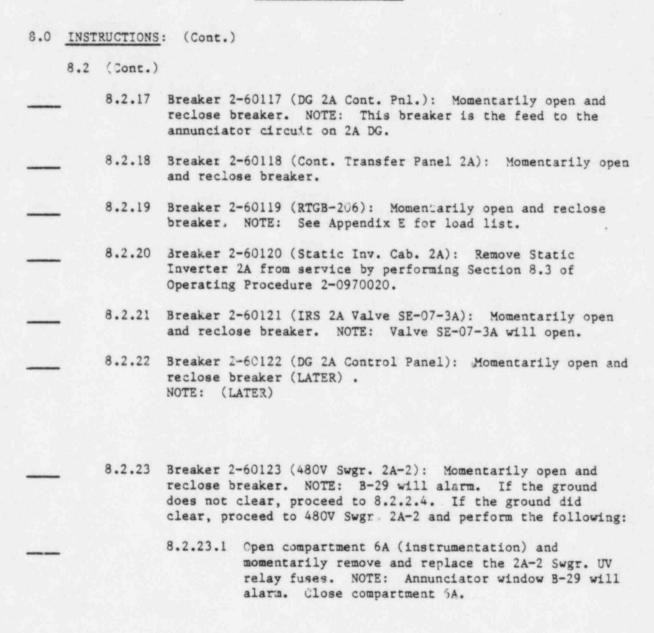

#### 8.0 INSTRUCTIONS: (Cont.)


8.2 (Cont.)

8.2.23 (Cont.)

8.2.23.2 At the rear of each compartment listed below, momentarily remove and replace the close and trip circuit fuses for the listed breakers:

COMPT.	BREAKER	EQUIPMENT
1A	2-40201	MCC 2A-6
18	2-40202	MCC 2A-7
1C	2-40203	MCC 2A-5
10	2-40204	MCC 2A-8
5B	2-40215	MCC 2A9
5C	2-40216	MCC 2A9-1B
5D	2-40217	Charging Pump 2A
6B	2-40219	Main Feed
6C	2-40220	480V LC 2AB

- 8.2.24 Breaker 2-60124 (Relief Valve V-1475): Momentarily open and close breaker.
  - 8.2.25 Breaker 2-60125 (Battery Charger 2A): Momentarily open and close breaker.
    - 8.2.26
  - 8.2.27 Breaker 2-60127 (HVCB): Momentarily open and reclose breaker. See Appendix E for load list, FF25 to FF36.
  - 8.2.28 Breaker 2-60128 (Spare)
- 8.2.29 Breaker 2-60129 (Static Inverter Cabinet 2C): Remove static inverter 2C from service by performing Section 8.3 of Operating Procedure 2-0970020.
  - 8.2.30 Breaker 2-60130 (Control Transfer Panel 2A): Momentarily open and reclose breaker.
- 8.2.31 Breaker 2-60131 (Plt. Aux. Cont. Ann. LA): Momentarily open and reclose breaker.

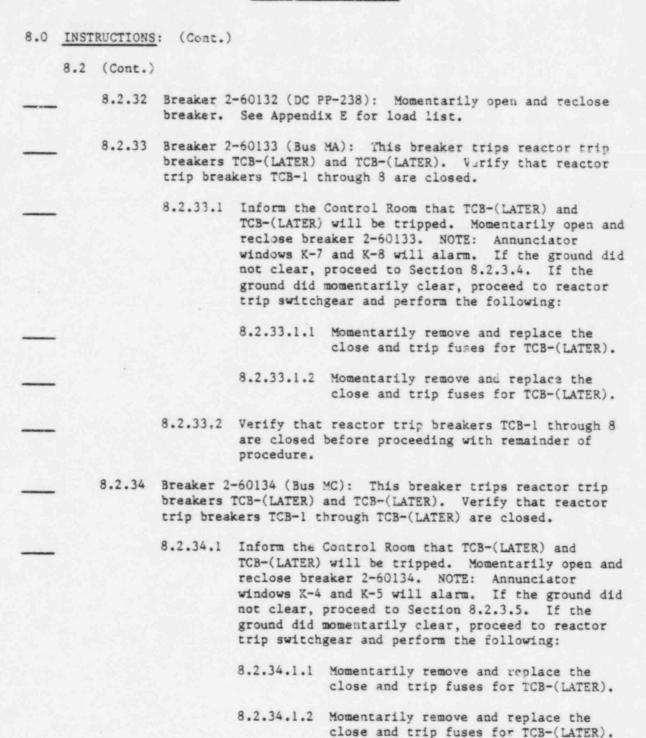

8.2.34.2 Verify that reactor trip breakers TCB-1 through 8 are closed before proceeding with remainder of procedure.

#### 8.0 INSTRUCTIONS: (Cont.)

- 8.2 (Cont.)
  - 8.2.35 Breaker 2-60135 (ISO CAB "SA"): Verify SS
    in isolation panel SA are in "normal" position. Momentarily open and close breaker.
  - 8.2.36 Breaker 2-60136 (Charging Line 2A2 Valve I-SE-02-02)
  - 8.2.37 Breaker 2-60137 (DG 2A Cont. Pnl. Exc.)
  - 8.2.38 Breaker 2-60138 (Iso. Pnl. 2A-Charging Line Iso. Valve V-2523)
  - 8.2.39 Breaker 2-60139 (S/G 2A Atm. Steam Dump Valve MV-08-18A)
  - 8.2.40 Breaker 2-50140 (S/G Atm. Steam Dump Isol. Valve MV-08-15)
  - 8.2.41 Breaker 2-60141 (S/G 2B Atm. Steam Dump Valve MV-08-18B)
  - 8.2.42 Breaker 2-60142 (S/G Atm. Steam Dump Isol. Valve MV-08-17)
  - 8.2.43 Momentarily remove and replace the DC bus 2A under-voltage relay fuses in DC bus 2A.
  - 8.2.44 Momentarily remove and replace the DC bus 2A ground relay fuses in DC bus 2A.

8.0 INST	RUCTION	<u>s</u> : (Cont.)
8.3	Isolat	e a ground on 125V DC bus 2B as follows:
_	8.3.1	Breezer 2-60201 (Hydrogen Panel): Momentarily open and reclose breaker. NOTE: The annunciator horn at the H <sub>2</sub> control panel must be reset locally.
	8.3.2	Breaker 2-60202 (LP-228): Momentarily open and reclose breaker. See Appendix F for load list.
_	8.3.3	Breaker 2-60203 (Turbine Oil $\rm H_2$ Seal Oil and Htr. Drain Fire Protection): Momentarily open and reclose breaker.
_	8.3.4	Breaker 2-60204 (S/U Standby XFMER 2B Cont. Cab.): Momentarily open and reclose breaker.
-	8.3.5	Breaker 2-60205 (480V Pzr. Htr. Bus 2B3 Sudden Press. Relay Ckt.): Momentarily open and reclose breaker.
-	8.3.6	Breaker 2-60206 (Main XFMER 2B Cont. Cab.): Momentarily open and reclose breaker.
-	8.3.7	Breaker 2-60207 (480V Swgr. 2B2 Cont. Cab.): Momentarily open and reclose breaker. If the ground did not clear, proceed to Section 8.3.8. If the ground did clear, proceed to 480V Swgr. 2A-2 and perform the following:
		8.3.7.1 At the rear of each compartment listed below, momentarily remove and replace the close and trip fuses for the listed breakers:
		COMPT. BREAKER EQUIPMENT
		3A 40505 2HVS-4B
		4B 40510 2HVE-10B
		4C 40511 CEA MG Set 2B
_	8.3.8	Breaker 2-60208 (Aux. XFMER 2B Control Cab.): Momentarily open and reclose breaker.
	8.3.9	Breaker 2-60209 (Excitation Swgr.): Do Not Operate this breaker. Proceed to 8.3.10. If ground cannot be cleared after completion of 8.3, notify Electrical Department that the ground is apparently in the excitation switchgear.  NOTE: Operation of breaker will trip generator on loss of DC.

- 8.0 INSTRUCTIONS: (Cont.)
  - 8.3 (Cont.)
    - 8.3.10 Breaker 2-60210 (Spare)
    - 8.3.11 Breaker 2-60211 (480V Swgr. 2B-1): Momentarily open and reclose breaker. If ground does not clear, proceed to Section 8.3.12. If ground did clear, proceed to 480V LC Swgr. 2B-1 and perform the following:
      - 8.3.11.1 At the rear of each compartment listed below, momentarily remove and replace the close and trip fuses for the listed breakers:

COMPT.	BREAKER	EQUIPMENT
 1B	2-40402	Main XFMER 2A Cooling Source #2
1D	2-40404	MCC #2B-2
2B	2-40406	MCC #2B-10
 2C	2-40407	Main XFMER 2B Cooling Source #1
3A	2-40409	MCC #2C
 3B	2-40410	MCC #2B-1
 3C	2-40411	MGC #2B-3
6B	2-40419	Main Feed
6C	2-40420	2B1-2Al Tie

- 8.3.12 Breaker 2-60212 (6900V Swgr. 2B-1): Momentarily open and reclose breaker. If ground did not clear, proceed to Section 8.3.13. If ground did clear, proceed to 6900V Swgr. 2B1 and perform the following:
  - 8.3.12.1 Open the cubicles listed below and momentarily remove and replace the close and trip circuit fuses for the listed breakers:

CUBICLE	BREAKER	EQUIPMENT
01	2-30205	Reactor Coolant Pump 2B1
02	2-30204	Reactor Coolant Pump 2A2
03	2-30203	Feedwater Pump 2B

8.0	INST	RUCTIONS	: (Cont.)				
	8.3	(Cont.)					
		8.3.13	The contract of the contract o		PP-219): endix G fo		y open and reclose
		8.3.14	reclose b alarm. I Section 8	reaker. f the gr	NOTE: An	nunciator not clear, und did cl	Momentarily open and windows A4 and A15 wil proceed to ear, proceed to 4.16KV
			8.3.14.1	the clo	se and tri	p fuses for t clear, mo gr. 282 und	rily remove and replace r breaker 2-20301. If omentarily remove and dervoltage fuses.
			8.3.14.2	the clo the gro replace relay f	se and tri und did no the start	p fuse for t clear, me up standby E: Annunc	ily remove and replace breaker 2-20302. If omentarily remove and transformer 2B lockou lator window Al5 will
			8.3.14.3	the clo	se and tri und did no the 4.16K	p fuses for t clear, mo V Swgr. 28	ily remove and replace breaker 2-20310. If mentarily remove and differential relay window A4 will alarm.
_			8.3.14.4	remove		e the close	low and momentarily and trip circuit
					CUBICLE	BREAKER	EQUIPMENT
					02	2-20309	Feed to 4160V Bus 2B
					03	2-20308	Htr. Dr. Pump 2B
					04	2-20307	Condensate Pump 2B
					05	2-20306	TCWP 2B

07

08

2-20304 CWP 2B2

2-20303 CWP 2A2

8.0	INSTRUCTIONS:	(Cont.)

8.3 (Cont.)

- 8.3.15 Breaker 2-60215 (480V Swgr. 2B-2): Momentarily open and reclose breaker. If the ground did not clear, proceed to Section 8.3.16. If the ground did momentarily clear, proceed to 480V Swgr. 2B2 and perform the following:
  - 8.3.15.1 Open compartment 2A (instrumentation) and momentarily remove and replace the 2B2 swgr. undervoltage relay fuses. Close compartment 2A.
  - 8.3.15.2 At the rear of each compartment listed below, momentarily remove and replace the close and trip fuses for the listed breakers:

	COMPT.	BREAKER	EQUIPMENT
	2C	2-40504	2B2-2AB Tie
-	3B	2-40506	MCC 28-9 2HVS-1C
	3C	2-40507	MCC 2B-9 2HVS-1D
	3D	2-40508	Charging Pump 2B
lane.	6A	2-40514	Reactor Crane #2
	7A	2-40518	MCC 2B-6
	7B	2-40519	MCC 2B-7
	7C	2-40520	MCC 2B-5
	7D	2-40521	MCC 2B-8

- 8.3.16 Breaker 2-60216 (Aux. Spray Valve ISE-02-4): Momentarily open and reclose breaker. NOTE: Valve fails closed, loses indication.
- 8.3.17 Breaker 2-60217 (IRS Valve 2B SE-07-3B 100W): Momentarily open and reclose breaker.

#### 8.0 INSTRUCTIONS: (Cont.)

8.3 (Cont.)

- 8.3.18 Breaker 2-60218 (4.16KV Swgr. 2B-3): Momentarily open and reclose breaker. NOTE: Annunciator windows A4, A15, A52, A54, A56, A57, A59, E47, G45, R52, R56, R59 and S52 will alarm. If the ground did not clear, proceed to Section 8.3.19. If the ground did clear, proceed to 4.16KV Swgr. 2B-3 and perform the following:
  - 8.3.18.1 Open cubicle 4 and momentarily remove and replace the close and trip fuses for breaker 2-20204.


    NOTE: Annunciator window S52 will alarm. If the ground did not clear, momentarily remove and replace the 4.16KV Swgr. 2B-3 differential relay fuses. NOTE: Annunciator window A4 will alarm.
  - 8.3.18.2 Open cubicle 1 and momentarily remove and replace the close and trip fuses for breaker 2-20401.

    NOTE: Annunciator window A56 will alarm. If the ground did not clear, momentarily remove and repalce the 4.16KV Swgr. 2B-3 load shedding relay fuses. NOTE: Annunciator window A15 will alarm.
  - 8.3.18.3 Open the cubicles listed below and momentarily remove and replace the close and trip fuses for the listed breakers. NOTE: Listed annunciator windows will alarm.

CUBICLE	BREAKER	ANN. WINDOW	EQUIPMENT
 2	2-20402	A-57	Feed to 2B2 480V LC
 3	2-20403	A-59	Feed to 2B3 480V Press. Htrs.
5	2-20405	R-56	HPSI Pump 2B
6	2-20406	R-59	LPSI Pump 2B
 7	2-20407	R-52	Cont. Spray Pump 2B
 9	2-20409	A-54	Feed to 2AB 4160V
 10	2-20410	E-47	ICWP 2B
11	2-20411	A-52	Supply from 2B2 4160V
12	2-20412	G-45	Aux. Feed Water Pump 2B

8.3.19 Breaker 2-60219 (DG 2B Control Panel)

8.0	INST	RUCTIONS	: (Cont.)
	8.3	(Cont.)	
_		8.3.20	Breaker 2-60220 (Static Inverter Cab. 2B): Remove inverter 2B from service by performing Section 8.3.1 through 8.3.8 of Operating Procedure 2-0970020.
		8.3.21	Breaker 2-69221 (DG 2B Cont. Panel)
		8.3.22	Breaker 2-60222 (Static Inverter Cab. 2D): Remove inverter 2D from service by performing Section 8.3.1 through 8.3.8 o
		8.3.23	Operating Procedure 2-0970020.  Breaker 2-60223 (Plant Aux. Cont. BD AnnLB): Momentarily open and reclose breaker.
		8.3.24	Breaker 2-60224 (Cont. Transfer Panel 2B): Momentarily ope and reclose breaker.
-		8.3.25	Breaker 2-60225 (2B Battery Charger): Momentarily open and reclose breaker.
		8.3.26	Breaker 2-60226 (Space)
			Breaker 2-60227 (RTGB-203, 205): Momentarily open and reclose breaker. See Appendix H for load list.
_		8.3.28	Breaker 2-60228 (DC PP-239): Momentarily open and close breaker. See Appendix I for load list.
		8.3.29	Breaker 2-60229 (Spare)
-		8.3.30	Breaker 2-60230 (DG Control Panel): Momentarily open and reclose breaker.

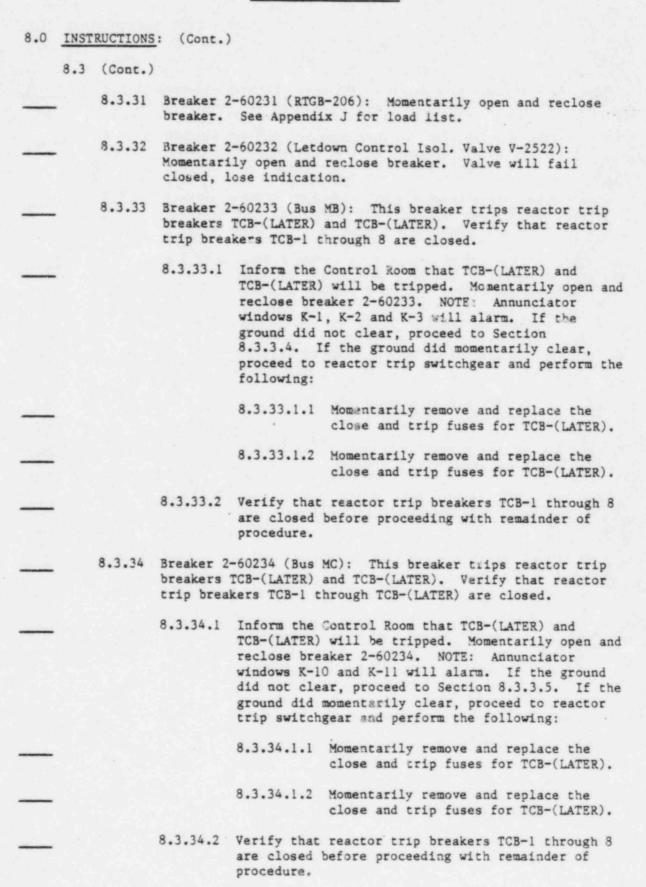



8.0	INST	RUCTION	S: (Cont.)
	8.4	Isolat	e a ground on the 2AB 125V DC Bus as follows:
_		8.4.1	Breaker 2-60301 (RTGB-201): Momentarily open and reclose breaker. See Appendix L for load list.
		8.4.2	Breaker 2-60302 (HVCB): Momentarily open and reclose breaker. See Appendix M for load list.
_		8.4.3	Breaker 2-60303 (RTGB-205): Momentarily open and reclose breaker. See Appendix N for load list.
-		8.4.4	Breaker 2-60304 (RTGB-203): Momentarily open and reclose breaker. See Appendix O for load list.
_		8.4.5	Breaker 2-60305 (Spare)
		8.4.6	Breaker 2-60306 (Spare)
		8.4.7	Breaker 2-60307 (Spare)
	4	8.4.8	Breaker 2-60308 (Spare)
_		8.4.9	Breaker 2-60309 (SUPS Cabinet): Remove the vital AC inverter from service by performing steps through of Operating Procedure 2-0970021.
		8.4.10	Breaker 2-60310 (125V DC tie to 2C bus) should be open.
		8.4.11	Breaker 2-60311 (RTGB-201): Momentarily open and reclose breaker. See Appendix P for load list.
_		8.4.12	Breaker 2-60312 (Iso. Term Cab. 3): Momentarily open and reclose breaker.
		8.4.13	Breaker 2-60313 (Spare)
		8.4.14	Breaker 2-60314 (Spare)
_		8.4.15	Breaker 2-60315 (Spare)
		8.4.16	Breaker 2-60316 (Spare)
		8.4.17	Breaker 2-60317 (Spare)
_		8.4.18	Breaker 2-60318 (Spare)
		8.4.19	Breaker 2-60319 (RTGB-202, Solenoid Valves I-SE-08-1, I-SE-08-2): Momentarily open and reclose breaker. See Appendix Q for load list.

#### 8.0 INSTRUCTIONS: (Cont.)

8.4 (Cont.)

- 8.4.20 Breaker 2-60320 (Aux. FWP Steam Valve MV-08-3): Verify 2C AFWP is not running. Momentarily open and reclose breaker.
- 8.4.21 Breaker 2-60321 (4160V Swgr. 2AB): Momentarily open and close breaker. NOTE: Annunciator windows A5, A54, B54, E91, S53 and R57 will alarm. If ground did not clear, proceed to Section 8.4.22. If ground did clear, proceed to 4160V Swgr. 2AB and perform the following:
  - 8.4.21.1 Open cubicle 1 and momentarily remove and replace the close and trip fuses for breaker 2-20501.

Open the cubicles listed below and momentarily remove and replace the close and trip circuit fuses for the listed breakers.

CUBICLE	BREAKER	EQUIPMENT				
02	2-20502	CCWP	2C			
03	2-20503	ICWP	2C			
04	2-20504	Feed	from	4.16KV	Bus	283
05	2-20505	Feed	from	4.16KV	Bus	2A3


#### 8.0 INSTRUCTIONS: (Cont.)

#### 8.4 (Cont.)

- 8.4.22 Breaker 2-60322 (480V Swgr. 2AB): Momentarily open and reclose breaker. If the ground did not clear, proceed to Section 8.4.23. If the ground did clear, proceed to 480V Swgr. 2AB and perform the following:
  - 8.4.22.1 Open compartment 2A (instrumentation) and momentarily remove and replace the 480V swgr. 2AB undervoltage relay fuses. Close compartment 2A.
  - 8.4.22.2 At the rear of each compartment listed below, momentarily remove and replace the close and trip fuses for the listed breakers:

COMPT	BREAKER	EQUIPMENT	
18	2-40702	Bus Tie to 480V Swgr. 2A-2	
10	2-40703	MCC 2AB	
2B	2-40706	Bus Tie to 480V Swgr. 2B-2	
2C	2-40707	Charging Pump 2C	

- 8.4.23 Breaker 2-60323 (Isol. Cab. "SAB"): Momentarily open and reclose breaker.
  - 8.4.24 Breaker 2-60324 (PP-240): Momentarily open and reclose breaker. See Appendix R for load list.
    - 8.4.25 Breaker 2-60325 (Spare)
- 8.4.26 Breaker 2-60326 (Battery Charger 2AB): Momentarily open and reclose breaker.
  - 8.4.27 Breaker 2-60327 (Aux. FWP Disch. to S/G 2A Valve MV-09-11): Momentarily open and reclose breaker.
  - 8.4.28 Breaker 2-60328 (S/G 2A to Aux. FWP 2C Turbine MV-08-12): ,
    Momentarily open and reclose breaker.
    - 8.4.29 Breaker 2-60329 (Aux. FWP 2C Disch. to S/G 2B Valve MV-09-12): Momentarily open and reclose breaker.
  - 8.4.30 Breaker 2-60330 (S/G 2A to Aux. FWP 2C Turbine MV-08-13):
    Momentarily open and reclose breaker.

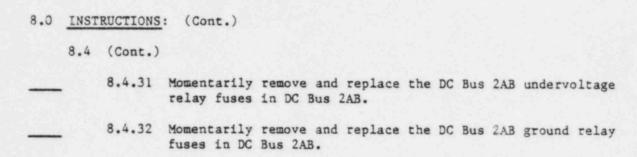

8.0	INST	RUCTION	IS: (Cont.)		
	8.5	Isolate a ground on 125V DC Bus 2C as follows:			
		8.5.1	Breaker 2-60601 (Spare)		
_		8.5.2	Breaker 2-60602 (125V DC PP-133 SGBTF): Momentarily open and reclose breaker. (Ensure Unit 1 feed is closed.)		
_		8.5.3	Breaker 2-60603 (4160V Tie Swgr. 2A4): Momentarily open and close breaker.		
		8.5.4	Breaker 2-60604 (4160V Tie Swgr. 284): Momentarily open and reclose breaker.		
		8.5.5	Breaker 2-60605 (Battery Charger 2C): Momentarily open and reclose breaker.		
_		8.5.6	Breaker 2-60606 (Security Fire Detection Rad. Vital AC Cabinet): Remove		
-		8.5.7	Breaker 2-60607 (Air Side Seal Oil Backup Pump): Verify pump is not running. Momentarily open and reclose breaker.		
_		8.5.8	Breaker 2-60611 (Emergency Oil Pump): Verify pump is not running. Momentarily open and reclose breaker.  NOTE: Annunciator window C-56 will alarm.		

### APPENDIX E

USE NO.	LINE NO.	LO	William Committee on the Committee of th	The state of the same of the s	CONDITIONS REQUIRED TO DE-ENERGIZE
		CMD	TAG	TITLE	
kt. 1		1004		Isol. Term. Cab. 1	Loss of many Class Ann.
kt. 4		929		Bkr. Test Sta. 2A2-2B2 4160V Swgr.	Out of service
kt. 5		740		L.P. Htr. 2-3A and 2-4A Reverse Current Valves	Reverse current valves will attempt to close against flow, flow holds open
kt. 7		740		H.P. Htr. 2-5A Reverse Current Valves	Reverse current valves will attempt to close against flow, flow holds open
kt. 13		1213		Sequence of Events Recorder-Annunciator	Window F-37 will alarm
		1			

### APPENDIX E

DC LP	227	CKT. 11	RTGB-	TB	CWD	REV. O
			The same and the s	And the same of th	AND DESCRIPTION OF THE PERSON NAMED IN	NAMES AND ADDRESS OF TAXABLE PARTY.

USE NO. LINE NO.	LOA	m4.0	7	CONDITIONS REQUIRED TO DE-ENERGIZE
	CWD	TAG	TITLE	
kt. 1			Control Room Emerg. Lighting	No effect

# APPENDIX E

PP DC 2A CKT. 15 RTGB- 205 TB T8 CWD 645 REV. 0

FUSE NO.	LINE NO.	L	OAD		CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	TAG	TITLE	TO BE ENERGIES
F1 F2	F1P F2N	157		Letdown Containment Isolation Valve	Fail closed, lose indication
F3 F4	F3P F4N	159	V-2505	RCP Controlled Bleedoff Isolation	Fail closed, lose indication
F5 F6	F5P F6N	159	V-2650	Boric Acid Tank 2A Recirc.	Fail closed, lose indication
F7 F8	F7P F8N	159	V-2651	Boric Acid Tank 2B Recirc.	Fail closed, lose indication
F9 F10	F9P F10N	163	FCV-2210Y	Boric Acid Flow	Fail closed, lose indication
F11 F12	F11P F12N	199	V-2523	Charging Line Isol Valve	Fail open, lose indication
F13 F14	F13P F14N	176	I-SE-02-02	Charging Line 2A Valve I-SE-02-02	Fail open, lose indication, manually res HS-I-SE-02-02 RTGB-205
F15	F15P F16N	563	V-6341	RDY Cont. Isol. Valve	Fail closed, lose indication, manually reset HS-6341 RTGB-205
F17 F18	F17P F18N	564	V-6750	Waste Gas Cont. Isol. Valve	Fail closed, lose indication, manually reset HS-6750 RTGB-205
F19 F20	F19P F20N	576	LCV-07-11A	Reactor Sump Isol. Valve	Fail closed, lose indication, must open/reset CS-1/576 when fuse restored to re-open
721	F21P	1528	I-SE-05-1E	SI Tanks Sample Valve	Fail closed, lose indication

### APPENDIX E

PP DC 2A CKT. 19 RTGE- 206 TB T2 CWD 646 REV. 0

8.2.19 Bkr. 60119

FUSE NO.	LINE NO.	_	OAD		CONDITIONS REQUIRED TO DE-ENERGIZE
		CMD	TAG	TITLE	
F1 F2	F1P F2N	202	HCV-14-8A	Comp. Cool. Wtr. Normal Supply Hdr. Isol. Valve	Fail closed, lose indication
F3 F4	F3P F4N	202	HCV-14-8B	Comp. Cool. Wtr. Normal Supply Hdr. Isol. Valve	Fail closed, lose indication
F5 F6	F5P F6N	211	HSE-14-3A	Comp. Cool. Wtr. from	Fail open, lose indication, reset to clos
F7 F8	F7P F8N	212	HCV-14-1	Comp. Cool. Wtr. to Reactor Cool. Pumps	Fail closed, lose indication, reset to open
F9 F10	F9P F10N	. 212	HCV-14-2	Comp. Cool. Wtr. from Reactor Cool. Pumps	Fail closed, lose indication, reset to open
F11 F12	F11P	242	I-SE-03-1B	SI Tank 2A2 Fill and Drain	Fail closed, lose indication
F13 F14	F13P F14N	242	I-SE-03-1A	SI Tank 2A2 Fill and Drain	Fail closed, lose indication
F15 F16	F15P F16N	256	V-3612	SI Tank 2A2, N <sub>2</sub> to SI Tank	Fail closed, lose indication
F17 F18	F17P F18N	256	V-3622	SI Tank 2Al, N <sub>2</sub> to SI Tank	Fail closed, lose indication
F19 F20	F19P F20N	280	HCV-3618	Check Valve Leakage Drain to RWT	Fail closed, lose indication
F21 F22	F21P F22N	281	HCV-3628	Check Valve Leakage Drain to RWT	Fail closed, lose indication

# APPENDIX E

PP DC 2A CKT. 19 RTGB- 206 TB T2 CWD 646 REV. 0

8.2.19
Bkr 60119

FUSE NO.	LINE NO.	L	OAD		CONDITIONS REQUIRED TO DE-ENERGIZE
		CMD	TAG	TITLE	
F23 F24	F23P F24N	289	FCV-07-1A	Containment Spray Valve	Fail open, lose indication
F25 F26	F25P F26N	312	HCV-08-1A	Main Steam Isol. Valve	Lose indication, valve will stay open is air supply is uninterrupted
F27 F28	F27P F28N	317	HCV-18-1	Instrument Air Isolation Valve	Fail closed, lose indication
F29 F30	F29P FF30N	319	FCV-23-3	Steam Gen. 2A Blowdown Isol. Valves	Fail closed, lose indication
F31 F32	F31P F32N	319	FCV-23-5	Steam Gen. 2A Blowdown Isol. Valves	Fail closed, lose indication
F33 F34	F33P F34N	320 320	FCV-26-2	Containment Radiation Sample Isol. Valves	Fail closed, lose indication
F35 F36	F35P F36N	461	FCV-23-7 FCV-23-9	Steam Gen. 2A and 2B Blowdown Sample Isol. Valves (A)	Fail closed, lose indication
F37 F38	F37P F38N	536	HCV-25-1 thru 25-7	Drain Valves to Reactor Auxiliary Bldg. Sumps	Fail closed, lose indication
F39 F40	F39P F40N	578	V-5200	Primary Coolant Sample Valve	Fail closed, lose indication
741 742	F41P F42N	579	V-5201	Press Surge Line Sample	Fail closed, lose indication

# APPENDIX E

PP DC 2A CKT. 19 RTGB- 206 TB T2 CWD 646 REV. 0

8.2.19
Bkr. 60119

INE NO. LOAD CONDITIONS REQUIRED TO DE-ENERGIZE

CWD TAG TITLE

FUSE NO.	LINE NO.	CWD	OAD TAG	TITLE	CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	ING	HILE	
F43	F43P	580	V-5202	Press. Stm. Space	Fail closed, lose indication, reset to
F44	F44N			Sample Valve	open
F45	F45P	1520	V-3495	Minimum Flow Isol.	Fail closed, lose indication, valve
F46	F46N			Valve	re-opens when fuse restored
F47	F47P	1519	To RWT Val.	SI Tank Test Line	Fail closed, lose indication, reset
F48	F48N		I-SE-03-2A		HS-1519-1 to re-open
F49	F49P	1519	V-3572	Hot Leg HPSI Line Check	Fail closed, lose indication, reset
F50	F50N			Valve Leakage Drain Loop 2A	HS-3572 to re-open
F51	F51P	243	V-3613	SI Tank 2A2 Vent	Fail closed, lose indication
F52	F52N				
F53	F53P	243	V-3623	SI Tank 2Al Vent	Fail closed, lose indication
F54	F54N				
F55	F55P	1528	I-SE-05-1E	SI Tanks Sample Valves	Fail closed, lose indication, reset
F56	F56N				HS-03-1 to re-open
F57	Spare			Spare	
F58	E. K. If A.				
F59	Spare			Spare	병원 기상 기상 기상으로 가입하는데 다양했다.
F60					
F61	F61P	655	HCV-09-1A	Main Feedwater Isolation	Window P-6 will alarm
F62	F62N			Valve	
F63	F63P	671	HCV-09-2A	Main Feedwater Isolation	Window P-26 will alarm
F64	F64N	1	1		

### APPENDIX E

FUSE NO.	LINE NO.	L	OAD		Bkr. 60127 CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	TAG	TITLE	
F25 F26	F25P F26N	511	FCV-25-1 FCV-25-3	Reactor Containment Purge Isol. Valves	Fail closed, lose indication
F27 F28	F27P F28N	522	2HVS-2A	Reactor Cavity Cooling System	No effect under normal conditions
F29 F30	F29P F30N	1160	FCV-25-20	Continuous Containment/ Hydrogen Purge Isol. Valve	Fail closed, lose indication
F31 F32	F31P F32N	529	FCV-25-7	Containment Vacuum Relief Valve	Fail closed, lose indication
F33 F34	F33P F34N	1164	FCV-25-26	Continuous Containment/ Hydrogen Purge Isol. Valve	Fail closed, lose indication
F35 F36	F35P F36N	455		Fuel Pool Rad.	Fuel Handling Building Ventilation is shifted to Shield Building Ventilation Fans/Shield Building Ventilation is isolated

# OFF-NORMAL OPERATING PROCEDURE NO. 2-0960030, REVISION O DC GROUND ISOLATION

### APPENDIX E

FUSE NO. LINE NO. LOAD CONDITIONS REQUIRED TO DE-ENERGIZE CWD TAG TITLE 595 Ckt. 1 Reflash Module RA-RAB-5 Window G-5 will alarm Ckt. 2 640 Reflash Module RA-T-4 Window F-42 will alarm Ckt. 3 640 Reflash Module RA-T-5 Window G-4 will alarm Ckt. 4 640 Reflash Module RA-T-6 Window G-24 will alarm Ckt. 5 1574 Reflash Module RA-RAB-24 Window Q4 will alarm Ckt. 6 1564 Reflash Module RA-RAB-17 Windows R26, P23, P15, F37, E30 will alarm Ckt. 7 Spare Spare Ckt. 8 986 Reflash Module RA-T-7 Window B-7 will alarm Ckt. 9 1551 Reflash Module RA-RAB-2 | Window B-29 will starm Ckt. 10 Spare Spare Ckt. 11 Spare Spare Ckt. 12 131 Reflash Module RA-RAB-3 | Window B-9 will alarm Ckt. 13 Spare Spare Ckt. 14 584 Reflash Module RA-RAB-6 Window N-6 will alarm Ckt. 15 1007 Reflash Module RA-T-9 Window E-32 will alarm Ckt. 16 Spare Spare Ckt. 17 Spare Spare Ckt. 18 188 Reflash Module RA-RAB-8 | Window N-23 will alarm Ckt. 19 Spare Spare

### APPENDIX E

FUSE NO.	LINE NO.	LOA			CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	TAG	TITLE	
Ckt. 20		1001		Reflash Module RA-RAB-11	Window B-20 will alarm
21 22 23		Spare		Spare	
kt. 24		596		Reflash Module	

# APPENDIX F

JSE NO. LINE NO	CWD LOA	TAG	TITLE	CONDITIONS REQUIRED TO DE-ENERGIZE
kt. 1	N/A		Control Room Emergency DC Lighting	No effect without loss of A/C lighting

### APPENDIX G

FUSE NO.	LINE NO.	L	OAD		CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	TAG	TITLE	
PP-238	Ckt. 23	444		Rad. Monitoring Panel No. 1	Closes sample isolation valve I-SE-26-1 to component cooling water radiation monitoring skid #1 (RS-26-1)
Ckt. 2		931		Breaker Test Station for 2A3 and 2B3 4160V Switchgear	Test Station out of service
Ckt. 3		1579		RTGB-201, 203, 205 and HCVB Annunciators	Backup Power Supply
Ckt. 4		933		Breaker Test Station for 2AB 4160V Switchgear	Test Station out of service
Ckt. 5		740	LP Htr 2-3B and 2-4B	Reverse Current Valves	Will close reverse current valve SC-10-3B and 4B
Ckt. 6		1004		Isolation Term Cabinet 2	Loss of many annunciators
Ckt. 7		587		Waste Management Local Annunciator ("Y")	Backup Power Supply
Ckt. 8		Spare		Spare	
Ckt. 9		Spare		Spare	
Ckt. 10		740	HP Htr 2-58	Reverse Current Valve	Will close reverse current valve SC-10-5

### APPENDIX H

CKT. 27 REV. 0 PP DC 2B CWD 657 RTGB- 205 TB T6

8.3.27

Bkr. 60227

FUSE NO. LINE NO. LOAD CONDITIONS REQUIRED TO DE-ENERGIZE CWD TAG TITLE FIP V-2515 FI 157 Letdown Stop Valve Fails closed, lose indication F2 F2N F3 F3P 159 V-2524 RCP Controlled Bleedoff F4 F4N Isol. Valve F5 F5P 176 I-SE-02-01 Charging Line 2Bl Valve Fails open, lose indication, reset to F6 F6N close F7 F7P 194 V-2522 Letdown Containment Fails closed, lose indication F8 F8N Isol. F9 F9P 163 V-2512 Makeup Stop Valve Fails closed, lose indication F10 FION F11 FIIP 563 V-6341 RDT Containment Isol. Fails closed, lose indication F12 F12N Valve F13 Fails closed, lose indication, manually F13P 564 V-6718 Waste Gas Containment F14 F14N Isol. Valve reset HS-6718 to open F15 F15P 566 V-5741 Nitrogen Hdr. Fails closed, lose indication F16 F16N Containment Isol. Valve F17 F17P 576 LCV-07-11B Reactor Sump Isol. Valve F18 F18N F19 F19P 190 V-2525 Boron Load Control Load control fail as is F20 F20N Valves

# APPENDIX H

CWD 657 REV. 0 8.3.27  Bkr. 60227  CONDITIONS REGUIRED TO DE-ENERGIZE	
KTGB- 205 TB T6	TITLE
CKT. 27	CWD TAG
PP DC 28 FUSE NO. LINE NO.	

### APPENDIX I

Bkr. 2-60228 FUSE NO. LINE NO. LOAD CONDITIONS REQUIRED TO DE-ENERGIZE CWD TAG TITLE Ckt. 1 882 Reflash Module RA-RAB-18 Window C-31 will alarm Ckt. 2 Spare Ckt. 3 Spare Ckt. 4 Spare Ckt. 5 1553 Windows A-4, A-9 will alarm Reflash Module RA-RAB-1 Ckt. 6 259 Reflash Module RA-T-2 Window C-57 will alarm Ckt. 7 1007 Reflash Module RA-CC-1 Window E-32 will alarm Ckt. 8 Spare Ckt. 9 Spare Ckt. 10 1008 Reflash Module RA-RAB-4 Window B-33 will alarm

### APPENDIX J

PP DC 2B CKT. 31 RTGB- 206 TB T28 CWD 646 REV. 0

8.3.3.1 3kr. 2-60231

FUSE NO.	LINE NO.	-	OAD		CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	TAG	TITLE	
F1 F2	F1P F2N	202	HCV-14-8B	Component Cool Wtr. Normal Supply Hdr. Isol. Valve	Fail closed, lose indication
F3 F4	F3P F4N	202	HCV-14-10	Component Cool. Wtr. Normal Return Hdr. Isol. Valve	Fail closed, lose indication
F5 F6	F5P F6N	211	HSE-14-3B HCV-14-3B	Component Cool. Wtr. from Shutdown Ht Exch 2B	Fail open, lose indication
F7 F8	F7P F8N	212	HCV-14-7	Component Cool. Wtr. to Reactor Cool. Pumps	Fail closed, lose indication
F9 F10	F9P F10N	212	HCV-14-6	Component Cool. Wtr. from Reactor Cool. Pumps	Fail closed, lose indication
F11 F12	F11P F12N	176	V-3661	Recirc. Draw Line Drain to Reactor Drain Tank	Fail closed, lose indication
F13 F14	F13P F14N	242	I-SE-03-1A	Safety Injection Tank Fill and Drain Valve	Fail closed, lose indication
F15 F16	F15P F16N	242	I-SE-03-1D	Safety Injection Tank Fill and Drain Valve	Fail closed, lose indication
F17 F18	F17P F18N	256	V-3632	SI Tank 2B1	Fail closed, lose indication
F19 F20	F19P F20N	256	V-3642	SI Tank 2B2	Fail closed, lose indication

### APPENDIX J

PP DC 2B CKT. 31 RTGB- 206 TB T28 CWD 646 REV. 0

8.3.3.1 Bkr. 2-60231 FUSE NO. LINE NO. LOAD CONDITIONS REQUIRED TO DE-ENERGIZE

		CWD	TAG	TITLE	
F21 F22	F21P F22N	282	HCV-3638	Check Valve Leakage Drain to RWT	Fail closed, lose indication
F23 F24	F23P F24N	283	HCV-3648	Check Valve Leakage	Fail closed, lose indication
F25 F26	F25P F26N	289	FCV-07-1B	Containment Spray Valve	Fail open, lose indication
F27 F28	F27P F28N	315	HCV-08-1B	Main Steam Isol. Valve, Opening, Closing and Solenoid Test	Solenoid test valves fail open, stroke test valve fail open, lose indication, P49 will alarm
F29 F30	F29P F30N	319	FCV-23-4	Steam Gen. 2A Blowdown Isol. Valve	Fail closed, lose indication
F31 F32	F31P F32N	319	FCV-23-6	Steam Gen. 2B Blowdown Isol. Valve	Fail closed, lose indication
F33 F34	F33P F34N	320	FCV-26-1 FCV-26-3 FCV-26-5	Containment, Section Return Rad. Sample Isol. Valve	Fail closed, lose indication
F35 F36	F35P F36N	578	V-5203	Primary Coolant Sample Valve	Fail closed, lose indication, local and remote
F37 F38	F37P F38N	579	V-5204	Press. Surge Line Sample Valve	Fail closed, lose indication, local and remote
F39 F40	F39P F40N	580	V-5205	Press. Steam Space Sample Valve	Fail closed, lose indication, local and remote
	10 10 10 10 10	100	The second second		

### APPENDIX J

PP DC 2B CKT. 31 RTGB- 206 TB T28 CWD 646 REV. 0

Bkr. 2-60231 FUSE NO. LINE NO. LOAD CONDITIONS REQUIRED TO DE-ENERGIZE CWD TAG TITLE F41 F41P 586 HCV-25-1A Drain valves to Reactor All valves this circuit fail closed, F42 F42 thru 25-7A to Auxiliary Bldg. Sumps lose indication F43 F43P 1520 V-3496 Minimum Flow Isol. Fail closed, lose indication, F44 F44N Valve Annunciator P-2 will alarm F45 F45P 1519 V-3571 Hot Leg HPSi Line Check Fail closed, lose indication F46 F46N Valve Leakage Drain Loop 2B F47 F47P 243 V-3633 SI Tank 2Bl Vent Valve Fail closed, lose indication F48 F48N F49 F49P 243 V-3643 SI Tank 2B2 Vent Valve Fail closed, lose indication F50 F50N F51P F51 849 HCV-15-1 Primary Water Isol. Fail closed, lose indication F52 F52N Valve F53 F53P 1527 I-SE-05-1A SI Tank 2Al Sample Fail closed, lose indication F54 F54N Valve F55 F55P 1527 I-SE-05-1B SI Tank 2A2 Sample Fail closed, lose indication at local F56 F56N Valve station F57 F57P 1527 I-SE-05-1B Fail closed, lose indication at local SI Tank 2A2 Sample F58 F58N Valve station F59 F59P 1527 I-SE-05-1C SI Tank 2Bl Sample Fail closed, lose indication at local F60 F60N Valve station

### APPENDIX J

8.3.3.1 Bkr. 2-6023

USE NO.	LINE NO.		OAD TAG	T T	CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	TAG	TITLE	
761 762	F61P F62N	1527	I-SE-05-1D	SI Tank 2B2 Sample Valve	Fail closed, lose indication at local station
763 764	F63P F64N	1519	I-SE-03-2B	SI Tank Test Line to RWT/VCT	Fail closed, lose indication
765 766	F65P F66N	656	HCV-09-1B	Main Feedwater Isolation Valve	Window P-16 will alarm
267 268	F67P F68N	672	HCV-09-2B	Main Feedwater Isolation Valve	Window P-36 will alarm

### APPENDIX K

PP DC 2B CKT. 38 RTGB- HVCB TB W8-RTE CWD 1239 REV. 0 8.3.38 Bkr. 2-60238

		CLID	T 7040	T	CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	TAG	TITLE	
F25 F26	F25P F26N	512	FCV-25-6	Reactor Containment Purge Isolation Valves	Fail closed, lose indication
F27 F28	F27P F28N	523	2-нуѕ-2в	Reactor Cavity Cooling System	Do not remove fuse if 2B Diesel Generator bkr. closed or if CIS present
F29 F30	F29P F30N	1161	FCV-25-21	Continuous Containment/ Hydrogen Purge Isol. Valve	Fail closed, lose indication
F31 F32	F31P F32N	529	FCV-25-7	Containment Vacuum Relief Valve	Fail closed, lose indication, bypass indication alarm window PT-8 on HVCB will alarm
F33 F34	F33P F34N	455		Fuel Pool Rad Monitoring	
F35 F36	F35P F36N	456		No CWD	
			6. 644		

# APPENDIX L

USE NO. LINE NO		=:=	CONDITIONS REQUIRED TO DE-ENERGIZE
	CWD	TAG TITLE	
51	887	KWH Meter Output	Contact MPS, lose indication
52	887	KWH Meter Output	Contact MPS, lose indication
53	871	Gross MW Recorder	Contact MPS, lose indication
54	871	Digital MW Recorder	Contact MPS, lose indication
55	744	PT-12-30	None
56	744	PT-16-2	None

ST. LUCIE PLANT UNIT 2
OFF-NORMAL OPERATING PROCEDURE NO. 2-0960030, REVISION 0
DC GROUND ISOLATION

# APPENDIX M

CWD 1241 REV. 0	CONDITIONS REQUIRED TO DE-ENPAGIZE		Remove and replace fuse	Purge.fans will stop	Stops Fuel Handling Bldg. Exhaust Fan 2HVE-15 Fuel Pool Exhaust Fan 2HVE-16A Fuel Pool Exhaust Fan 2HVE-16B Fuel Handling Building Heat and Vent Fan 2HVE-17		
RTGB- 201 TB W13 RTF		TITLE	Purge-Refueling Dampers Reactor Containment Purge Isolation Valves	Reactor Containment Purge Isolation Valves	Fuel Pool Rad. Monitoring	Spare	
CKT. 02 R	LOAD	TAG	SE-25-5	PCV-25-2 PCV-25-4	Isol. Term Cab. 1		
	10	CWD	511	512	,	Spare	
PP DC 2AB	LINE NO.		FIIP	F13P F14N	F15P F16N	F17P F18N	
	FUSE NO.		F12	F13	F15 F16	F17	

# APPENDIX N

PP DC 2AB CKT. 03 RTGB- 205 TB T2 CWD 645 REV. 0

8.4.3 Bkr. 2-60303

FUSE NO.	LINE NO.	L	OAD		CONDITIONS REQUIRED TO DE-ENERGIZE	
		CWD	TAG	TITLE		
F1 F2	F1P F2N	251		Letdown Press. and Intermediate Letdown Temp. Channels	Loss of indication PCV-2201P, Q On RTGB-205	
F3 F4	F3P F4N	158	LCV-2110P LCV-2110Q	Letdown Throttle Valves	Lose indication only, valves still function	
F5 F6	F5P F6N	160	V-2513	Volume Control Tank Vent	Fail closed, lose indication	
F7 F8	F7P F8N	163		Not on indicated CWD*		
F9 F10	F9P F10N			Spare		
F11 F12	F11P F12N	563	V-6300	RDT Vent Stop Valve	Fail open, lose indication	
F13 914	F13P F14N	564	V-6565	Waste Gas Stop Valve	Fail closed, lose indication	
F15 F16	F15P F16N	565	V-6739	Spent Resin Tank to Drumming Station	Fail closed, lose indication	
F17 F18	F17P F18N	566	V-6728	Resin Disch Stop Valve	Fail closed, lose indication	
F19 F20	F19P F20N	543		Reactor Drain Pump 2B	Loss of pump alternator	
F21-F32	Spares	193		Spares		

# APPENDIX O

FUSE NO.	LINE NO.	L	DAD		CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	TAG	TITLE	
71 72	F1P F2N	151	PCV-2201P PCV-2201Q	Letdown Pressure Control	Loss of indication only
73 74	F3P F4N	160	V-2500	Volume Control Tank Inlet	If de-energized opens to VCT
75 76	F5P F6N	160	V-2513	Volume Control Tank Vent	Fail closed, lose indication
77	F7P F8N	163	V-2512	Makeup Stop Valve	Fail closed, lose indication
79 710	F9P F10N	Spare		Spare	
711	F11P F12N	563	V-6300	RDT Vent Stop Valve	Fail open, lose indication
713	F13P F14N	564	V-6565	Waste Gas Stop Valve	Fail closed, lose indication
115	F15P F16N	565	V-6739	Spent Resin Tank to Drumming Station	Fail closed, lose indication
17	F17P F18N	566	V-6728	Resin Discharge Stop Valve	Fail closed, lose indication
719	F19P F20N	543		Reactor Drain Pump 2B	Loss of pump alternator

### APPENDIX P

USE NO. LINE N	O. LOAD TAG	WITT P	CONDITIONS REQUIRED TO DE-ENERGIZE
1 and F2	720	DEH Governor Fluid Pump 2A MP1	None
3 and F4	883	Generator Protective Relaying	
ll other circuits	are spares		

-

APPENDIX Q

PP\_DC\_2AB CKT. 19 RTGB- 202 TB CWD 638 REV. 6

8.4.19 2-60319 FUSE NO. LINE NO. LOAD CONDITIONS REQUIRED TO DE-ENERGIZE CWD TAG TITLE Ckt. 1 638 Solenoid Valves Energ. to close I-SE-08-1 and I-SE-08-2

### APPENDIX R

	PP 240	CKT. 24	RTGB-	ТВ	PD & MD 64J	REV. 0
--	--------	---------	-------	----	-------------	--------

8.4.24 Bkr. 2-60324

FUSE NO.	LINE NO.	LOA	the same of the sa		CONDITIONS REQUIRED TO DE-ENERGIZE
		CWD	TAG	TITLE	
Ckt. 4		999		Reflash Module RA-T-8	Window D28 will alarm
Ckt. 12		742		Reflash Module RA-T-3	Window E26 will alarm
Ckt. 20		1003		Reflash Module RA-RAB-12	Window A50 will alarm
NOTE: All	other circuits	this par	nel shown as	spares	
* 1					
	. 434				
	37 - 334	1.0			
2 3-11					

				JNIT II	
DOCUM DOCUM DOCUM	MENT REVISION DISTRIBUTED ON MENT SENT TO:	IDNAL REQUING WATER	CAN	OFF NORMAL & EMERGENCY	OPER. PROCEDURE
COPY NO.	DOCUMENT HOLDER	TRANSMITTAL RETURNED	COPY	DOCUMENT HOLDER	TRANSMITTAL RETURNED
1 2 3 4 5 6 7 8	MASTER  D. A. Sager  N. G. Roos TSC			UNCONTROLLED COPIES  NRC - Region II Attn: EPPS Branch H. Paduano - GO A. W. Bailey G. Anglehart - CE	

	MASTER	UNCONTROLLED COPIES
1 2 3 4 5 6 7 8 9	N. G. Roos	NRC - Region II Attn: EPPS Branch Chief H. Paduano - GO A. W. Bailey G. Anglehart - CE
9 10 11 12 13 14	CONTRO! ROOM II	G. Regal Ugelow, Al -Backfit Training - Larry Baker
15	Training	J. Spodick T. Vogan - GO G. J. Boissy  R. R. Jennings H. M. Mercer  R. J. Frechette Resident NRC NRC - IE: HQ Attn: Chief, Nuclear Response Branch C. Burns - CE

PROCESSED	BY:	DATE		
			-	

(

# Document Control PSL - UNIT #1

Date
TO: NR < clip FROM: DOCUMENT CONTROLS
SUBJECT: DOCUMENT CHANGE
Please Delete Revision No. 0 to Unit 2 Emerg
PM 2-0360040 Copy No. INT
Please remove the above from your controlled document book and destroy the change residue.
Please acknowledge disposition.
DELETE ABOVE PROCEDURE
Document Controls
TO: DOCUMENT CONTROLS - PSL
FROM:
I have removed the above and destroyed the obsolete copy.
SIGNATURE

Selete Procedure

QI 5-PR/PSL-1 Revision: 23 Date: February 1983 Page 22 of 35

### FIGURE 1

# REQUEST FOR PROCEDURE CHANGE

1.0	Request:					
	The following change is requested to Procedure No. 2 -636664 Present Re-					
	Procedure Title: Op Requiremento for Emergency Colling 10, to					
	Page, Paragraph & Lines to be changed: All poses					
buch						
etype +	change Requested: Change number to 2-6366636  o Off-Normal (not emergency procedure)					
*-	Delete 2-036004e					
	Reason for Change: NRC has expressed tencern					
	that it's not in 2 column format. This					
	should not be an energency procedure					
	any way					
	Requested by: Remmys Date: 3/25/83					
2.0	Subcommittee by: 7.1. Binnin Date: 3 125 183					
3.0	Forward request for procedure change to Q.C. Department					
4.0	Review: To be performed by Q.C					
	This procedure change does not constitute a change in the system operating procedure requirements described in the FSAR as amended by PCM's and/or other authorized changes.					
	operating procedure requirements described in the FSAR as amended by FCM's and/or other authorized changes.					
	NOTE: If Block b is checked, the Tech Staff shall ensure proper resolution in accordance with 10CFR 50.59.					
5.0	FRG Review					
	Reviewed by FRG 3/251983					
	PRC Secretary					

DOCUM DOCUM DOCUM	MENT REVISION DISTRIBUTED ON MENT DISTRIBUTED ON MENT SENT TO:	AI OPERATION	V OF T	3	OPER. PROCEDUR
COPY NO.	DOCUMENT HOLDER	TRANSMITTAL RETURNED	COPY NO.	DOCUMENT HOLDER	TRANSMITTAL RETURNED
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	MASTER  D. A. Sager  N. G. Roos TSC  Control Room II  Training			UNCONTROLLED COPIES  NRC - Region II Attn: EPPS Branch H. Paduano - GO A. W. Bailey G. Anglehart - CE  G. Regal Ugelow, Al -Backfi Training - Larry Bai  J. Spodick T. Vogan - GO G. J. Boissy  R. R. Jennings H. M. Mercer A. Pell R. J. Frechette Resident NRC NRC - IE: HQ Attn: Chief, Nucl Branch C. Burns - CE	er

PROCESSED BY: DATE

# FLORIDA POWER & LIGHT COMPANY ST. LUCIE UNIT NO. 2 OFF NORMAL OPERATING PROCEDURE NO. 2-1110034 REVISION 0



1.	TITLE: OFF-NORMAL OPERATION OF THE	PLANT VENT PROCESS MO	NITOR	
2.	PREPARED BY: B. W. Kelsev		3/14	19 8.
3.	SUBCOMMITTEE REVIEW BY:	For FP&L	3/14	19 8
4.	REVIEWED BY FRG ON:		3/16	198
5.	APPROVED BY: 3/4/ aura	Plant Manager	april	19/-
	REVISION REVIEWED BY FRG ON:			19
7.	APPROVED BY:	Plant Manager		19

FOR INFORMATION ONLY

This document is not controlled. Before use, verify information with a controlled document.

# PLORIDA POWER & LIGHT COMPANY ST. LUCIE UNIT 2 OFF-NORMAL OPERATING PROCEDURE NO. 2-1110034 REVISION 0

1.0	TTTTT .
7.0	TITLE:

OFF-NORMAL OPERATION OF THE PLANT VENT PROCESS MONITOR

### 2.0 REVIEW AND APPROVAL:

Reviewed	by	Faciltiy	Revi	ew Group		MAX	CH	16	,	1983
Approved			7	Harry	n & Plant	Manager	1/	iil	1 ,	1983
Revision		Reviewed	by	Facility	Review Group	p			,	19
Approved	by	The second			Plant	Manager			,	19

### 3.0 PURPOSE AND DISCUSSION:

# 3.1 Purpose:

This procedure provides instruction in the off-normal operations of the Plant Vent Process Monitor.

# 3.2 Discussion:

The Plant Vent Monitoring System is designed to representatively sample, monitor, indicate and record the radioactivity level in the plant effluent gases being discharged from the vent pipe.

The system consists of redundant Particulate-Iodine-Gas (P-I-G) Monitors, RS-26-13 & RS-26-14 and a Wide-Range Gas Monitor (WRGM), RS-26-90. These monitors sample the plant stack via sets of isokinetic mozzles located within the stack.

### 4.0 SYMPTOMS:

- 4.1 Annunciation and alarm on the Control Room RMS Safety Cabinets and the three (3) system operators terminals.
- 4.2 Respective Channel 'ALERT", "HIGH", or "FAIL" alarms.
- 4.3 Increasing activity as noted on the respective channel recorders and on the channel graphic display histograms.

FOR INFORMATION GOLY

This document is not controlled. Before use, verify information with a controlled document.

# OFF-NORMAL OPERATING PROCEDURE 2-1110034, REVISION O OFF-NORMAL OPERATION OF THE PLANT VENT PROCESS MONITOR

# 5.0 INSTRUCTIONS:

5.1 Immediate Automatic Action:

NONE

# 5.2 Immediate Operation Action:

5.2.1 Acknowledge the alarms and notify the Chemistry Department.

# 5.3 Subsequent Operator Action:

- 5.3.1 Determination should be made to identify and isolate the source of the increased activity as soon as possible.

  Compare all monitored channels of sources that contribute to the discharge of the Plant Vent.
- 5.3.2 Ensure that samples are taken to identify the suspected source and to verify the alarming condition.

# 5.3.3 Inoperable Monitor:

- 5.3.3.1 For an energized FAIL alarm, the channel should be considered out of service.
- 5.3.3.2 Gaseous releases shall be continuously monitored for gross radioactivity and the flow continuously measured and recorded.

Whenever the monitor is inoperable, consult the Unit 2 Technical Specification, Section 3/4 3-26 and 3/4 3-54.



# OFF-NORMAL OPERATING PROCEDURE 2-1110034, REVISION O OFF-NORMAL OPERATION OF THE PLANT VENT PROCESS MONITOR

# 6.0 REFERENCES:

- 6.1 FSAR Section 11.5.2.1.
- 6.2 General Atomic Technical Manuals.
- 6.3 PSL Technical Specifications.

# 7.0 RECORDS REQUIRED:

7.1 Normal Log Entries.



DOCUM	MENT REVISION DIST	Z-11	e A	030	OPER. PROCEDUR
COPY	DOCUMENT HOLDER	TRANSMITTAL RETURNED	COPY	DOCUMENT HOLDER	TRANSMITTAL RETURNED
1 2 3 4 5 6 7 8 9 10	MASTER  D. A. Sager  N. G. Roos T.SC			NRC - Region II Attn: EPPS Branch H. Paduano - GO A. W. Bailey G. Anglehart - CE	Chief
11 12 13 14 15	Training			G. Regal Ugelow, Al -Backfi Training - Larry Ba  J. Spedick	er
				T. Wogan - GO G. J. Boissy  R. R. Jennings H. M. Mercer A. Pell R. J. Frechette Resident NRC  NRC - IE: HQ  Attn: Chief Nucl	

C. Burns - CE

PROCESSED BY: DATE 4/4/83

# FLORIDA POWER & LIGHT COMPANY ST. LUCIE UNIT NO. 2 OFF-NORMAL OPERATING PROCEDURE NUMBER 2-1120030 REVISION 0

# 1.0 TITLE:

OFF-NORMAL OPERATION OF THE AREA RADIATION MONITORING SYSTEM

# 2.0 REVIEW & APPROVAL:

Reviewed	by Facility Review Group	MARCH 9	1983
Approved	by Althourn	Plant Manager 4-/	198
Rev.	Reviewed by FRG		19
Approved	by	Plant Manager	19

### 3.0 PURPOSE & DISCUSSION:

# 3.1 Purpose:

The purpose of this procedure is to provide the necessary instructions for the Off-Normal Operation of the Area Radiation Monitoring System.

### 3.2 Discussion:

The area radiation monitoring system consists of safety and non-safety area monitors. The safety monitors consist of the CIS Spent Fuel Pool, Containment High Range and Post-Loca Radiation monitors. Those monitors have alarms, digital readout and strip chart recorders located on the Radiation Monitoring Panel in the Control Room. They have local indicators and provide radiation data to the Radiation Monitoring System computers. The non-safety related monitors have local alarms and indicators and provide radiation data to the Radiation Monitoring System computers.


The CIS monitors continually provide radiation information to the Control Room and if radiation levels exceed their setpoint will initiate a Containment Isolation Actuation Signal.

The Spent Fuel Pool monitors continually monitor radiation levels just above the Spent Fuel Pool water level. If the radiation levels exceed the setpoint of the monitors they stop normal fuel handling building ventilation and discharge fuel handling building exhaust to the plant vent by starting the shield building ventilation system.

The Containment High Range Radiation Monitors and Post-Loca Monitors provide control room indication of radiation levels at the monitors and alarms if the setpoints are exceeded.

# 4.0 SYMPTOMS:

4.1 Symptoms are contained in the text of the procedure.

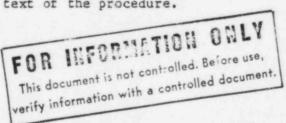

9

# ST. LUCIE UNIT NO. 2 OFF-NORMAL OPERATING PROCEDURE NUMBER 2-1120030, REVISION O OFF-NORMAL OPERATION OF THE AREA RADIATION MONITORING SYSTEM

# 5.0 INSTRUCTIONS:

- 5.1 Containment Isolation Radiation Monitors High Radiation Alarm
  - 5.1.1 Symptoms:
    - 1. Containment High Radiation CIS Channel Trip P-5.
    - 2. Containment High Radiation CIS Charnel Pre-Trip P-15.
  - 5.1.2 Immediate Automatic Actions
    - Containment isolation occurs if 2 or more monitors are in high alarm.
  - 5.1.3 Immediate Operator Actions
    - Verify Containment Isolation has occurred if 2 or more monitors are in alarm.
    - Verify Containment evacuation alarm has sounded or initiate manually.
    - If only one monitor is in alarm check the other CIS monitors for increasing radiation levels.
  - 5.1.4 Subsequent Operator Actions
    - 1. Notify the NPS.
    - 2. Verify the alarms are valid.
    - Carry out the applicable emergency procedures as necessary.
    - 4. Determine if personnel were in the RCB and obtain an accountability as necessary.
- 5.2 Spent Fuel Pool Monitors in High Radiation Alarm
  - 5.2.1 Symptoms:
    - Spent Fuel Pool Channels in Radiation Monitoring System
       Panel in High Alarm and at Spent Fuel Pool monitors local stations.



### ST. LUCIE UNIT NO. 2

# OFF-NORMAL OPERATING PROCEDURE NUMBER 2-1120030, REVISION O OFF-NORMAL OPERATION OF THE AREA RADIATION MONITORING SYSTEM

# 5.0 Instructions: (Continued)

### 5.2 (Continued)

- 5.2.2 Immediate Automatic Actions 2 or 3 monitors on either the SA or SB circuit in High Alarm.
  - 1. 2-HVS 6 and 2-HVS 7 stop.
  - 2. 2-HVE 15, 2-HVE 16A or 16B and 2-HVE 17 stop.
  - 3. Dampers D-29 thru D-36 close.
  - 4. I-FCV-25-30 and I-FCV-25-31 open.
  - 5. I-FCV-25-32 and I-FCV-25-33 close.
  - 6. 2-HVE 6A and 6B start.

### 5.2.3 Immediate Operator Actions

- Verify that automatic actions have occurred or initiate manually.
- 2. Announce the alarms over the Plant paging system and the immediate evacuation of the Fuel Handling Building.

### 5.2.4 Subsequent Operator Actions

- 1. Verify the alarms are valid.
- 2. Initiate emergency procedures if applicable.
- Obtain an accountability of personnel in the Fuel Handling Building.

### 5.3 Individual Area Radiation Monitors in Alert or High Alarm

### 5.3.1 Symptoms:

- High or Alert Radiation Monitor Alarm (audible and visual) on Control Room, Health Physics, Chemistry Radiation Monitoring System CRT's.
- Individual High or Alert Alarms (audible and visual) on Control Room RMS Panel.
- 3. High or Alert Radiation Monitor Alarms (audible and visual) on local monitor stations.



# ST. LUCIE UNIT NO. 2 OFF-NORMAL OPERATING PROCEDURE NUMBER 2-1120030, REVISION O OFF-NORMAL OPERATION OF THE AREA RADIATION MONITORING SYSTEM

# 5.0 Instructions: (Continued)

- 5.3 (Continued)
  - 5.3.2 Immediate Automatic Actions
    - 1. None
  - 5.3.3 Immediate Operator Actions
    - 1. Notify personnel by use of the Plant paging system to evacuate the affected area.
  - 5.3.4 Subsequent Operator Actions
    - 1. Verify the validity of the alarm.
    - 2. Contact Health Physics and request a survey of the affected area.
- 5.4 Inoperable Monitor
  - 5.4.1 Symptoms:
    - Audible and visual alarms on Control Room, Health Physics and Chemistry Radiation Monitoring System CRT's.
    - Audible alarm and loss of operate light at local monitor station.
  - 5.4.2 Immediate Automatic Actions
    - 1. None
  - 5.4.3 Immediate Operator Actions
    - 1. None
  - 5.4.4 Subsequent Operator Actions
    - Contact Health Physics and request a check of the monitor and to perform area surveys as necessary.

# ST. LUCIE UNIT NO. 2 OFF-NORMAL OPERATING PROCEDURE NUMBER 2-1120030, REVISION O OFF-NORMAL OPERATION OF THE AREA RADIATION MONITORING SYSTEM

- 6.0 REFERENCES:
  - 6.1 PSL-2 FSAR
- 7.0 RECORDS:
  - 7.1 Normal log entries.

