TABLE 2.2-1 (continued)

REACTOR TRIP SYSTEM INSTRUMENTATION TRIP SETPOINTS

Func	tional Unit	Total Allowance (TA)	Z	<u>s</u>	Trip Setpoint	Allowable Value
18.	Safety Injection Input from ESF	NA	NA	NA	NA	NA
19.	Reactor Trip System Interlocks					
	A. Intermediate Range Neutron Flux, P-6	NA	NA	NA	≥1 x 1C- ¹⁰ amps	<u>≥</u> 6 x 10- ¹¹ amps
	B. Low Power Reactor Trips Block, P-7	7.5	4.56	0	<10% of RTP	<12.2% of RTP
	b. P-13 input	7.5	4.56	0	- <10% turbine impulse pressure equivalent	<12.2% of turbine impulse pressure equivalent
	C. Power Range Neutron Flux P-8	7.5	4.56	0	≤38% of RTP	<40.2% of RTP
	D. Low Setpoint Power Range Neutron Flux, P-10	7.5	4.56	0	≥10% of RTP	≥7.8% of RTP
	E. Turbine Impulse Chamber Pressure, P-13	7.5	4.56	0	<10% turbine impulse pressure equivalent	<12.2% turbine pressure equivalent
20.	Reactor Trip Breakers	NA	NA	NA	NA	NA
21.	Automatic Actuation Logic	NA	NA	NA	NA	NA
RTP	= RATED THERMAL POWER	ADOCK 05000395 PDR				
	F. Power RANGE NEUTRON FLUX, P-9	7.5	4.56	0	≤ 50% of RTP	452.2% OF RTP

SUMMER - UNIT 1

2-7

LIMIJING SAFETY SYSTEM SETTINGS

BASES

Steam/Feedwater Flow Mismatch and Low Steam Generator Water Level (Continued)

level setpoint, as indicated by the narrow range instrument. These trip values include sufficie... allowance in excess of normal operating values to preclude spurious trips but will initiate a reactor trip before the steam generators are dry. Therefore, the required capacity and starting time requirements of the auxiliary feedwater pumps are reduced and the resulting thermal transient on the Reactor Coolant System and steam generators is minimized.

Undervoltage and Underfrequency - Reactor Coolant Pump Busses

The Undervoltage and Underfrequency Reactor Coolant Pump Bus trips provide reactor core protection against DNB as a result of complete loss of forced coolant flow. The specified set points assure a reactor trip signal is generated before the low flow trip set point is reached. Time delays are incorporated in the underfrequency and undervoltage trips to prevent spurious reactor trips from momentary electrical power transients. For undervoltage, the delay is set so that the time required for a simal to reach the reactor trip breakers following the simultaneous trip of two or more reactor coolant pump bus circuit breakers shall not exceed 1.2 seconds. For underfrequency, the delay is set so that the time required for a signal to reach the reactor trip breakers after the underfrequency trip set point is reached shall not exceed 0.6 seconds. On decreasing power the Undervoltage and Underfrequency Reactor Coolant Pump Bus trips are automatically blocked by P-7 (a power level of approximately 10 percent of RATED THERMAL POWER with a turbine impulse chamber pressure at approximately 10 percent of full power equivalent); and on increasing power, reinstated automatically by P-7.

Turbine Trip

A Turbine Trip initiates a reactor trip. On decreasing power the turbine trip is automatically blocked by P=7 (a power level of approximately 10 percent of RATED THERMAL POWER with a turbine impulse chamber at approximately 10 percent of full power equivalent); and on increasing power, reinstated automatically by P=7.

Safety Injection Input from ESF

If a reactor trip has not already been generated by the reactor protective instrumentation, the ESF automatic actuation logic channels will initiate a reactor trip upon any signal which initiates a safety injection. The ESF instrumentation channels which initiate a safety injection signal are shown in Table 3.3-3.

UN DECREASING POWER THE REACTOR TRIP FROM THE TURBINE TRIP IS AUTOMATICALLY BLOCKED BY P-9 (A POWER LEVEL LESS THAN OR EQUAL TO 50% OF RATED THERMAL POWER); AND ON INCREASING POWER, REINSTATED AUTOMATICALLY BY P-9.

SUMMER - UNIT 1

LIMITING SAFETY SYSTEM SETTINGS

BASES

Reactor Trip System Interlocks

The Reactor Trip System Interlocks perform the following functions:

- P-6 On increasing power P-6 allows the manual block of the Source Range reactor trip and de-energizing of the high voltage to the detectors. On decreasing power, Source Range level trips are automatically reactivated and high voltage restored.
- P-7 On increasing power P-7 automatically enables reactor trips on low flow in more than one primary coolant loop, more than one reactor coolant pump breaker open, reactor coolant pump bus undervoltage and underfrequency, turbine trip, pressurizer low pressure and pressurizer high level. On decreasing power the above listed trips are automatically blocked.
- P-8 On increasing power P-8 automatically enables reactor trips on low flow in one or more primary coolant loops, and one or more reactor coolant pump breakers open. On decreasing power the P-8 automatically blocks the above listed trips.
- P-10 On increasing power P-10 allows the manual block of the Intermediate Range reactor trip and the low setpoint Power Range reactor trip; and automatically blocks the Source Range reactor trip and de-energizes the Source Range high voltage power. On decreasing power the Intermediate Range reactor trip and the low setpoint Power Range reactor trip are automatically reactivated. Provides input to P-7.

P-13 Provides input to P-7.

P-9 ON INCREASING POWER P-9 AUTOMATICALLY ENABLES REACTOR TRIP ON TURBINE TRIP. ON DECREASING POWER P-9 AUTOMATICALLY BLOCKS REACTOR TRIP ON TURBINE TRIP

TABLE 3.3-1 (Continued)

REACTOR TRIP SYSTEM INSTRUMENTATION

FUNC	TIONAL UNIT	TOT OF C	AL NO.	CHANNELS TO TRIP	CHANNELS OPERABLE	APPLICABLE MODES	ACTION
19.	Reactor Trip System Interlo	cks					
	A. Intermediate Range Neutron Flux, P-6		2	1	2	. 2#	7
	B. Low Power Reactor						
	Trips Block, P-7	P-10 Input	4	2	3	1	7
		P-13 Input	2	1	2	1	7
	C. Power Range Neutron						
	Flux, P-8		4	2	3	1	7
	D. Power Range Neutron						
	Flux, P-10		4	2	3	1, 2	7
	E. Turbine First Stage						
	Pressure, P-13		2	1	2	1	7
20.	Reactor Trip Breakers		2	1	2	1, 2	8
			2	1	2	3*, 4*, 5*	9
21.	Automatic Trip Logic		2	1	2	1, 2	8
			2	1	2	3*, 4*, 5*	9
							e e
	E POURS RANGE NEUT	MON	4	2	3	1	7
	FLUX, P-9						

SUMMER - UNIT 1

3/4 3-5

TABLE 4.3-1 (Continued)

· . . .

REACTOR TRIP SYSTEM INSTRUMENTATION SURVEILLANCE REQUIREMENTS

FUNCTIONAL UNIT		CHANNEL CHECK	ANALOG CHANNEL CHANNEL CALIBRATION CALIBRATION		TRIP ACTUATING DEVICE OPERATIONAL TEST	ACTUATION LOGIC TEST	MODES FOR WHICH SURVEILLANCE IS REQUIRED	
	D. Low Setpoint Power Ran Neutron Flux, P-10	ge N.A.	R(4)	M (8)	N.A.	N.A.	1, 2	
	E. Turbine Impulse Chamber Pressure, P-13	N.A.	R	M (8)	N. A.	N.A.	1	
20). Reactor Trip Breaker	N. A.	N.A.	N. A.	M (7, 11)	N.A.	· 1, 2, 3*, 4*, 5*	
21	L. Automatic Trip Logic	N.A.	N.A.	N. A.	N.A.	M (7)	1, 2, 3*, 4*, 5*	
	- F. LOW POWER RANGE NEUTRON FLUX, P-9	N.A	R(4)	м (в)	N.A.	N.A.	1	

3/4 3-13