

Document Transmittal #: 39966

Date: 1/29/96

To: NRC (DC DESK)

MAC: N/A

Destination:

Description:

Document:	Revision:	Comment:	Copy #	Copy Totals		
				INFO	CNTL	MSTR
AR0952	06		24	1	0	0
AR0954	04		24	1	0	0
AR0959	03		24	1	0	0

Instructions to the Addressee:

Please verify the document(s) received agrees with the above information. Be sure to destroy document(s) or portions of document(s) superseded by the above.

The signature indicates acknowledgment of receipt of the above document(s). Return signed and dated transmittal to Document Control within 20 days at mail code:

\_\_\_\_\_ NA1C  
 \_\_\_\_\_ Florida Power Corporation  
 Document Control, NA1C  
 Crystal River Energy Complex  
 15760 W. Power Line St.  
 Crystal River, FL 34428-6708

Signature of Addressee: \_\_\_\_\_ Date: \_\_\_\_\_

Independent Verification: \_\_\_\_\_ Date: \_\_\_\_\_

(Control Room documents only)

9602050055 960126  
 PDR ADOCK 05000302  
 F PDR

*AO45  
0/1*

Effective Date 1-29-96

Document Section  
**INFORMATION ONLY**  
ANNUNCIATOR RESPONSE

AR-952

FLORIDA POWER CORPORATION

CRYSTAL RIVER UNIT 3

WDB ANNUNCIATOR RESPONSE

**THIS PROCEDURE ADDRESSES SAFETY RELATED COMPONENTS**

APPROVED BY: Interpretation Contact

*Garrett Hill*  
(SIGNATURE ON FILE)

DATE: 1/26/96

INTERPRETATION CONTACT: Supervisor, Nuclear Operations  
Administrative Shift

TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
1.0 <u>PURPOSE</u> . . . . .	1
2.0 <u>REFERENCES</u> . . . . .	1
2.1 <u>IMPLEMENTING REFERENCES</u> . . . . .	1
2.2 <u>DEVELOPMENTAL REFERENCES</u> . . . . .	1
3.0 <u>PERSONNEL INDOCTRINATION</u> . . . . .	1
4.0 <u>INSTRUCTIONS</u> . . . . .	1
5.0 <u>FOLLOW-UP ACTIONS</u> . . . . .	1
<u>ENCLOSURE</u>	
1 Annunciator Response . . . . .	2

## 1.0 PURPOSE

- 1.1 Establish a reference document for each Annunciator Window on the WD-WP Lampbox.
- 1.2 Establish operator actions for valid Annunciator alarms on the WD-WP Lampbox.
- 1.3 Establish a reference to other procedures which address operator actions for valid Annunciator alarms on the WD-WP Lampbox.

## 2.0 REFERENCES

### 2.1 IMPLEMENTING REFERENCES

None

### 2.2 DEVELOPMENTAL REFERENCES

- 2.2.1 INPO 90-021, Good Practice OP-217, Alarm Response Procedures
- 2.2.2 Annunciator Window Engraving Drawing E-224-050.

## 3.0 PERSONNEL INDOCTRINATION

None

 
## 4.0 INSTRUCTIONS

- 4.1 Respond to alarms on the WD-WP Lampbox as indicated on Enclosure 1, Annunciator Response.

## 5.0 FOLLOW-UP ACTIONS

None


RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-1-2	B-1-2
--	-----------	-------

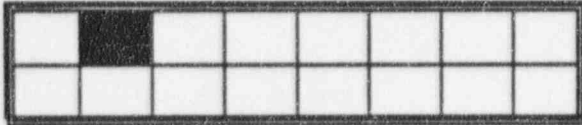

**DECAY HEAT  
PIT SUMP  
LEVEL EXTRA  
HIGH**

<b>INDICATED CONDITION:</b> <ul style="list-style-type: none"><li>- LEVEL OF DH SUMP 3B &gt; 3'</li></ul>
<b>REDUNDANT INDICATION WHICH WILL VERIFY ALARM:</b> <ul style="list-style-type: none"><li>- DH PIT SUMP PUMP 3B (WDP-3B) AUTO-START ALARM</li><li>- DH PIT SUMP PUMP 3B RUN INDICATING LAMPS</li><li>- SUMP LEVEL INDICATION ON WD PANEL</li></ul>
<b>OPERATOR ACTION FOR A VALID ALARM:</b> <ul style="list-style-type: none"><li>- CHECK THAT DH SUMP PUMP 3B IS RUNNING</li><li>- CHECK DH SUMP PUMP 3B VALVE LINEUP</li><li>- INVESTIGATE DRAINS TO DH PIT SUMP FOR ABNORMAL DRAINAGE</li></ul>
<b>DISCUSSION:</b> <p>THIS ALARM IN CONJUNCTION WITH WDP-3B RUNNING COULD INDICATE A LARGE LEAK IN THE 'B' DH PIT. NOTIFY CONTROL ROOM OPERATOR IMMEDIATELY.</p>
<b>REFERENCES:</b> DWG 208-060 WD-10
<b>SENSING ELEMENT:</b> WD-134-LS

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-1-3	B-1-3
--	-----------	-------

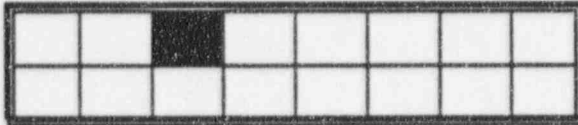 

AUX BLDG SUMP  
PUMP 3A  
AUTO-START

<p>INDICATED CONDITION:</p> <ul style="list-style-type: none"><li>- AUX BLDG SUMP LEVEL &gt;2.5'</li><li>- AUX BLDG SUMP PUMP 3A (WDP-4A) IS SELECTED</li></ul>
<p>REDUNDANT INDICATION WHICH WILL VERIFY ALARM:</p> <ul style="list-style-type: none"><li>- PUMP RUN INDICATING LAMPS ON WD PANEL</li><li>- POSSIBLE AUX BLDG SUMP LEVEL EXTRA HIGH ALARM</li><li>- PUMP DISCHARGE PRESSURE ON WD PANEL</li><li>- SUMP LEVEL INDICATOR ON WD PANEL</li></ul>
<p>OPERATOR ACTION FOR A VALID ALARM:</p> <ul style="list-style-type: none"><li>- NORMAL FUNCTION ALARM. IF FREQUENCY OF AUTO-STARTS IS EXCESSIVE, CHECK VALVE LINEUP OF SYSTEMS DRAINING TO SUMP AND DETERMINE SOURCE.</li></ul>
<p>DISCUSSION:</p> <p>IF WDP-4A RUNS FOR AN EXCESSIVE PERIOD OF TIME, THIS COULD INDICATE PUMP DEGRADATION OR A LARGE LEAK IN THE AUXILIARY BUILDING. NOTIFY CONTROL ROOM OPERATOR IF RUN TIME IS EXCESSIVE.</p>
<p>REFERENCES: DWG 208-060 WD-11</p>
<p>SENSING ELEMENT: WD-132-LS</p>

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-1-4	B-1-4
--	-----------	-------


AUX BLDG SUMP  
PUMP 3A  
TRIP

INDICATED CONDITION: - PUMP AUTO-STOPS IF AUX BLDG SUMP LEVEL <1.5'
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - PUMP RUN INDICATING LAMPS ON WD PANEL - SUMP LEVEL INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - NORMAL FUNCTION ALARM. INVESTIGATE VALVE LINEUP/SWITCH POSITION IF AUX BLDG SUMP LEVEL EXTRA HIGH ALARM EXISTS.
DISCUSSION: THIS IS AN EXPECTED ALARM IF WDP-4A IS MANUALLY STARTED AND AUXILIARY BUILDING SUMP LEVEL <1.5'. INVESTIGATE ANY OTHER REASON FOR PUMP TRIP.
REFERENCES: DWG 208-060 WD-11
SENSING ELEMENT: WD-132-LS


RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-1-5	B-1-5
--	-----------	-------


WASTE GAS  
COMP SEAL  
LEAK DR TK  
LOW LEVEL

INDICATED CONDITION: - LOW LEVEL OF 8"
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - POSSIBLE RMA-2(G) OR RMA-3 ALARM
OPERATOR ACTION FOR A VALID ALARM: - BLEED AIR OFF WDV-1030 TO CLOSE
DISCUSSION: WDV-1031 SHOULD BE USED TO MANUALLY CONTROL DRAIN POT LEVEL IF WDV-1030 FAILS TO CONTROL.
REFERENCES: DWG 208-060 WD-135
SENSING ELEMENT: WD-357-LS2




RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-1-6	B-1-6
--	-----------	-------

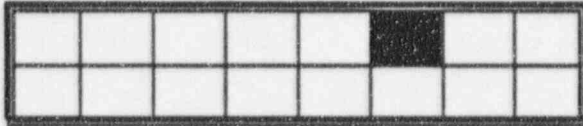 

AUX BLDG SUMP  
PUMP 3B  
AUTO-START

<p>INDICATED CONDITION:</p> <ul style="list-style-type: none"><li>- AUX BLDG SUMP LEVEL &gt;2.5'</li><li>- AUX BLDG SUMP PUMP 3B (WDP-4B) IS SELECTED</li></ul>
<p>REDUNDANT INDICATION WHICH WILL VERIFY ALARM:</p> <ul style="list-style-type: none"><li>- PUMP RUN INDICATING LAMPS ON WD PANEL</li><li>- POSSIBLE AUX BLDG SUMP LEVEL EXTRA HIGH ALARM</li><li>- PUMP DISCHARGE PRESSURE ON WD PANEL</li><li>- SUMP LEVEL INDICATOR ON WD PANEL</li></ul>
<p>OPERATOR ACTION FOR A VALID ALARM:</p> <ul style="list-style-type: none"><li>- NORMAL FUNCTION ALARM. IF FREQUENCY OF AUTO-STARTS IS EXCESSIVE, CHECK VALVE LINEUP OF SYSTEMS DRAINING TO SUMP AND DETERMINE SOURCE.</li></ul>
<p>DISCUSSION:</p> <p>IF WDP-4B RUNS FOR AN EXCESSIVE PERIOD OF TIME, THIS COULD INDICATE PUMP DEGRADATION OR A LARGE LEAK IN THE AUXILIARY BUILDING. NOTIFY CONTROL ROOM IF RUN TIME IS EXCESSIVE.</p>
<p>REFERENCES: DWG 208-060 WD-12</p>
<p>SENSING ELEMENT: WD-132-LS</p>


RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-1-7	B-1-7
--	-----------	-------

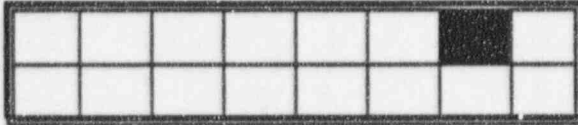 

AUX BLDG SUMP  
PUMP 3B  
TRIP

INDICATED CONDITION: - PUMP AUTO-STOPS IF AUX BLDG SUMP LEVEL <1.5'
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - PUMP RUN INDICATING LAMPS ON WD PANEL - SUMP LEVEL INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - NORMAL FUNCTION ALARM. INVESTIGATE VALVE LINEUP/SWITCH POSITION IF AUX BLDG SUMP LEVEL EXTRA HIGH ALARM EXISTS.
DISCUSSION: THIS IS AN EXPECTED ALARM IF WDP-4B IS MANUALLY STARTED AND AUXILIARY BUILDING SUMP LEVEL <1.5'. INVESTIGATE ANY OTHER REASON FOR PUMP TRIP.
REFERENCES: DWG 208-060 WD-12
SENSING ELEMENT: WD-132-LS

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-1-8	B-1-8
--	-----------	-------

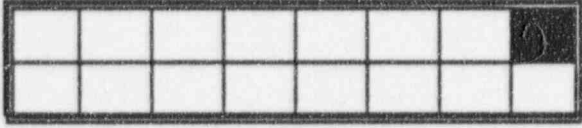 

**WASTE GAS SAMPLING  
ANALYZER PANEL  
IN ALARM**

INDICATED CONDITION: - LOSS OF 120 VAC POWER TO GAS ANALYZER PANEL
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - POWER INDICATING LAMP ON PANEL IS OUT - GAS FLOW <1.5 SLPM
OPERATOR ACTION FOR A VALID ALARM: - CHECK PANEL POWER SUPPLY SWITCH - CHECK 480 VAC SUPPLY BREAKER ON REACTOR MCC 3B2 - CHECK PUMP OPERATION AND VALVE ALIGNMENT
DISCUSSION: THIS ALARM MAY INDICATE A NEED TO PERFORM AN ALTERNATIVE MEANS OF SAMPLING. NOTIFY CONTROL ROOM OPERATOR IMMEDIATELY.
REFERENCES: DWG 208-060 WD-131, WD-135
SENSING ELEMENT: PF RELAY WD-21-FIS

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-2-1	B-2-1
--	-----------	-------



AUX BLDG  
SUMP LEVEL  
EXTRA HIGH

INDICATED CONDITION: - LEVEL OF AUX BLDG SUMP >5.5'
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - AUX BLDG SUMP PUMP 3A AND/OR 3B AUTO-START ALARMS - SUMP PUMP INDICATING LAMPS ON WD PANEL - SUMP LEVEL INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - CHECK THAT AUX BLDG SUMP PUMPS 3A AND/OR 3B ARE RUNNING - CHECK SUMP PUMP VALVE LINEUP - DETERMINE SOURCE OF WATER INTO SUMP
DISCUSSION: THIS ALARM IN CONJUNCTION WITH AN AUXILIARY BUILDING SUMP PUMP ALREADY RUNNING MAY BE AN INDICATION OF EITHER PUMP DEGRADATION OR A LARGE LEAK IN THE AUXILIARY BUILDING. NOTIFY CONTROL ROOM OPERATOR IMMEDIATELY.
REFERENCES: DWG 208-060 WD-11
SENSING ELEMENT: WD-132-LS1

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-2-2	B-2-2
--	-----------	-------


**WASTE TRANSF  
PUMP 3A  
AUTO-START  
FAILURE**

<p>INDICATED CONDITION:</p> <ul style="list-style-type: none"><li>- BLEED TANK 3A SELECTED ON FEED SELECT SWITCH (AND PULLED)</li><li>- MUV-103 OPEN AND</li><li>- WASTE TRANSFER PUMP 3A (WDP-5A) NOT RUNNING</li></ul>
<p>REDUNDANT INDICATION WHICH WILL VERIFY ALARM:</p> <ul style="list-style-type: none"><li>- PUMP RUN INDICATING LAMPS ON WD PANEL</li><li>- MUV-103 INDICATING LAMPS IN CONTROL ROOM</li></ul>
<p>OPERATOR ACTION FOR A VALID ALARM:</p> <ul style="list-style-type: none"><li>- CHECK VALVE LINEUP, SWITCH POSITIONS AND FEED PERMISSIVE CIRCUITS FOR CORRECT POSITIONS.</li></ul>
<p>DISCUSSION:</p> <p>THIS ALARM WILL OCCUR IF WDP-5A IS SHUT DOWN FOR ANY REASON WHILE ATTEMPTING TO ADD TO THE RCS USING WDT-5A. NOTIFY CONTROL ROOM OPERATOR OF LOCAL INDICATIONS CONCERNING THE REASON FOR WDP-5A SHUTDOWN.</p>
<p>REFERENCES: DWG 208-060 WD-13</p>
<p>SENSING ELEMENT: 42B RELAY F1 3MUV-103</p>

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-2-3	B-2-3
--	-----------	-------


WASTE TRANSF  
PUMP 3A  
TRIP

INDICATED CONDITION: - PUMP CONTROL SWITCH IN NOR-AFT-START POSITION AND PUMP NOT RUNNING
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - PUMP MOTOR OVERCURRENT - PUMP STARTED LOCALLY THEN SELECTED FOR FEED
OPERATOR ACTION FOR A VALID ALARM: - CHECK FOR PUMP MOTOR OVERLOAD TRIP CONDITION - CHECK VALVE LINEUP AND SWITCH POSITION - CALL CONTROL ROOM TO SEE IF PUMP SELECTED FOR FEED
DISCUSSION: IF WDP-5A WAS RUNNING FOR RCBT RECIRCULATION, A NEW SAMPLE REQUEST WILL HAVE TO BE GENERATED AFTER THE CAUSE OF THE PUMP TRIP IS DETERMINED AND RESOLVED.
REFERENCES: DWG 208-060 WD-13, WD-73
SENSING ELEMENT: CS/SC+CS/O 42B

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-2-4	B-2-4
--	-----------	-------


**WASTE TRANSF  
PUMP 3B  
AUTO-START  
FAILURE**

<p>INDICATED CONDITION:</p> <ul style="list-style-type: none"><li>- BLEED TANK 3B SELECTED ON FEED SELECT SWITCH (AND PULLED)</li><li>- MUV-103 OPEN AND</li><li>- WASTE TRANSFER PUMP 3B (WDP-5B) NOT RUNNING</li></ul>
<p>REDUNDANT INDICATION WHICH WILL VERIFY ALARM:</p> <ul style="list-style-type: none"><li>- PUMP RUN INDICATING LAMPS ON WD PANEL</li><li>- MUV-103 INDICATING LAMPS IN CONTROL ROOM</li></ul>
<p>OPERATOR ACTION FOR A VALID ALARM:</p> <ul style="list-style-type: none"><li>- CHECK VALVE LINEUP, SWITCH POSITIONS AND FEED PERMISSIVE CIRCUITS FOR CORRECT POSITIONS.</li></ul>
<p>DISCUSSION:</p> <p>THIS ALARM WILL OCCUR IF WDP-5B IS SHUT DOWN FOR ANY REASON WHILE ATTEMPTING TO ADD TO THE RCS USING WDP-5B. NOTIFY CONTROL ROOM OPERATOR OF LOCAL INDICATIONS CONCERNING THE REASON FOR WDP-5B SHUTDOWN.</p>
<p>REFERENCES: DWG 208-060 WD-14</p>
<p>SENSING ELEMENT: 42B RELAY F2 3MUV-103</p>


RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-2-5	B-2-5
--	-----------	-------


WASTE TRANSF  
PUMP 3B  
TRIP

INDICATED CONDITION: - PUMP CONTROL SWITCH IN NOR-AFT-START POSITION AND PUMP NOT RUNNING
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - PUMP MOTOR OVERCURRENT - PUMP STARTED LOCALLY THEN SELECTED FOR FEED
OPERATOR ACTION FOR A VALID ALARM: - CHECK FOR PUMP MOTOR OVERLOAD TRIP CONDITION - CHECK VALVE LINEUP AND SWITCH POSITION - CALL CONTROL ROOM TO SEE IF PUMP SELECTED FOR FEED
DISCUSSION: IF WDP-5B WAS RUNNING FOR RCBT RECIRCULATION, A NEW SAMPLE REQUEST WILL HAVE TO BE GENERATED AFTER THE CAUSE OF THE PUMP TRIP IS DETERMINED AND RESOLVED.
REFERENCES: DWG 208-060 WD-14, WD-73
SENSING ELEMENT: CS/SC+CS/O 42B



RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-2-6	B-2-6
--	-----------	-------

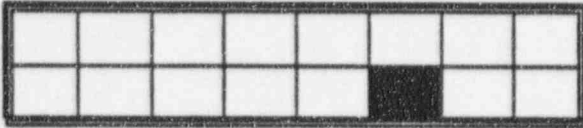 

**WASTE TRANSF  
PUMP 3C  
AUTO-START  
FAILURE**

<p>INDICATED CONDITION:</p> <ul style="list-style-type: none"><li>- BLEED TANK 3C SELECTED ON FEED SELECT SWITCH (AND PULLED)</li><li>- MUV-103 OPEN AND</li><li>- WASTE TRANSFER PUMP 3C (WDP-5C) NOT RUNNING</li></ul>
<p>REDUNDANT INDICATION WHICH WILL VERIFY ALARM:</p> <ul style="list-style-type: none"><li>- PUMP RUN INDICATING LAMPS ON WD PANEL</li><li>- MUV-103 INDICATING LAMPS IN CONTROL ROOM</li></ul>
<p>OPERATOR ACTION FOR A VALID ALARM:</p> <ul style="list-style-type: none"><li>- CHECK VALVE LINEUP, SWITCH POSITIONS AND FEED PERMISSIVE CIRCUITS FOR CORRECT POSITIONS.</li></ul>
<p>DISCUSSION:</p> <p>THIS ALARM WILL OCCUR IF WDP-5C IS SHUT DOWN FOR ANY REASON WHILE ATTEMPTING TO ADD TO THE RCS USING WDP-5C. NOTIFY CONTROL ROOM OPERATOR OF LOCAL INDICATIONS CONCERNING THE REASON FOR WDT-5C SHUTDOWN.</p>
<p>REFERENCES: DWG 208-060 WD-15</p>
<p>SENSING ELEMENT: 42B RELAY F3 3MUV-103</p>

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-2-7	B-2-7
--	-----------	-------


WASTE TRANSF  
PUMP 3C  
TRIP

INDICATED CONDITION: - PUMP CONTROL SWITCH IN NOR-AFT-START POSITION AND PUMP NOT RUNNING
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - PUMP MOTOR OVERCURRENT - PUMP STARTED LOCALLY THEN SELECTED FOR FEED
OPERATOR ACTION FOR A VALID ALARM: - CHECK FOR PUMP MOTOR OVERLOAD TRIP CONDITION - CHECK VALVE LINEUP AND SWITCH POSITION - CALL CONTROL ROOM TO SEE IF PUMP SELECTED FOR FEED
DISCUSSION: IF WDP-5C WAS RUNNING FOR RCBT RECIRCULATION, A NEW SAMPLE REQUEST WILL HAVE TO BE GENERATED AFTER THE CAUSE OF THE PUMP TRIP IS DETERMINED AND RESOLVED.
REFERENCES: DWG 208-060 WD-15, WD-74
SENSING ELEMENT: CS/SC+CS/O 42B

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WP-2-8	B-2-8
--	-----------	-------


MISC RAD  
WASTE TRANSF  
PUMP 3A  
TRIP

<p>INDICATED CONDITION: - PUMP CONTROL SWITCH IN NOR-AFT-START POSITION AND WDP-6A NOT RUNNING</p>
<p>REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - PUMP RUN INDICATING LAMPS ON WD PANEL</p>
<p>OPERATOR ACTION FOR A VALID ALARM: - CHECK VALVE LINEUP AND DETERMINE CAUSE OF PUMP MOTOR OVERLOAD TRIP CONDITIONS</p>
<p>DISCUSSION: THIS PUMP DOES NOT AUTO SHUT DOWN ON LOW MISCELLANEOUS WASTE STORAGE TANK (MWST) LEVEL. IF PROCESSING TO THE ECST'S, CARE SHOULD BE TAKEN TO PREVENT RUNNING WDP-6A WITH NO LEVEL IN THE MWST.</p>
<p>REFERENCES: DWG 208-060 WD-16</p>
<p>SENSING ELEMENT: CS/SC+CS/O 42B</p>

Effective Date 1-29-96

Document Section  
**INFORMATION ONLY**  
C. R. Nuclear  
ANNUNCIATOR RESPONSE

AR-954

FLORIDA POWER CORPORATION

CRYSTAL RIVER UNIT 3

WDD ANNUNCIATOR RESPONSE

THIS PROCEDURE ADDRESSES SAFETY RELATED COMPONENTS

APPROVED BY: Interpretation Contact  
*Barry Webb*  
(SIGNATURE ON FILE)  
DATE: 1/26/96

INTERPRETATION CONTACT: Supervisor, Nuclear Operations  
Administrative Shift

TABLE OF CONTENTS

<u>SECTION</u>	<u>PAGE</u>
1.0 <u>PURPOSE</u> . . . . .	1
2.0 <u>REFERENCES</u> . . . . .	1
2.1 <u>IMPLEMENTING REFERENCES</u> . . . . .	1
2.2 <u>DEVELOPMENTAL REFERENCES</u> . . . . .	1
3.0 <u>PERSONNEL INDOCTRINATION</u> . . . . .	1
4.0 <u>INSTRUCTIONS</u> . . . . .	1
5.0 <u>FOLLOW-UP ACTIONS</u> . . . . .	1
<u>ENCLOSURES</u>	
1 Annunciator Response. . . . .	2

## 1.0 PURPOSE

- 1.1 Establish a reference document for each Annunciator Window on the WD-WR Panel Lampbox.
- 1.2 Establish operator actions for valid Annunciator alarms on the WD-WR Panel Lampbox.
- 1.3 Establish a reference to other procedures which address operator actions for valid Annunciator alarms on the WD-WR Panel Lampbox.

## 2.0 REFERENCES

### 2.1 IMPLEMENTING REFERENCES

- 2.1.1 OP-415, Waste Disposal Evaporators

### 2.2 DEVELOPMENTAL REFERENCES

- 2.2.1 INPO 90-021, Good Practice OP-217, Alarm Response Procedures
- 2.2.2 Annunciator Window Engraving Drawing E-224-050.

## 3.0 PERSONNEL INDOCTRINATION

None

## 4.0 INSTRUCTIONS

- 4.1 Respond to alarms on the WD-WR Panel Lampbox as indicated on Enclosure 1, Annunciator Response.

## 5.0 FOLLOW-UP ACTIONS

None

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-1-2	D-1-2
--	-----------	-------


NEUTRALIZER  
TANK MIXER  
TRIP

INDICATED CONDITION: - MIXER (WDMX-1) TRIPPED OUT ON OVERLOAD
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - MIXER RUN INDICATING LAMPS ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - DETERMINE CAUSE OF OVERLOAD CONDITION
DISCUSSION: THE MIXER IS NO LONGER USED.
REFERENCES: DWG 208-060 WD-31
SENSING ELEMENT: SWGR 49 CONTACTS

 
RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-1-3	D-1-3
--	-----------	-------


WASTE GAS  
DECAY TK 3A  
PRESS HIGH

INDICATED CONDITION: - TANK PRESSURE >83 PSIG
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - TANK PRESSURE INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - ASSOCIATED WASTE GAS DECAY TANK IS FULL. LINEUP TO TANK WITH <80 PSIG IN IT.
DISCUSSION: CONSIDER REDUCING PRESSURE IN WASTE GAS DECAY TANK 3A BY USING RECYCLE VALVES PER OP-412A, WASTE GAS DISPOSAL SYSTEM.
REFERENCES: DWG 208-060 WD-05
SENSING ELEMENT: WD-204-PS2



RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-1-4	D-1-4
--	-----------	-------

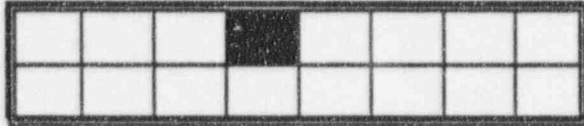

**WASTE GAS  
DECAY TK 3B  
PRESS HIGH**

INDICATED CONDITION: - TANK PRESSURE >83 PSIG
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - TANK PRESSURE INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - ASSOCIATED WASTE GAS DECAY TANK IS FULL. LINEUP TO TANK WITH <80 PSIG IN IT.
DISCUSSION: CONSIDER REDUCING PRESSURE IN WASTE GAS DECAY TANK 3B BY USING RECYCLE VALVES PER OP-412A, WASTE GAS DISPOSAL SYSTEM. CONSIDER GOING TO THE 'C' TANK AS THE 'A' TANK IS USED FOR SAMPLING.
REFERENCES: DWG 208-060 WD-05
SENSING ELEMENT: WD-205-PS2


RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-1-5	D-1-5
--	-----------	-------



**WASTE GAS  
DECAY TK 3C  
PRESS HIGH**

INDICATED CONDITION: - TANK PRESSURE >83 PSIG
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - TANK PRESSURE INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - ASSOCIATED WASTE GAS DECAY TANK IS FULL. LINEUP TO TANK WITH <80 PSIG IN IT.
DISCUSSION: CONSIDER REDUCING PRESSURE IN WASTE GAS DECAY TANK 3C BY USING RECYCLE VALVES PER OP-412A, WASTE GAS DISPOSAL SYSTEM. CONSIDER GOING TO THE 'B' TANK AS THE 'A' TANK IS USED FOR SAMPLING.
REFERENCES: DWG 208-060 WD-05
SENSING ELEMENT: WD-206-PS2


RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-1-6	D-1-6
--	-----------	-------

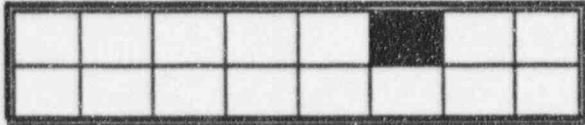 

**LIQUID WASTE  
DRUM FILL  
LEVEL HIGH**

INDICATED CONDITION: - DRUM LEVEL >2.5'
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - VALVE WDV-653 INDICATING LAMPS ON WASTE DRUM PANEL
OPERATOR ACTION FOR A VALID ALARM: - ENSURE VALVE WDV-653 CLOSES - CHECK FOR IMPROPER DRUM MIX - CHECK FOR POSSIBLE HIGH FLOW RATE - CHECK FOR POSSIBLE LEAKING DRUM INLET MANIFOLD
DISCUSSION: THIS EQUIPMENT IS NO LONGER USED.
REFERENCES: DWG 208-060 WD-127
SENSING ELEMENT: WD-142-LS


RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-1-7	D-1-7
--	-----------	-------

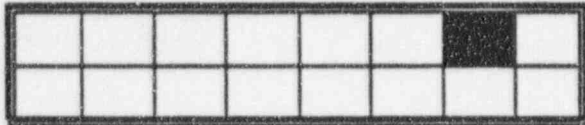 

**RC EVAP  
CONCENTRATOR  
LEVEL HIGH**

INDICATED CONDITION: - CONCENTRATOR LEVEL >20"
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - RC EVAP FEED TANK PUMP WDP-16A/B INDICATING LAMPS ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - ENSURE PUMP (WDP-16A/B) TRIPS - SECURE RC EVAP COND COOLING WATER, STEAM SUPPLY, AND VACUUM PUMP
DISCUSSION: ALARM COULD BE DEFEATED PER OP-415
REFERENCES: DWG 208-060 WD-143
SENSING ELEMENT: WD-174-LS

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-1-8	D-1-8
--	-----------	-------

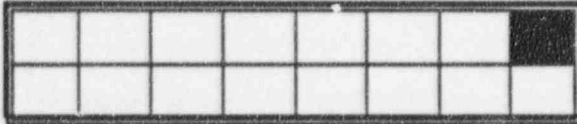 

**RC EVAP  
FEED TANK  
LEVEL HIGH**

<p>INDICATED CONDITION: - TANK LEVEL &gt;92%</p>
<p>REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - TANK LEVEL INDICATION ON WD PANEL</p>
<p>OPERATOR ACTION FOR A VALID ALARM: - CHECK LINEUP FOR CAUSE OF ALARM - IF LEVEL CONTINUES TO INCREASE, OPEN DRAIN VALVE</p>
<p>DISCUSSION: ALARM COULD BE DEFEATED PER OP-415</p>
<p>REFERENCES: DWG 208-060 WD-137</p>
<p>SENSING ELEMENT: WD-161-LS2</p>

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-2-1	D-2-1
--	-----------	-------


RC EVAP  
FEED TANK  
DENSITY HIGH

INDICATED CONDITION: - FEED TANK SPECIFIC GRAVITY >1.2
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - TANK DENSITY INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - DETERMINE CAUSE OF HIGH DENSITY AND RESOLVE - TRANSFER WATER TO CONC. WASTE STORAGE TANK OR TO CONC. BORIC ACID STORAGE TANK.
DISCUSSION: ALARM COULD BE DEFEATED PER OP-415
REFERENCES: DWG 208-060 WD-137
SENSING ELEMENT: WD-162-PSA

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-2-2	D-2-2
--	-----------	-------



**RC EVAP  
DISTILLATE  
RESERVOIR  
LEVEL HIGH**

INDICATED CONDITION: - TANK LEVEL AT 30"
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - RESERVOIR LEVEL INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - SECURE STEAM SUPPLY AND COOLING WATER FLOW TO EVAPORATOR
DISCUSSION: ALARM COULD BE DEFEATED PER OP-415
REFERENCES: DWG 208-060 WD-137
SENSING ELEMENT: WD-160-LS1

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-2-3	D-2-3
--	-----------	-------


**RC EVAP  
DISTILLATE  
CONDUCTIVITY  
HIGH**

<b>INDICATED CONDITION:</b> <ul style="list-style-type: none"><li>- DISTILLATE CONDUCTIVITY <math>&gt;2 \mu\text{MHOS}</math></li></ul>
<b>REDUNDANT INDICATION WHICH WILL VERIFY ALARM:</b> <ul style="list-style-type: none"><li>- DISTILLATE REJECT/DISCHARGE VALVE INDICATION ON WD PANEL</li><li>- DISTILLATE CONDUCTIVITY INDICATOR ON WD PANEL</li></ul>
<b>OPERATOR ACTION FOR A VALID ALARM:</b> <ul style="list-style-type: none"><li>- ENSURE AUTO ACTION INITIATED (SEE DISCUSSION)</li><li>- DETERMINE CAUSE OF ALARM AND RESOLVE</li><li>- CHECK FEED TANK CONCENTRATION AND FOR FOAMING IN TANK</li></ul>
<b>DISCUSSION:</b> <p>THE AUTO ACTION WILL OPEN THE DISTILLATE REJECT VALVE (WDV-722)/(WDV-719) AND SHUT THE DISTILLATE DISCHARGE VALVE (WDV-721)/(WDV-720) IF RC DISTILLATE PUMP 3A (WDP-17A) OR 3B (WDP-17B) IS RUNNING. THE ALARM COULD BE DEFEATED PER OP-415.</p>
<b>REFERENCES:</b> DWG 208-060 WD-143
<b>SENSING ELEMENT:</b> WD-159-CS




RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-2-4	D-2-4
--	-----------	-------


RC EVAP  
CONCENTRATOR  
VACUUM  
LOW

INDICATED CONDITION: - CONCENTRATOR VACUUM <15" HG
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - CONCENTRATOR VACUUM INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - CHECK SEAL WATER, VACUUM WATER SEPARATOR, AND STEAM SUPPLY, AND FOR POSSIBLE COOLING WATER FLUCTUATIONS.
DISCUSSION: ALARM COULD BE DEFEATED PER OP-415
REFERENCES: DWG 208-060 WD-143
SENSING ELEMENT: WD-164-PSA

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-2-5	D-2-5
--	-----------	-------

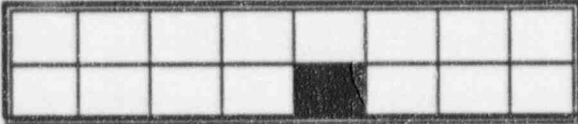 

RC EVAP  
FEED TANK  
LEVEL LOW


INDICATED CONDITION: - TANK LEVEL <14"
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - TANK LEVEL INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - DETERMINE REASON FOR LOW LEVEL BY CHECKING VALVE LINEUP AND RESTORE.
DISCUSSION: ALARM COULD BE DEFEATED PER OP-415
REFERENCES: DWG 208-060 WD-143
SENSING ELEMENT: WD-161-LS1

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-2-6	D-2-6
--	-----------	-------


RC EVAP  
FEED TANK  
TEMP LOW

INDICATED CONDITION: - FEED TANK TEMPERATURE <150 DEG F
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - FEED TANK HEATER INDICATING LAMPS (WDHE-2) ON WD PANEL - FEED TANK TEMPERATURE INDICATOR ON WD PANEL
OPERATOR ACTION FOR A VALID ALARM: - IF RC EVAPORATOR PACKAGE IS IN OPERATION: - ENSURE FEED TANK LEVEL >29.2% - MANUALLY CONTROL HEATERS IF DESIRED - CHECK OUT OPERATION OF HEATER CONTROL CIRCUITRY
DISCUSSION: ALARM COULD BE DEFEATED PER OP-415
REFERENCES: DWG 208-060 WD-50
SENSING ELEMENT: WD-163-TE

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-2-7	D-2-7
--	-----------	-------

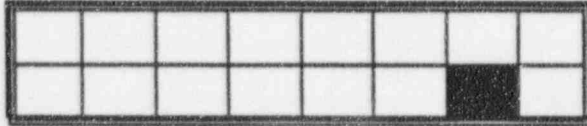 

**RC EVAP  
DISTILLATE  
RESERVOIR  
LEVEL LOW**

<b>INDICATED CONDITION:</b> - TANK LEVEL <10"
<b>REDUNDANT INDICATION WHICH WILL VERIFY ALARM:</b> - SELECTED RC EVAP DISTILLATE PUMP INDICATING LAMPS ON WD PANEL - RESERVOIR LEVEL INDICATOR ON WD PANEL
<b>OPERATOR ACTION FOR A VALID ALARM:</b> - CHECK VALVE LINEUP, STEAM SUPPLY, AND COOLING WATER - ENSURE AUTO ACTION INITIATED (SEE DISCUSSION)
<b>DISCUSSION:</b> THE AUTO ACTION TRIPS SELECTED RC EVAP DISTILLATE PUMP (WDP-17A/17B). ALARM COULD BE DEFEATED PER OP-415.
<b>REFERENCES:</b> DWG 208-060 WD-143
<b>SENSING ELEMENT:</b> WD-160-LS3

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WR-2-8	D-2-8
--	-----------	-------


**BORIC ACID  
STOR TNK  
TEMP HI/LO**

<p>INDICATED CONDITION: - BORIC ACID STORAGE TANK 3A OR 3B TEMP &gt;164 OR &lt;152 DEG F</p>
<p>REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - STORAGE TANK HEATER INDICATING LAMPS ON WD PANEL - TANK TEMPERATURE INDICATOR ON WD PANEL</p>
<p>OPERATOR ACTION FOR A VALID ALARM: - INVESTIGATE HEATER CONTROL CIRCUITRY FOR MALFUNCTION.</p>
<p>DISCUSSION: ALARM COULD BE DEFEATED PER OP-415</p>
<p>REFERENCES: DWG 208-060 WD-52, WD-53</p>
<p>SENSING ELEMENT: WD-80-TS, WD-83-TS</p>

Effective Date 1-29-96

Document Section  
**INFORMATION ONLY**  
C. R. Nuclear  
~~ANNUNCIATOR RESPONSE~~

AR-959

FLORIDA POWER CORPORATION

CRYSTAL RIVER UNIT 3

WDI ANNUNCIATOR RESPONSE

THIS PROCEDURE ADDRESSES SAFETY RELATED COMPONENTS

APPROVED BY: Interpretation Contact

*Barrett Webb*  
(SIGNATURE ON FILE)

DATE: 1/26/96

INTERPRETATION CONTACT: Nuclear Operations  
Superintendent

TABLE OF CONTENTS

SECTION	PAGE
<u>1.0 PURPOSE . . . . .</u>	1
<u>2.0 REFERENCES . . . . .</u>	1
2.1 <u>IMPLEMENTING REFERENCES . . . . .</u>	1
2.2 <u>DEVELOPMENTAL REFERENCES . . . . .</u>	1
<u>3.0 PERSONNEL INDOCTRINATION . . . . .</u>	1
<u>4.0 INSTRUCTIONS . . . . .</u>	1
<u>5.0 FOLLOW-UP ACTIONS . . . . .</u>	1
<u>ENCLOSURES</u>	
1 Annunciator Response. . . . .	2

1.0      PURPOSE

- 1.1      Establish a reference document for each Annunciator Window on the WD-WW Lampbox.
- 1.2      Establish operator actions for valid Annunciator alarms on the WD-WW Lampbox.
- 1.3      Establish a reference to other procedures which address operator actions for valid Annunciator alarms on the WD-WW Lampbox.

2.0      REFERENCES

2.1      IMPLEMENTING REFERENCES

None

2.2      DEVELOPMENTAL REFERENCES

- 2.2.1    INPO 90-021, Good Practice OP-217, Alarm Response Procedures
- 2.2.2    Annunciator Window Engraving Drawing E-224-050

3.0      PERSONNEL INDOCTRINATION

None

4.0      INSTRUCTIONS

- 4.1      Respond to alarms on the WD-WW Lampbox as indicated on Enclosure 1, Annunciator Response.

5.0      FOLLOW-UP ACTIONS

None



RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WW-1-1	I-1-1
--	-----------	-------

■									

LAUNDRY & SHOWER  
MONITORING TANK  
WDT-11A  
LEVEL LOW

INDICATED CONDITION: - LOW LEVEL IN LAUNDRY TANK
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - WD-271-LR
OPERATOR ACTION FOR A VALID ALARM: - CHECK LAUNDRY & SHOWER TANK MONITOR PUMP A, WDP-23A
DISCUSSION: THIS IS AN EXPECTED ALARM FOR A LAUNDRY AND SHOWER MONITORING TANK RELEASE, AT WHICH TIME WDP-23A/B WILL TRIP ON LOW LEVEL IN WDT-11A/B.
REFERENCES: DWG 208-060 WD-185
SENSING ELEMENT: WD-271-LS

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WW-1-2	I-1-2
--	-----------	-------


LAUNDRY & SHOWER  
MONITORING TANK  
WDT-11B  
LEVEL LOW

INDICATED CONDITION: - LOW LEVEL IN LAUNDRY TANK
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - WD-271-LR
OPERATOR ACTION FOR A VALID ALARM: - CHECK LAUNDRY & SHOWER TANK MONITOR PUMP B, WCP-23B
DISCUSSION: THIS IS AN EXPECTED ALARM FOR A LAUNDRY AND SHOWER MONITORING TANK RELEASE, AT WHICH TIME WDP-23B/A WILL TRIP ON LOW LEVEL IN WDT-11B/A.
REFERENCES: DWG 208-060 WD-186
SENSING ELEMENT: WD-272-LS

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WW-1-3	i-1-3
--	-----------	-------


LAUNDRY & SHOWER  
MONITORING PUMP  
WDP-23A  
TRIP

INDICATED CONDITION: - RED TARGET WITH PUMP OFF
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - WD-275-PI
OPERATOR ACTION FOR A VALID ALARM: - CHECK WDP-23A
DISCUSSION: THIS IS AN EXPECTED ALARM FOR A LOW LEVEL IN WDT-11A/B.
REFERENCES: DWG 208-060 WD-185
SENSING ELEMENT: CS/SC CS/O 42B

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WW-1-4	I-1-4
--	-----------	-------


LAUNDRY & SHOWER  
MONITORING PUMP  
WDP-23B  
TRIP

INDICATED CONDITION: - RED TARGET WITH PUMP OFF
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - WD-276-PI
OPERATOR ACTION FOR A VALID ALARM: - CHECK WDP-23B
DISCUSSION: THIS IS AN EXPECTED ALARM FOR A LOW LEVEL IN WDT-11A/B.
REFERENCES: DWG 208-060 WD-186
SENSING ELEMENT: CS/SC CS/O 42B

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WW-2-1	I-2-1
--	-----------	-------


LAUNDRY & SHOWER  
MONITORING TANK  
WDT-11A  
LEVEL HIGH

INDICATED CONDITION: - HIGH LEVEL IN LAUNDRY TANK
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - WD-271-LI
OPERATOR ACTION FOR A VALID ALARM: - CHECK LAUNDRY TANK LEVEL
DISCUSSION: A HIGH LEVEL IN WDT-11A/B WILL TRIP THE LAUNDRY AND SHOWER SUMP PUMP WDP-22A/B.
REFERENCES: DWG 208-060 WD-187
SENSING ELEMENT: WD-271-LS3

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WW-2-2	I-2-2
--	-----------	-------


LAUNDRY & SHOWER  
MONITORING TANK  
WDT-11B  
LEVEL HIGH

INDICATED CONDITION: - HIGH LEVEL IN LAUNDRY TANK
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - WD-272-LI
OPERATOR ACTION FOR A VALID ALARM: - CHECK LAUNDRY TANK LEVEL
DISCUSSION: A HIGH LEVEL IN WDT-11B/A WILL TRIP THE LAUNDRY AND SHOWER SUMP PUMP WDP-22B/A.
REFERENCES: DWG 208-060 WD-180
SENSING ELEMENT: WD-272-LS3

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WW-2-3	I-2-3
--	-----------	-------


**LAUNDRY & SHOWER  
SUMP LEVEL  
EXTRA HIGH**

INDICATED CONDITION: - HIGH LEVEL IN LAUNDRY SHOWER SUMP
REDUNDANT INDICATION WHICH WILL VERIFY ALARM: - WD-36-LI
OPERATOR ACTION FOR A VALID ALARM: - CHECK OPERATION OF WDP-22A/B.
DISCUSSION:
REFERENCES: DWG 208-060 WD-180
SENSING ELEMENT: WD-135-LS2

RADWASTE DISPOSAL ANNUNCIATOR RESPONSE	WD-WW-2-4	I-2-4
--	-----------	-------


ULTRA  
FILTRATION  
TRIP

INDICATED CONDITION: - TRIP OF ULTRA FILTRATION PUMP
REDUNDANT INDICATION WHICH WILL VERIFY ALARM:
OPERATOR ACTION FOR A VALID ALARM: - INVESTIGATE ULTRA FILTRATION SYSTEM
DISCUSSION: THIS EQUIPMENT IS NO LONGER USED.
REFERENCES:
SENSING ELEMENT: