



- 10. ASR CONTACT CLOSURE WHEN DIESEL STARTS SEE DWG. E-03KJ01A.
- 11. LIQUID LEVEL SHOWN NORMALLY CLOSED OPENING AT RISING LEVEL.
- 12. TEMPERATURE SHOWN NORMALLY OPEN CLOSING ON RISING TEMPERATURE.
- 13. TEMPERATURE SHOWN NORMALLY CLOSED OPENING ON RISING TEMPERATURE.
- 14. LIQUID LEVEL SHOWN NORMALLY OPEN CLOSING ON RISING LEVEL.
- 15. PRESSURE SHOWN NORMALLY OPEN CLOSING ON RISING PRESSURE.
- 16. PRESSURE SHOWN NORMALLY CLOSED OPENING ON RISING PRESSURE.
- 17. DELETED.
- 18. CONTACT CLOSURE WHEN A.M. LOCAL (K1-11) ALARM SILENCE. SEE V.P. M-03E-015.
- 19. CONTACT 2-3 OPENS WHEN ENGINE SPEED IS LESS THAN 475 RPM. SEE DWG. E-03KJ01A.
- 20. CONTACT 3 OPENS WHEN ENGINE IS SHUTDOWN. SEE DWG. E-03KJ01A.
- 21. DELETED.
- 22. CONTACT 20A PROVIDES AN INTERLOCK TO THE ANNUNCIATOR. CONTACT CLOSURE AFTER DIESEL SPEED STABILIZED (4 SECONDS AFTER SPEED REACHES 475 RPM) CONTACT OPENS ON ENGINE SHUTDOWN SEE DWG. E-03KJ01A.
- 23. CONTACTS OPEN TO ANNUNCIATOR SEE DWG. E-03KJ01A & DWG. E-03KJ01B.

NO.	DATE	DESCRIPTION	BY	APP'D.
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				

BECHTEL CORPORATION  
SAN FRANCISCO, CALIF. 94103

10466 E-03KJ02(1)

REVIEW LEVEL 1

PDR RIDS

8410040193

