


LOGIC CABINET DC652

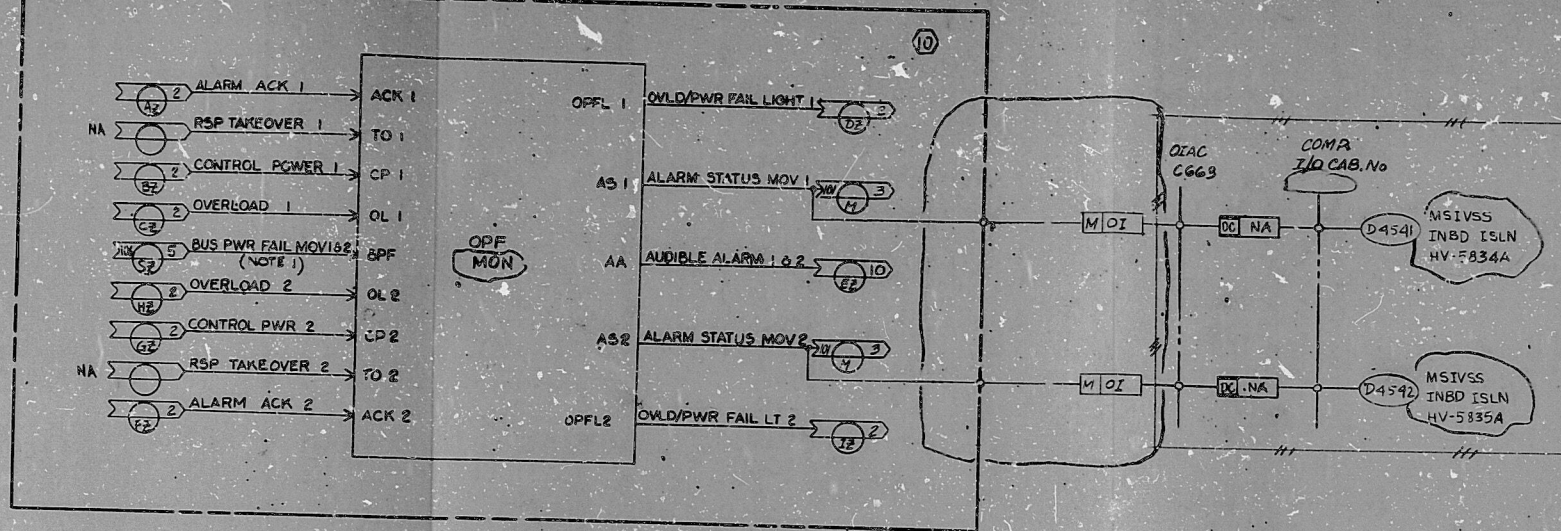

OVERLOAD/POWER FAILURE MONITOR

CROSS REFERENCE TABLE

OPF MD CKT. NO.	VALVE NO.	ACK.	RSP TKOVR	CONT. PWR.	OVERLOAD	BUS PWR FAIL	CHANNEL	LOGIC CAB. NO.	OVLD/PWR FAIL ARROW	AUDIBLE ALARM ARROW	ALARM STATUS ARROW	COMPR. I/O CAB.	COMPR. ID. No.	COMPUTER PT. DESCRIPTION
10	HV-5834A	AZ/2	NA	BZ/2	CB/2	J-106/SB/5	D	DC652	DB/2	EE/10	J-101/M/3	D4541	MSIVSS INBD ISLN HV-5834A	
	HV-5835A	FZ/2		GZ/2	HZ/2				IZ/2			D4542	HV-5835A	
10	HV-5836A	JZ/2		KZ/2	LZ/2				MZ/2	NY/10		D4543	HV-5836A	
	HV-5837A	OZ/2		PZ/2	QZ/2				RZ/2			D4544	HV-5837A	
11	HV-5834B	AZ/2		BZ/2	CB/2				DZ/2	EY/2	NA	D4545	MSIVSS OUTBD ISLN HV-5834B	
	HV-5835B	FZ/2		GZ/2	HZ/2				IZ/2			D4546	HV-5835B	
11	HV-5836B	JZ/2		KZ/2	LZ/2				MZ/2	NY/2		D4547	HV-5836B	
	HV-5837B	OZ/2		PZ/2	QZ/2				RZ/2			D4548	HV-5837B	
10	HV-5829A	AX/3		BX/3	CX/3				DX/3	EX/10		D4549	MSIVSS INBD SPLY HV-5829A	
	SPARE													
11	HV-5829B	FX/3	NA	GX/3	HX/3				IX/3	JX/12	NA	D4550	MSIVSS OUTBD SPLY HV-5829B	
	SPARE													

NOTES:
1. RESETS FOLLOWING RESTORATION OF POWER.

This drawing and the design it covers are the property of BECHTEL. They are hereby loaned and used only for the purpose intended. They are not to be reproduced, copied, loaned, exhibited, or used except in the limited way and under the conditions permitted by the written consent given by the issuer to the borrower.

P.R.C. APERTURE CARD

△					
△					
△					
△	DESIGN ERROR ISSUE				
△	ISSUED FOR CONSTRUCTION				
△	ADDED THIS SHEET				
DATE	BY	REVISED	BY	DATE	BY
1/29					
SCALE	NA	INDICATED	SB	DRAWN	BY
BECHTEL SAN FRANCISCO					
PUBLIC SERVICE ELECTRIC AND GAS COMPANY HOPE CREEK GENERATING STATION					
LOGIC DIAGRAM MSIV SEALING SYSTEM OVERLOAD/POWER FAILURE MONITOR					
JOB NO.	DRAWING NO.	REV.			
10055	J-72-0	13			

RIDS

8307250163

