

TABLE IV JET PUMP INSTRUMENTATION SUFFIX LETTER ASSIGNMENT

LOOP	11	12	13	14	15	16	17	18	19	20
FT IN034	A	C	E	G	I	K	M	O	Q	S
FT IN035	B	D	F	H	J	L	N	P	R	T
FT IN036	C	E	G	I	K	M	O	Q	S	U
FT IN037	D	F	H	J	L	N	P	R	T	V
FT IN038	E	G	I	K	M	O	Q	S	U	W
FT IN039	F	H	J	L	N	P	R	T	V	X
FT IN040	G	I	K	M	O	Q	S	U	W	Y
FT IN041	H	J	L	N	P	R	T	V	X	Z
FT IN042	I	K	M	O	Q	S	U	W	Y	AA
FT IN043	J	L	N	P	R	T	V	X	Z	AB
FT IN044	K	M	O	Q	S	U	W	Y	AA	AC
FT IN045	L	N	P	R	T	V	X	Z	AB	AD
FT IN046	M	O	Q	S	U	W	Y	AA	AC	AE
FT IN047	N	P	R	T	V	X	Z	AB	AD	AF
FT IN048	O	Q	S	U	W	Y	AA	AC	AE	AG
FT IN049	P	R	T	V	X	Z	AB	AD	AF	AH
FT IN050	Q	S	U	W	Y	AA	AC	AE	AG	AI
FT IN051	R	T	V	X	Z	AB	AD	AF	AH	AJ
FT IN052	S	U	W	Y	AA	AC	AE	AG	AI	AK
FT IN053	T	V	X	Z	AB	AD	AF	AH	AJ	AL
FT IN054	U	W	Y	AA	AC	AE	AG	AI	AK	AM
FT IN055	V	X	Z	AB	AD	AF	AH	AJ	AL	AN
FT IN056	W	Y	AA	AC	AE	AG	AI	AK	AM	AO
FT IN057	X	Z	AB	AD	AF	AH	AJ	AL	AN	AP
FT IN058	Y	AA	AC	AE	AG	AI	AK	AM	AO	AQ
FT IN059	Z	AB	AD	AF	AH	AJ	AL	AN	AP	AR
FT IN060	AA	AC	AE	AG	AI	AK	AM	AO	AQ	AS
FT IN061	AB	AD	AF	AH	AJ	AL	AN	AP	AR	AT
FT IN062	AC	AE	AG	AI	AK	AM	AO	AQ	AS	AV
FT IN063	AD	AF	AH	AJ	AL	AN	AP	AR	AT	AW
FT IN064	AE	AG	AI	AK	AM	AO	AQ	AS	AV	AX
FT IN065	AF	AH	AJ	AL	AN	AP	AR	AT	AW	AY
FT IN066	AG	AI	AK	AM	AO	AQ	AS	AV	AX	AZ
FT IN067	AH	AJ	AL	AN	AP	AR	AT	AW	AY	BA
FT IN068	AI	AK	AM	AO	AQ	AS	AV	AX	AZ	BB
FT IN069	AJ	AL	AN	AP	AR	AT	AW	AY	BA	BC
FT IN070	AK	AM	AO	AQ	AS	AV	AX	AZ	BB	BD
FT IN071	AL	AN	AP	AR	AT	AW	AY	BA	BC	BE
FT IN072	AM	AO	AQ	AS	AV	AX	AZ	BB	BD	BF
FT IN073	AN	AP	AR	AT	AW	AY	BA	BC	BE	BG
FT IN074	AO	AQ	AS	AV	AX	AZ	BB	BD	BF	BH
FT IN075	AP	AR	AT	AW	AY	BA	BC	BE	BG	BI
FT IN076	AQ	AS	AV	AX	AZ	BB	BD	BF	BH	BJ
FT IN077	AR	AT	AW	AY	BA	BC	BE	BG	BI	BK
FT IN078	AS	AV	AX	AZ	BB	BD	BF	BH	BJ	BL
FT IN079	AT	AW	AY	BA	BC	BE	BG	BI	BK	BM
FT IN080	AV	AX	AZ	BB	BD	BF	BH	BJ	BL	BN
FT IN081	AW	AY	BA	BC	BE	BG	BI	BK	BM	BO
FT IN082	AX	AZ	BB	BD	BF	BH	BJ	BL	BN	BP
FT IN083	AY	BA	BC	BE	BG	BI	BK	BM	BO	BQ
FT IN084	AZ	BB	BD	BF	BH	BJ	BL	BN	BP	BR
FT IN085	BA	BC	BE	BG	BI	BK	BM	BO	BQ	BS
FT IN086	BB	BD	BF	BH	BJ	BL	BN	BP	BR	BT
FT IN087	BC	BE	BG	BI	BK	BM	BO	BQ	BS	BU
FT IN088	BD	BF	BH	BJ	BL	BN	BP	BR	BT	BV
FT IN089	BE	BG	BI	BK	BM	BO	BQ	BS	BU	BW
FT IN090	BF	BH	BJ	BL	BN	BP	BR	BT	BV	BX
FT IN091	BG	BI	BK	BM	BO	BQ	BS	BU	BW	BY
FT IN092	BH	BJ	BL	BN	BP	BR	BT	BV	BX	BZ
FT IN093	BI	BK	BM	BO	BQ	BS	BU	BW	BY	CA
FT IN094	BJ	BL	BN	BP	BR	BT	BV	BX	BZ	CB
FT IN095	BK	BM	BO	BQ	BS	BU	BW	BY	CA	CC
FT IN096	BL	BN	BP	BR	BT	BV	BX	BZ	CB	CD
FT IN097	BM	BO	BQ	BS	BU	BW	BY	CA	CC	CE
FT IN098	BN	BP	BR	BT	BV	BX	BZ	CB	CD	CF
FT IN099	BO	BQ	BS	BU	BW	BY	CA	CC	CE	CG
FT IN100	BP	BR	BT	BV	BX	BZ	CB	CD	CF	CH

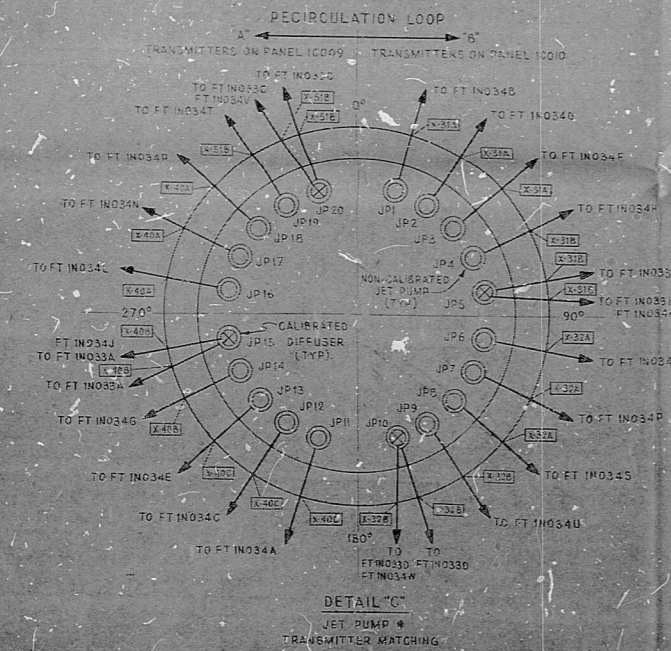


TABLE I: ELEVATION CORRELATION CHART

REFERENCE	(COLD VESSEL) 0 PSIG ABOVE VESSEL ZERO	DESCRIPTION OF TRIPS	INSTRUMENTS PROVIDING TRIP	REACTOR VESSEL NUMBER (REF)	CONTROL ROOM WATER LEVEL INDICATION AND TRIP LEVELS (SEE NOTE 2)
TOP HEAD FLANGE	898.0				
NOZZLE N3 A,B,C,D	850.5				
INSTRUMENT LINE NOZZLE N2 A,B,C,D	899.0				
FEEDWATER SYSTEM & REACTOR PROTECTION SYSTEM INSTRUMENT ZERO EXCEPT FUEL ZONE BOTTOM OF DRYER ORIFT	527.5				
INSTRUMENT LINE NOZZLE N1 A,B	517.0				
INSTRUMENT LINE NOZZLE N1 A,B,C,D	366.0				
TOP OF ACTIVE FUEL ZONE	308.5				
ZONE WATER LEVEL ZONE	308.5				
JET PUMP INSTRUMENT ZERO	152.0				
JET PUMP NOZZLE 9A,B	143.0				
JET PUMP DIFFUSER TAG	143.0				

TABLE II: PRESSURE INSTRUMENT UTILIZATION

TRANSMITTER NUMBER	DIV	POWER SUPPLY	TRIP	FUNCTION
PT IN 070A	IA	K613A-E	PS IN 678A	RPS
PT IN 070B	IB	K613B-F	PS IN 678B	RPS
PT IN 070C	IC	K613C-G	PS IN 678C	RPS
PT IN 070D	ID	K613D-H	PS IN 678D	RPS
PT IN 070E	IE	K613E-I	PS IN 678E	RPS
PT IN 070F	IF	K613F-J	PS IN 678F	RPS
PT IN 070G	IG	K613G-K	PS IN 678G	RPS
PT IN 070H	IH	K613H-L	PS IN 678H	RPS
PT IN 070I	II	K613I-M	PS IN 678I	RPS
PT IN 070J	IJ	K613J-N	PS IN 678J	RPS
PT IN 070K	IK	K613K-O	PS IN 678K	RPS
PT IN 070L	IL	K613L-P	PS IN 678L	RPS
PT IN 070M	IM	K613M-Q	PS IN 678M	RPS
PT IN 070N	IN	K613N-R	PS IN 678N	RPS
PT IN 070O	IO	K613O-S	PS IN 678O	RPS
PT IN 070P	IP	K613P-T	PS IN 678P	RPS
PT IN 070Q	IQ	K613Q-U	PS IN 678Q	RPS
PT IN 070R	IR	K613R-V	PS IN 678R	RPS
PT IN 070S	IS	K613S-W	PS IN 678S	RPS
PT IN 070T	IT	K613T-X	PS IN 678T	RPS
PT IN 070U	IU	K613U-Y	PS IN 678U	RPS
PT IN 070V	IV	K613V-Z	PS IN 678V	RPS
PT IN 070W	IW	K613W-AA	PS IN 678W	RPS
PT IN 070X	IX	K613X-AB	PS IN 678X	RPS
PT IN 070Y	IY	K613Y-AC	PS IN 678Y	RPS
PT IN 070Z	IZ	K613Z-AD	PS IN 678Z	RPS
PT IN 070AA	IAA	K613AA-AE	PS IN 678AA	RPS
PT IN 070AB	IAB	K613AB-AF	PS IN 678AB	RPS
PT IN 070AC	IAC	K613AC-AG	PS IN 678AC	RPS
PT IN 070AD	IAD	K613AD-AH	PS IN 678AD	RPS
PT IN 070AE	IAE	K613AE-AI	PS IN 678AE	RPS
PT IN 070AF	IAF	K613AF-AJ	PS IN 678AF	RPS
PT IN 070AG	IAG	K613AG-AL	PS IN 678AG	RPS
PT IN 070AH	IAH	K613AH-AM	PS IN 678AH	RPS
PT IN 070AI	IAI	K613AI-AN	PS IN 678AI	RPS
PT IN 070AJ	IAJ	K613AJ-AO	PS IN 678AJ	RPS
PT IN 070AK	IAK	K613AK-AP	PS IN 678AK	RPS
PT IN 070AL	IAL	K613AL-AQ	PS IN 678AL	RPS
PT IN 070AM	IAM	K613AM-AR	PS IN 678AM	RPS
PT IN 070AN	IAN	K613AN-AS	PS IN 678AN	RPS
PT IN 070AO	IAO	K613AO-AT	PS IN 678AO	RPS
PT IN 070AP	IAP	K613AP-AU	PS IN 678AP	RPS
PT IN 070AQ	IAQ	K613AQ-AV	PS IN 678AQ	RPS
PT IN 070AR	IAR	K613AR-AW	PS IN 678AR	RPS
PT IN 070AS	IAS	K613AS-AX	PS IN 678AS	RPS
PT IN 070AT	IAT	K613AT-AY	PS IN 678AT	RPS
PT IN 070AU	IAU	K613AU-AZ	PS IN 678AU	RPS
PT IN 070AV	IAV	K613AV-BA	PS IN 678AV	RPS
PT IN 070AW	IAW	K613AW-BB	PS IN 678AW	RPS
PT IN 070AX	IAX	K613AX-BB	PS IN 678AX	RPS
PT IN 070AY	IAY	K613AY-BC	PS IN 678AY	RPS
PT IN 070AZ	IAZ	K613AZ-BC	PS IN 678AZ	RPS
PT IN 070BA	IBA	K613BA-BC	PS IN 678BA	RPS
PT IN 070BB	IBB	K613BB-BC	PS IN 678BB	RPS
PT IN 070BC	IBC	K613BC-BC	PS IN 678BC	RPS
PT IN 070BD	IBD	K613BD-BC	PS IN 678BD	RPS
PT IN 070BE	IBE	K613BE-BC	PS IN 678BE	RPS
PT IN 070BF	IBF	K613BF-BC	PS IN 678BF	RPS
PT IN 070BG	IBG	K613BG-BC	PS IN 678BG	RPS
PT IN 070BH	IBH	K613BH-BC	PS IN 678BH	RPS
PT IN 070BI	IBI	K613BI-BC	PS IN 678BI	RPS
PT IN 070BJ	IBJ	K613BJ-BC	PS IN 678BJ	RPS
PT IN 070BK	IBK	K613BK-BC	PS IN 678BK	RPS
PT IN 070BL	IBL	K613BL-BC	PS IN 678BL	RPS
PT IN 070BM	IBM	K613BM-BC	PS IN 678BM	RPS
PT IN 070BN	IBN	K613BN-BC	PS IN 678BN	RPS
PT IN 070BO	IBO	K613BO-BC	PS IN 678BO	RPS
PT IN 070BP	IBP	K613BP-BC	PS IN 678BP	RPS
PT IN 070BQ	IBQ	K613BQ-BC	PS IN 678BQ	RPS
PT IN 070BR	IBR	K613BR-BC	PS IN 678BR	RPS
PT IN 070BS	IBS	K613BS-BC	PS IN 678BS	RPS
PT IN 070BT	IBT	K613BT-BC	PS IN 678BT	RPS
PT IN 070BU	IBU	K613BU-BC	PS IN 678BU	RPS
PT IN 070BV	IBV	K613BV-BC	PS IN 678BV	RPS
PT IN 070BW	IBW	K613BW-BC	PS IN 678BW	RPS
PT IN 070BX	IBX	K613BX-BC	PS IN 678BX	RPS
PT IN 070BY	IBY	K613BY-BC	PS IN 678BY	RPS
PT IN 070BZ	IBZ	K613BZ-BC	PS IN 678BZ	RPS
PT IN 070CA	ICA	K613CA-BC	PS IN 678CA	RPS
PT IN 070CB	ICB	K613CB-BC	PS IN 678CB	RPS
PT IN 070CC	ICC	K613CC-BC	PS IN 678CC	RPS
PT IN 070CD	ICD	K613CD-BC	PS IN 678CD	RPS
PT IN 070CE	ICE	K613CE-BC	PS IN 678CE	RPS
PT IN 070CF	ICF	K613CF-BC	PS IN 678CF	RPS
PT IN 070CG	ICG	K613CG-BC	PS IN 678CG	RPS
PT IN 070CH	ICH	K613CH-BC	PS IN 678CH	RPS
PT IN 070CI	ICI	K613CI-BC	PS IN 678CI	RPS
PT IN 070CJ	ICJ	K613CJ-BC	PS IN 678CJ	RPS
PT IN 070CK	ICK	K613CK-BC	PS IN 678CK	RPS
PT IN 070CL	ICL	K613CL-BC	PS IN 678CL	RPS
PT IN 070CM				

RIDS

8210040262

