



- NOTES
1. LOW LEVEL TRANSMITTER AND DIFFERENTIAL PRESSURE TRANSMITTER INPUTS TO P-88/89 SEE P & ID M-207 SH 2
 2. REMOVE STRAINER DURING NORMAL OPERATION.
 3. REMOVE STRAINER DURING STARTUP OPERATION.
 4. ALL AUXILIARY FEEDWATER SYSTEM SIGNALS TO THE CRITICAL FLOW TRANS MONITOR EXCEPT AC VALUE POSITION, DERIVED FROM THE SIGNAL CHANGES L-100 AND L-102. CONNECTIONS ARE MADE AT THE CFM EXHAUSTION CABLE'S
 5. VALVE POSITION INDICATOR NOT PROVIDED WITH THIS POSITION PER 50-10-242.

ANSTEC APERTURE CARD

27	ANSTEC APERTURE CARD	DATE	REV
PALISADES PLANT CONSUMERS POWER COMPANY			
PIPING & INSTRUMENT DIAGRAM AUXILIARY FEEDWATER SYSTEM			
9-750	M-207 SH 2	27	

96003280179

PDR RID

