


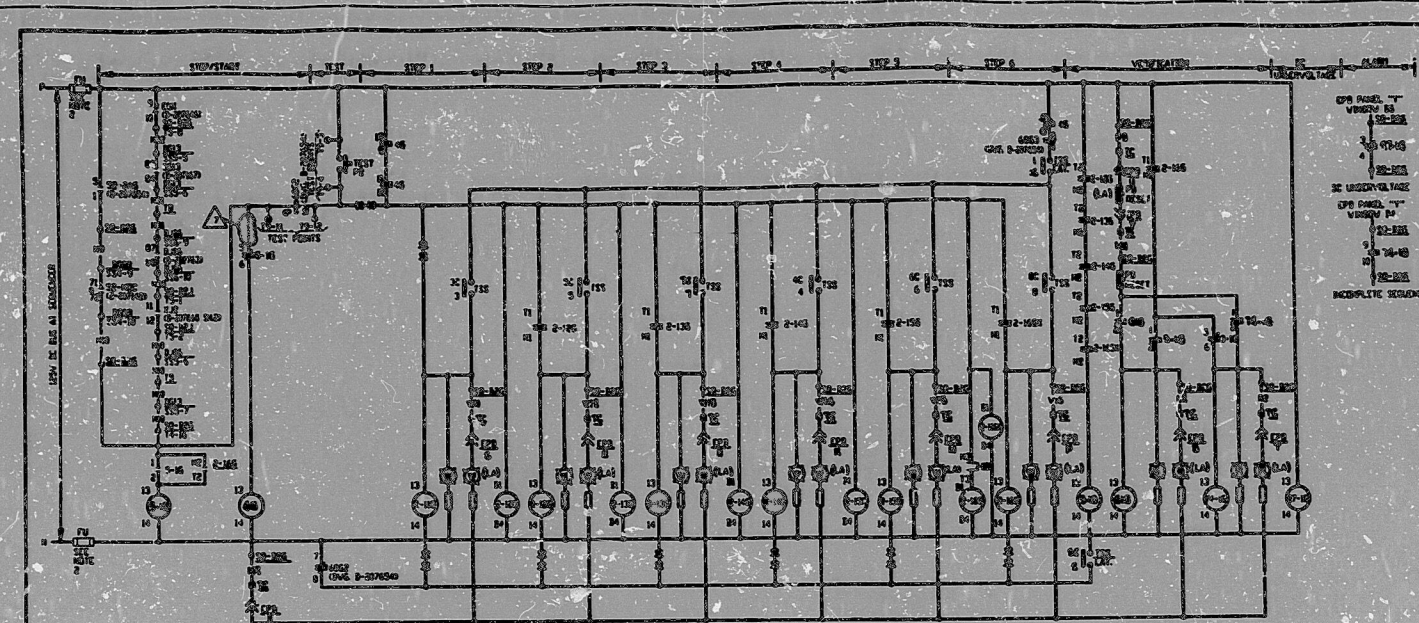

RELAY	DESCRIPTION	CONTACTS	TERMINALS
RELAY 1	RELAY 1	CONTACTS	TERMINALS
RELAY 2	RELAY 2	CONTACTS	TERMINALS
RELAY 3	RELAY 3	CONTACTS	TERMINALS
RELAY 4	RELAY 4	CONTACTS	TERMINALS
RELAY 5	RELAY 5	CONTACTS	TERMINALS
RELAY 6	RELAY 6	CONTACTS	TERMINALS
RELAY 7	RELAY 7	CONTACTS	TERMINALS
RELAY 8	RELAY 8	CONTACTS	TERMINALS
RELAY 9	RELAY 9	CONTACTS	TERMINALS
RELAY 10	RELAY 10	CONTACTS	TERMINALS

NOTES


1. CHECKED

2. REFER TO THE FUSE MANUAL, A-207652 FOR FUSE SIZE AND TYPE.



REFERENCE DRAWINGS

A-17-329 ELECTRICAL GENERAL DETAILS AND NOTES

D-207652 LOGIC WIRING SCHEMATIC, 28 AUTO START & LOGIC

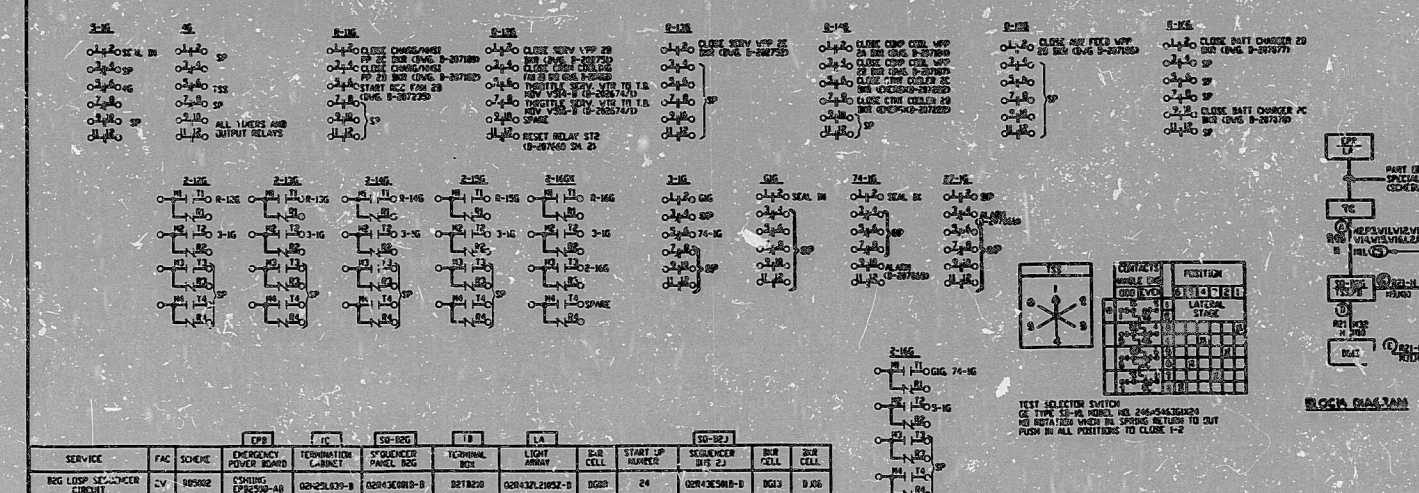

SERVICE	RELAY	CONTACTS	TERMINALS
RELAY 1	RELAY 1	CONTACTS	TERMINALS
RELAY 2	RELAY 2	CONTACTS	TERMINALS
RELAY 3	RELAY 3	CONTACTS	TERMINALS
RELAY 4	RELAY 4	CONTACTS	TERMINALS
RELAY 5	RELAY 5	CONTACTS	TERMINALS
RELAY 6	RELAY 6	CONTACTS	TERMINALS
RELAY 7	RELAY 7	CONTACTS	TERMINALS
RELAY 8	RELAY 8	CONTACTS	TERMINALS
RELAY 9	RELAY 9	CONTACTS	TERMINALS
RELAY 10	RELAY 10	CONTACTS	TERMINALS

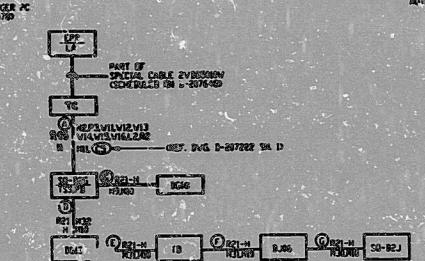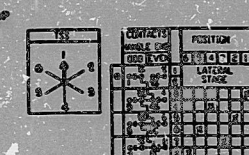

BLOCK DIAGRAM

ALABAMA POWER COMPANY
SOUTHERN COMPANY SERVICES, INC.
FOR
ALABAMA POWER COMPANY
SOUTHERN COMPANY SERVICES, INC.
D-207650
FSR FIG. 8.3-40 SH. 2

ANSTEC
APERTURE
CARD

PDR RIDS

9605220356

