



- NOTES:
1. ALL HEADER VALVES ARE LOCATED ON PIPING AND MECHANICAL AREA DRAWING. 500001-500113
 2. ALL QUICK DISCONNECT VALVES ARE LOCATED ON PIPING AND MECHANICAL AREA DRAWING. 500001-500113.
 3. NUMBER NEXT TO HEADER, INDICATES NO. OF QUICK DISCONNECT VALVES PER HEADER
 4. ALL QUICK DISCONNECTS ARE ACCOMPANIED BY VELOCITY FUSE & SHUTOFF VALVE SEE DWG. NO. 049080.
 5. ALL SERVICE AIR PIPING WITH EXCEPTION OF TEST AND VENT PIPING SHALL BE 1" MINIMUM.
 6. USE 3/4" CONFORMATICS 3-WAY, CARBON STEEL, TWO POSITION, 90° CYCLE, MODEL S, UNDER SPEC. 8711.

SERVICE AIR UNIT 1

ISOMETRIC OF SHEET 4
HEADER LINES ONLY

P. G. & E. CO.	DRAWING NO	CHANGE
	102025	47
SHEET 6 OF SHEETS		