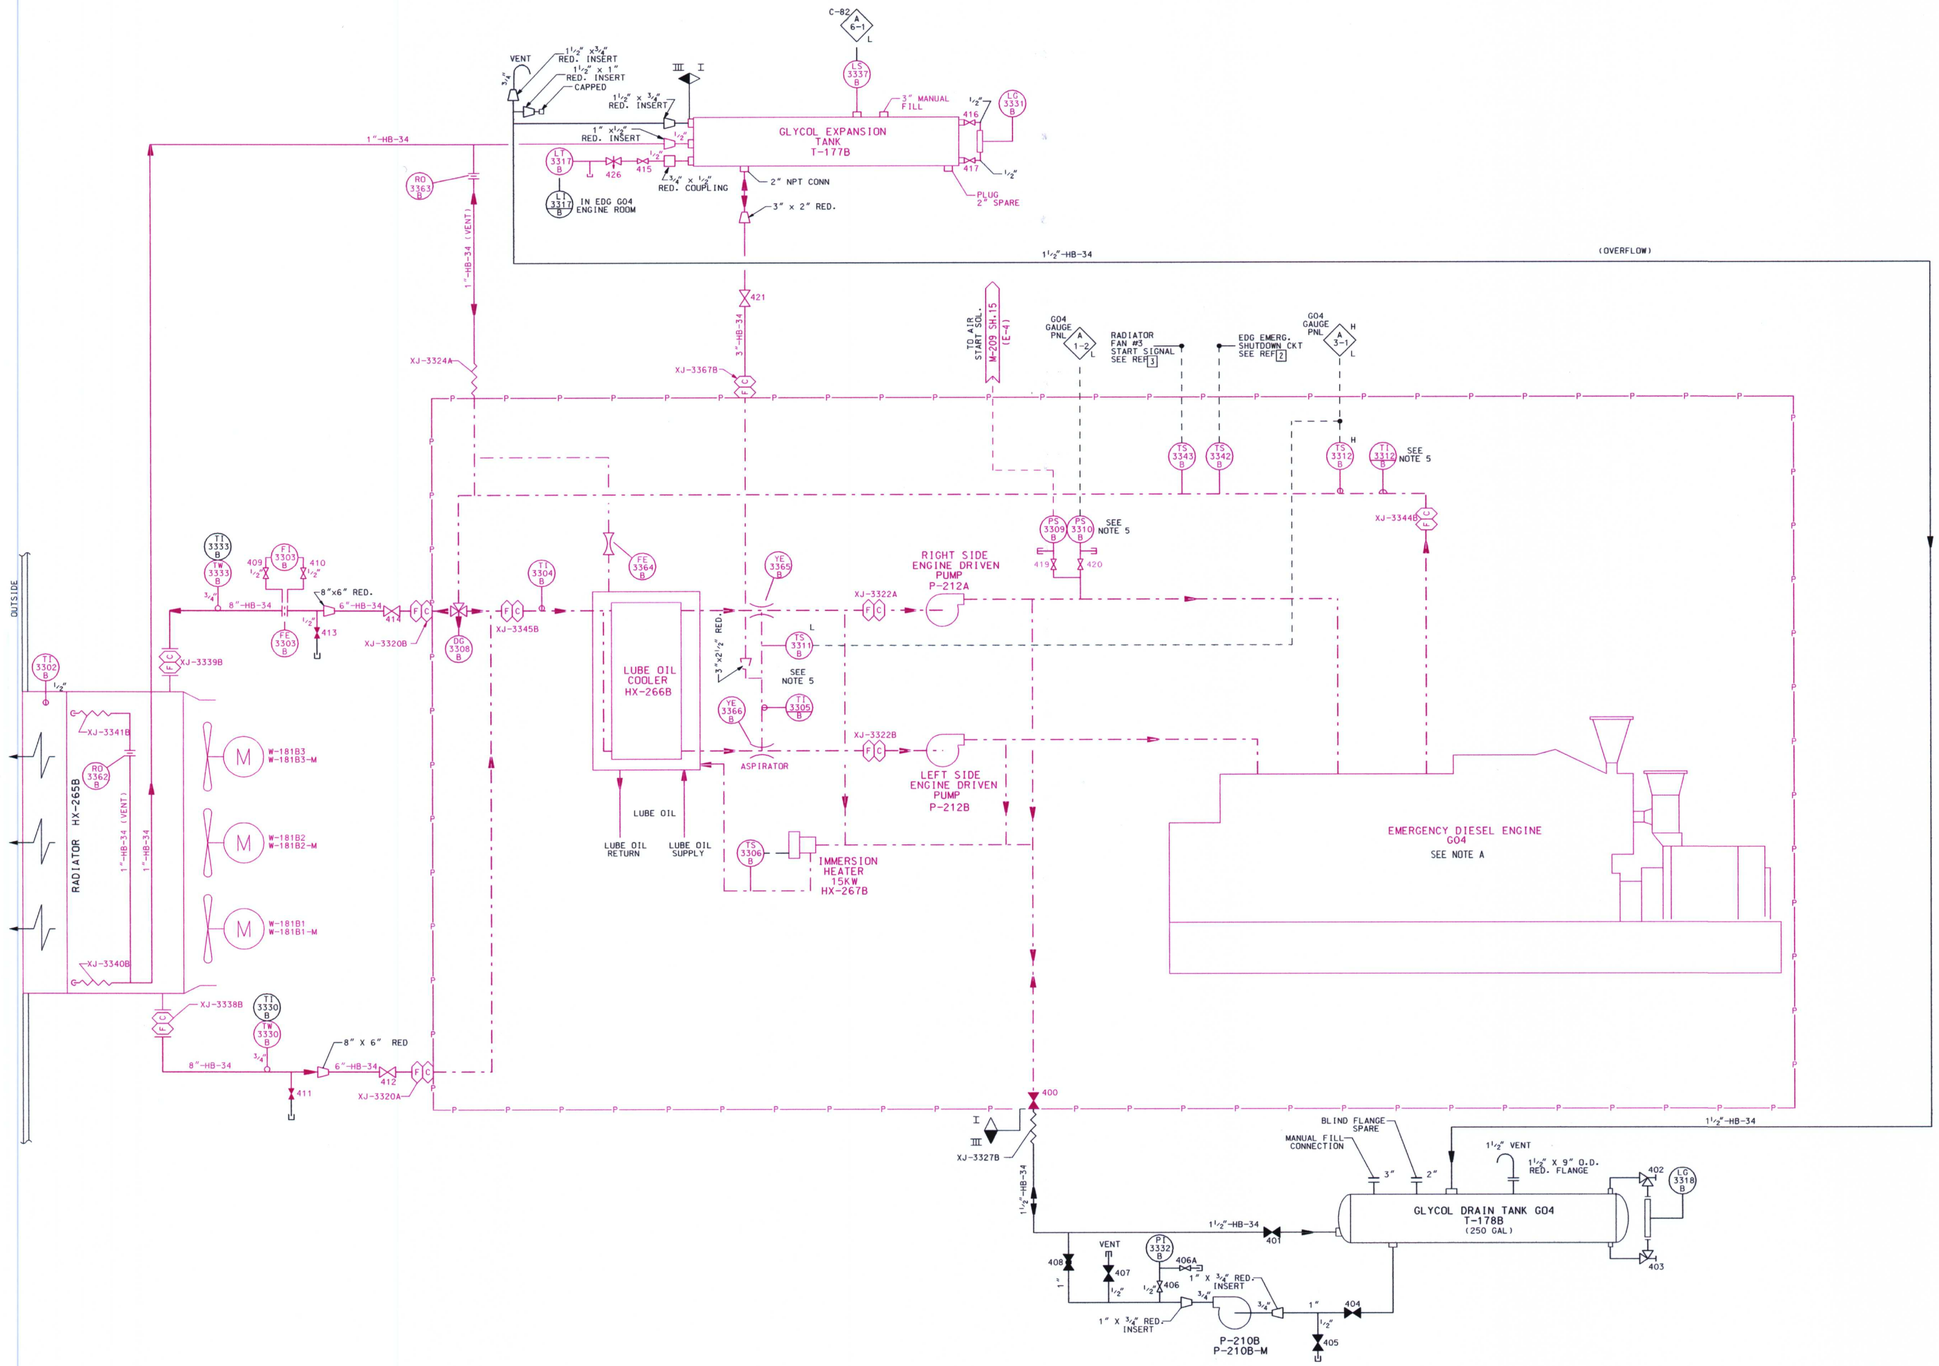

LEGEND:

EXPANSION JOINT

INDICATES LIMITS OF ENGINE SKID AND/OR EQUIPMENT

INDICATES PIPING ON ENGINE SKID

ASPIRATOR

NOTES:

1. ALL WORK TO BE CLASS I UNLESS OTHERWISE NOTED THUS III I
2. FOR GENERAL NOTES & LEGEND SEE BECHTEL DWG M-200 UNLESS SHOWN OTHERWISE.
3. VALVE 408 IS UTILIZED TO CONTROL FLOW WHEN FILLING SYSTEM. VERIFY THAT P-210B DISCHARGE PIPING IS FULL PRIOR TO OPENING VALVE.
4. ALL VALVE NUMBERS ARE PRECEDED BY DG-.

NOTES:

5. SWITCH AND INDICATOR LOCATED ON SKID-MOUNTED PANEL.

NOTE A:
EMERGENCY DIESEL ENGINE PERFORMS SAFETY RELATED FUNCTION. HOWEVER, NOT ALL COMPONENTS ON ENGINE ARE QA-SCOPED.

LEGEND

MAGENTA - IN SCOPE LR

BLACK - NOT IN SCOPE LR

1070

LR-M-227 SH-2
UNIT 1 & 2
GLYCOL COOLING SYSTEM
DIESEL GENERATOR BUILDING
REV. 1 DATE:10-17-03