

**To** : DOCUMENT CONTROL DESK  
**Facility** : MP Department : 806  
**Address** : NUC REGULATORY COMMISSION (0140)  
DOCUMENT CONTROL DESK  
WASHINGTON, DC 20555

**From** : NDS CONT DOCUMENTS  
**Date/Time** : 03/29/10 08:50

**Trans No.** : 000118632 **Transmittal Group Id:** 101410  
**Total Items:** 00001

## PASSPORT DOCUMENT

## TRANSMITTAL

Page: 1



Item	Facility	Type	Sub	Document Number / Title	Sheet	Revision	Doc Date	Copy #	Media	Copies
* 0001	MP	PROC	CH	CP 3804AC LIQUID WASTE SAMPLE SINK		003			P	01

Please check the appropriate response and return form to NDS Bldg 475/3  
Millstone Power Station or Fax to 860-440-2057.

☐  
☐  
☐

All documents received.

Documents noted above not received (identify those not received).

I no longer require distribution of these documents.

Date: \_\_\_\_\_ Signature: \_\_\_\_\_




A001  
NR2

02/26/08  
Approval Date

02/27/08  
Effective Date



## Procedure Action Request

Document No.: CP 3804AC	Writer: Initiator: Provencher Schumacher	Rev. No. 003	Minor Rev. 00
Title: Liquid Waste Sample Sink			
For New Documents: Document is QA <input checked="" type="checkbox"/> DH Title:			
(Include distribution information on page 2)			
<input checked="" type="checkbox"/> Revision <input type="checkbox"/> Minor Revision <input type="checkbox"/> Cleanup Revision <input type="checkbox"/> Biennial Review			
<input type="checkbox"/> Void (Cancel) <input type="checkbox"/> Suspend (Do Not Use) <input type="checkbox"/> Expire <input type="checkbox"/> Superseded By: _____			
Comments: <input type="checkbox"/> Administrative Correction FLS: _____			
Associated ARs 09001945			

Reviews	Print	Sign	Date	Department
<input type="checkbox"/>				
<input type="checkbox"/>				
<input type="checkbox"/>				
<input type="checkbox"/>				
<input type="checkbox"/>				
WC 9 Att 3 Req. <input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	<input checked="" type="checkbox"/> Dave Provencher		03/09/10	NPO
Licensing Basis / RCD (50.59/72.48 Screen Req. <input type="checkbox"/> Yes <input checked="" type="checkbox"/> No)	<input checked="" type="checkbox"/> Dave Provencher		03/09/10	NPO
Tech Independent	<input checked="" type="checkbox"/> NOAH SCHUMACHER		3/2/10	CHEM

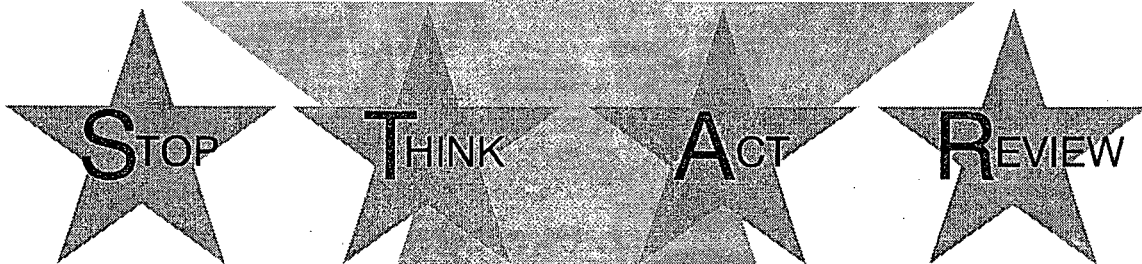
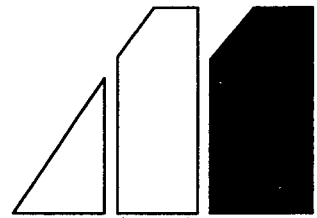
Validation	<input checked="" type="checkbox"/> None <input type="checkbox"/> Field - Use MP-05-DC-SAP01-004 <input type="checkbox"/> Simulated Performance - Use MP-05-DC-SAP01-004 <input type="checkbox"/> Table Top and Walk-through <input type="checkbox"/> Comparison			
(minimum of two)	Print	Sign	Date	Dept
Coordinator				
Member				

Training: ☒ None ☐ Nuclear Training ☐ Briefing ☐ Familiarization

<input checked="" type="checkbox"/> <b>SQR Review and Approval</b> Approval <input type="checkbox"/> Disapproval <input type="checkbox"/>  3/23/10 (1) SQR Sign/Date  3/23/10 (2) Department Head Approval Sign	<input type="checkbox"/> <b>FSRC Review and Approval</b> N/A (1) Department Head Sign/Date (2) FSRC Meeting Number (3) FSRC Approval Sign	<input type="checkbox"/> <b>Department Head Review and Approval</b> N/A (1) Department Head Approval Sign
--	---	---

Approval Date: 3/23/10 Effective Date: 3/30/10 WC 9 database  
☐ Updated If Req.

**MILLSTON POWER STATION  
CHEMISTRY PROCEDURE**



**Liquid Waste Sample Sink**

**CP 3804AC  
Rev. 003-00**

Approval Date: 03/23/10

Effective Date: 03/30/10

Level of Use  
Reference

**Millstone Unit 3  
Chemistry Procedure**

**Liquid Waste Sample Sink**

**TABLE OF CONTENTS**

1.	PURPOSE .....	2
2.	PREREQUISITES .....	2
3.	PRECAUTIONS .....	3
4.	INSTRUCTIONS .....	4
4.1	Low Level Waste Drain Tank A Grab Sample .....	4
4.2	Low Level Waste Drain Tank B Grab Sample .....	6
4.3	Waste Test Tank A Grab Sample .....	8
4.4	Waste Test Tank B Grab Sample .....	10
4.5	High Level Waste Drain Tank A Grab Sample .....	12
4.6	High Level Waste Drain Tank B Grab Sample .....	14
4.7	Waste Demineralizer Effluent Grab Sample .....	16
4.8	Containment Drains Sump Grab Sample .....	18
4.9	Waste Bottom Holding Tank Grab Sample .....	21
4.10	Low Level Waste Drain Tank A Low Pressure Vessel Sample ....	23
4.11	Low Level Waste Drain Tank B Low Pressure Vessel sample ....	26
4.12	Waste Test Tank A Low Pressure Vessel Sample .....	29
4.13	Waste Test Tank B Low Pressure Vessel Sample .....	32
4.14	High Level Waste Drain Tank A Low Pressure Vessel Sample ....	35
4.15	High Level Waste Drain Tank B Low Pressure Vessel Sample ....	38
4.16	Waste Demineralizer Effluent Low Pressure Vessel Sample .....	41
4.17	Containment Drains Sump Low Pressure Vessel Sample .....	44
4.18	Waste Bottom Holding Tank Low Pressure Vessel Sample .....	47
4.19	Low Level Waste Drain Tank A Alternate Sample Point .....	50
4.20	Low Level Waste Drain Tank B Alternate Sample Point .....	52
4.21	Waste Test Tank A Alternate Sample Point .....	54
4.22	Waste Test Tank B Alternate Sample Point .....	56
5.	REVIEW AND SIGNOFF .....	58
6.	REFERENCES .....	58
7.	SUMMARY OF CHANGES .....	58
	ATTACHMENTS AND FORMS	
	Attachment 1, "Recirculation Times, Liquid Waste Tanks and Sumps" ...	59
	Attachment 2, "Instrument Valve Block Configuration" .....	60

**Level of Use  
Reference**



CP 3804AC  
Rev. 003-00  
1 of 60

## 1. PURPOSE

### 1.1 Objective

Provide instructions for obtaining the following samples:

- Liquid waste grab samples and low pressure vessel samples from 3SSR – SAS2, Liquid Waste Sample Sink
- Liquid waste grab samples from alternate sample points

### 1.2 Discussion

The Sections of this procedure are distinct Sections which can be performed independently of each other.

## 2. PREREQUISITES

### 2.1 General

2.1.1 Ventilation is operating at the liquid waste sample sink hood.

2.1.2 Tank being sampled has recirculated for at least the amount of time listed in Attachment 1, "Recirculation Times, Liquid Waste Tanks and Sumps" prior to sampling.

### 2.2 Tools and Consumables

- Sample bottles
- Lab coat
- Disposable lab gloves
- Demineralized water
- Low pressure sample vessel

Sections 4.19 through 4.22 also require:

- 9/16" wrench or adjustable wrench
- Purge bottle (minimum volume 1.5 liter)

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
2 of 60

### 3. PRECAUTIONS

- 3.1 Samples may be radioactive. Proper Health Physics practices and the RWP must be followed to prevent the spread of contamination.
- 3.2 Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.



#### 4. INSTRUCTIONS

##### 4.1 Low Level Waste Drain Tank A Grab Sample



**A L A R A**



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.1.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that low level waste drain tank A sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
4 of 60

- 4.1.2 VERIFY open 3SSR – V897, “Low Level Waste Drain Tank 4A Sample Isolation.”
- 4.1.3 OPEN 3SSR – V230, “Low Level Waste Drain Tank 4A Grab Valve.”
- 4.1.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR – FI252A
  - MEASURE flowrate at outlet of 3SSR – V230, “Low Level Waste Drain Tank 4A Grab Valve”
- b. DIVIDE 6 by sample flow rate in lpm to obtain purge time in minutes.
- 4.1.5 WHEN purge time has elapsed, COLLECT sample.
- 4.1.6 CLOSE 3SSR – V230, “Low Level Waste Drain Tank 4A Grab Valve.”

– End of Section 4.1 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
5 of 60



## 4.2 Low Level Waste Drain Tank B Grab Sample



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

### 4.2.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that low level waste drain tank B sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
6 of 60

- 4.2.2 VERIFY open 3SSR–V896, “Low Level Waste Drain Tank 4B Sample Isolation.”
- 4.2.3 OPEN 3SSR–V232, “Low Level Waste Drain Tank 4B Grab Valve.”
- 4.2.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR–FI252B
  - MEASURE flowrate at outlet of 3SSR–V232, “Low Level Waste Drain Tank 4B Grab Valve”
- b. DIVIDE 6 by sample flow rate in lpm to obtain purge time in minutes.
- 4.2.5 WHEN purge time has elapsed, COLLECT sample.
- 4.2.6 CLOSE 3SSR–V232, “Low Level Waste Drain Tank 4B Grab Valve.”

– End of Section 4.2 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
7 of 60

### 4.3 Waste Test Tank A Grab Sample



ALARA



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

#### 4.3.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that waste test tank A sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
8 of 60

- 4.3.2 START 3LWS–P8A, “Waste Test Tank Heating Pump,” in service as follows:
- PLACE “WASTE TEST TANK HEATING PUMP P8A” pump control switch in “START.”
  - WAIT 30 seconds.
- 4.3.3 VERIFY open 3SSR–V898, “Waste Test Tank 3A Sample Isolation.”
- 4.3.4 OPEN 3SSR–V228, “Waste Test Tank 3A Grab Valve.”
- 4.3.5 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- DETERMINE sample flow rate in lpm using one of the following methods:
    - OBSERVE flow rate on 3SSR–FI137
    - MEASURE flowrate at outlet of 3SSR–V228, “Waste Test Tank 3A Grab Valve”
  - DIVIDE 17 by sample flow rate in lpm to obtain purge time in minutes.
- 4.3.6 WHEN purge time has elapsed, COLLECT sample.
- 4.3.7 CLOSE 3SSR–V228, “Waste Test Tank 3A Grab Valve.”
- 4.3.8 PLACE “WASTE TEST TANK HEATING PUMP P8A” pump control switch in “STOP.”

– End of Section 4.3 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
9 of 60

#### 4.4 Waste Test Tank B Grab Sample



ALARA



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.4.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

a. **CONSULT** with Health Physics and **DETERMINE** the following:

- Protective clothing
- Respiratory protection
- Dosimetry
- Route to be followed to and from liquid waste sample sink
- Stay times
- Expected dose and dose rate
- Sample volume
- Sample handling precautions
- Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material

b. **NOTIFY MCRO OR SM/US** that waste test tank B sample will be collected by a Liquid Waste PASS Team consisting of the following:

- At least one Chemistry Technician
- At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
10 of 60

- 4.4.2 VERIFY open 3SSR – V871, “Waste Test Tank 3B Sample Isolation.”
- 4.4.3 START 3LWS – P8B, “Waste Test Tank Heating Pump,” in service as follows:
- PLACE “WASTE TEST TANK HEATING PUMP P8B” pump control switch in “START.”
  - WAIT 30 seconds.
- 4.4.4 OPEN 3SSR – V856, “Waste Test Tank 3B Sample Grab Valve.”
- 4.4.5 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- DETERMINE sample flow rate in lpm using one of the following methods:
    - OBSERVE flow rate on 3SSR – FI259
    - MEASURE flowrate at outlet of 3SSR – V856, “Waste Test Tank 3B Sample Grab Valve”
  - DIVIDE 17 by sample flow rate in lpm to obtain purge time in minutes.
- 4.4.6 WHEN purge time has elapsed, COLLECT sample.
- 4.4.7 CLOSE 3SSR – V856, “Waste Test Tank 3B Sample Grab Valve.”
- 4.4.8 PLACE “WASTE TEST TANK HEATING PUMP P8B” pump control switch in “STOP.”

– End of Section 4.4 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
11 of 60

#### 4.5 High Level Waste Drain Tank A Grab Sample



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

##### 4.5.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

###### a. **CONSULT** with Health Physics and **DETERMINE** the following:

- Protective clothing
- Respiratory protection
- Dosimetry
- Route to be followed to and from liquid waste sample sink
- Stay times
- Expected dose and dose rate
- Sample volume
- Sample handling precautions
- Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material

###### b. **NOTIFY MCRO OR SM/US** that high level waste drain tank A sample will be collected by a Liquid Waste PASS Team consisting of the following:

- At least one Chemistry Technician
- At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
12 of 60

- 4.5.2 VERIFY open 3SSR – V900, “High Level Waste Drain Tank 1A Sample Isolation.”
- 4.5.3 OPEN 3SSR – V224, “High Level Waste Drain Tank 1A Grab Valve.”
- 4.5.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR – FI250A
  - MEASURE flowrate at outlet of 3SSR – V224, “High Level Waste Drain Tank 1A Grab Valve”
- b. DIVIDE 5 by sample flow rate in lpm to obtain purge time in minutes.
- 4.5.5 WHEN purge time has elapsed, COLLECT sample.
- 4.5.6 CLOSE 3SSR – V224, “High Level Waste Drain Tank 1A Grab Valve.”

– End of Section 4.5 –





#### 4.6 High Level Waste Drain Tank B Grab Sample



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.6.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

a. **CONSULT** with Health Physics and **DETERMINE** the following:

- Protective clothing
- Respiratory protection
- Dosimetry
- Route to be followed to and from liquid waste sample sink
- Stay times
- Expected dose and dose rate
- Sample volume
- Sample handling precautions
- Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material

b. **NOTIFY MCRO OR SM/US** that high level waste drain tank B sample will be collected by a Liquid Waste PASS Team consisting of the following:

- At least one Chemistry Technician
- At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
14 of 60

- 4.6.2 VERIFY open 3SSR–V899, “High Level Waste Drain Tank 1B Sample Isolation.”
- 4.6.3 OPEN 3SSR–V226, “High Level Waste Drain Tank 1B Grab Valve.”
- 4.6.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR–FI250B
  - MEASURE flowrate at outlet of 3SSR–V226, “High Level Waste Drain Tank 1B Grab Valve”
- b. DIVIDE 5 by sample flow rate in lpm to obtain purge time in minutes.
- 4.6.5 WHEN purge time has elapsed, COLLECT sample.
- 4.6.6 CLOSE 3SSR–V226, “High Level Waste Drain Tank 1B Grab Valve.”

– End of Section 4.6 –



#### 4.7 Waste Demineralizer Effluent Grab Sample



ALARA



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

##### 4.7.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that waste demineralizer effluent sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
16 of 60

- 4.7.2 VERIFY open 3SSR – V895, “Waste Demineralizer Effluent Sample Isolation.”
- 4.7.3 OPEN 3SSR – V234, “Waste Demineralizer Effluent Grab Valve.”
- 4.7.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR – FI253
  - MEASURE flowrate at outlet of 3SSR – V234, “Waste Demineralizer Effluent Grab Valve”
- b. DIVIDE 4 by sample flow rate in lpm to obtain purge time in minutes.
- 4.7.5 WHEN purge time has elapsed, COLLECT sample.
- 4.7.6 CLOSE 3SSR – V234, “Waste Demineralizer Effluent Grab Valve.”

– End of Section 4.7 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
17 of 60

#### 4.8 Containment Drains Sump Grab Sample



ALARA



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.8.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that containment drains sump sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
18 of 60

### NOTE

A containment sump sample is routinely collected to monitor the “normal” concentrations of various parameters in the containment drains sump. This information is useful when attempting to identify the possible sources of leakage into the sump when a leak occurs inside containment.

4.8.2 REQUEST Operations align Containment Drains Sump to the Low Level Waste Drain Tank Header per OP 3335B.

4.8.3 REQUEST Operations align *all* other sumps to the High Level Waste Drain Tank Header per OP 3335B.

### NOTE

Based on containment drains sump pumping frequency it may take several days for Low Level Waste Drain Tank Header to fill.

4.8.4 ALLOW sufficient time to fill the Low Level Waste Drain Tank Header with containment sump water.

4.8.5 OPEN 3SSR–V713, “Containment Sump Liquid Sample Isolation.”

4.8.6 OPEN 3SSR–V779, “Containment Sump Liquid Sample Grab Valve.”

### NOTE

The containment drains sump sample line purge volume is 6.240 liters. Due to the size of the sump and the capacity of the sump pumps, the pumps typically run for less than 1 minute when sump pumpdown is initiated. This short runtime does not allow for sufficient purge and sample collection. Because the containment drains sump pump discharge is the only input into this sample line, any sample collected from this point is representative of the contents of this sump at some time in the past. If desired, this section can be repeated several times to determine the present contents of the sump.

4.8.7 IF desired, REQUEST SM/US start 3DAS–P2A or 3DAS–P2B.

4.8.8 PURGE at least 6.240 liters.

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
19 of 60

- 4.8.9 COLLECT containment drains sump sample.
- 4.8.10 CLOSE 3SSR – V779, “Containment Sump Liquid Sample Grab Valve.”
- 4.8.11 CLOSE 3SSR – V713, “Containment Sump Liquid Sample Isolation.”
- 4.8.12 NOTIFY SM/US of the following:
  - a. Containment sump sampling complete
  - b. Rad Waste may be aligned per OP 3335B

– End of Section 4.8 –



#### 4.9 Waste Bottom Holding Tank Liquid Grab Sample



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.9.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

a. **CONSULT** with Health Physics and **DETERMINE** the following:

- Protective clothing
- Respiratory protection
- Dosimetry
- Route to be followed to and from liquid waste sample sink
- Stay times
- Expected dose and dose rate
- Sample volume
- Sample handling precautions
- Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material

b. **NOTIFY MCRO OR SM/US** that waste bottom holding tank liquid sample will be collected by a Liquid Waste PASS Team consisting of the following:

- At least one Chemistry Technician
- At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
21 of 60



- 4.9.2 REQUEST Chemistry Supervision provide purge volume.
- 4.9.3 VERIFY open 3SSR – V782, “Waste Bottom Sample Isolation.”
- 4.9.4 OPEN 3SSR – V777, “Waste Bottom Sample Grab Valve.”
- 4.9.5 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR – FI296
  - MEASURE flowrate at outlet of 3SSR – V777, “Waste Bottom Sample Grab Valve”
- b. DIVIDE purge volume provided by Chemistry Supervision by sample flow rate in lpm to obtain purge time in minutes.
- 4.9.6 WHEN purge time has elapsed, COLLECT sample.
- 4.9.7 CLOSE 3SSR – V777, “Waste Bottom Sample Grab Valve.”

– End of Section 4.9 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
22 of 60

#### 4.10 Low Level Waste Drain Tank A Low Pressure Vessel Sample



ALARA



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.10.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that low level waste drain tank A sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
23 of 60

- 4.10.2 VERIFY open 3SSR – V897, “Low Level Waste Drain Tank 4A Sample Isolation.”
- 4.10.3 OPEN 3SSR – V230, “Low Level Waste Drain Tank 4A Grab Valve.”
- 4.10.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR – FI252A
  - MEASURE flowrate at outlet of 3SSR – V230, “Low Level Waste Drain Tank 4A Grab Valve”
- b. DIVIDE 6 by sample flow rate in lpm to obtain purge time in minutes.
- 4.10.5 WHEN purge time has elapsed, INSERT sample vessel into quick connects inside sample sink.
- 4.10.6 CLOSE 3SSR – V230, “Low Level Waste Drain Tank 4A Grab Valve.”
- 4.10.7 OPEN sample vessel inlet valve.
- 4.10.8 OPEN sample vessel outlet valve.
- 4.10.9 CLOSE sample vessel outlet valve.
- 4.10.10 VERIFY sample vessel does not leak.
- 4.10.11 OPEN sample vessel outlet valve.

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
24 of 60

4.10.12 CALCULATE sample vessel purge time as follows:

**NOTE**

The sample vessel volume is normally stamped on the sample vessel.

- a. MULTIPLY sample vessel volume in liters by 5 to obtain purge volume in liters.

\_\_\_\_\_ liters • 5 = \_\_\_\_\_ purge volume

- b. OBSERVE flow rate on 3SSR – FI252A.

- c. DIVIDE purge volume in liters by sample flow rate in lpm to obtain sample vessel purge time in minutes.

4.10.13 WHEN sample vessel purge time has elapsed, CLOSE sample vessel outlet valve.

4.10.14 CLOSE sample vessel inlet valve.

4.10.15 OPEN 3SSR – V230, “Low Level Waste Drain Tank 4A Grab Valve.”

4.10.16 REMOVE sample vessel from sample sink quick connects.

4.10.17 CLOSE 3SSR – V230, “Low Level Waste Drain Tank 4A Grab Valve.”

– End of Section 4.10 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
25 of 60

#### 4.11 Low Level Waste Drain Tank B Low Pressure Vessel Sample



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.11.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

a. **CONSULT** with Health Physics and **DETERMINE** the following:

- Protective clothing
- Respiratory protection
- Dosimetry
- Route to be followed to and from liquid waste sample sink
- Stay times
- Expected dose and dose rate
- Sample volume
- Sample handling precautions
- Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material

b. **NOTIFY MCRO OR SM/US** that low level waste drain tank B sample will be collected by a Liquid Waste PASS Team consisting of the following:

- At least one Chemistry Technician
- At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
26 of 60

- 4.11.2 VERIFY open 3SSR – V896, “Low Level Waste Drain Tank 4B Sample Isolation.”
- 4.11.3 OPEN 3SSR – V232, “Low Level Waste Drain Tank 4B Grab Valve.”
- 4.11.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR – FI252B
  - MEASURE flowrate at outlet of 3SSR – V232, “Low Level Waste Drain Tank 4B Grab Valve”
- b. DIVIDE 6 by sample flow rate in lpm to obtain purge time in minutes.
- 4.11.5 WHEN purge time has elapsed, INSERT sample vessel into quick connects inside sample sink.
- 4.11.6 CLOSE 3SSR – V232, “Low Level Waste Drain Tank 4B Grab Valve.”
- 4.11.7 OPEN sample vessel inlet valve.
- 4.11.8 OPEN sample vessel outlet valve.
- 4.11.9 CLOSE sample vessel outlet valve.
- 4.11.10 VERIFY sample vessel does not leak.
- 4.11.11 OPEN sample vessel outlet valve.



4.11.12 CALCULATE sample vessel purge time as follows:

**NOTE**

The sample vessel volume is normally stamped on the sample vessel.

- a. MULTIPLY sample vessel volume in liters by 5 to obtain purge volume in liters.

\_\_\_\_\_ liters • 5 = \_\_\_\_\_ purge volume

- b. OBSERVE flow rate on 3SSR–FI252B.

- c. DIVIDE purge volume in liters by sample flow rate in lpm to obtain sample vessel purge time in minutes.

4.11.13 WHEN sample vessel purge time has elapsed, CLOSE sample vessel outlet valve.

4.11.14 CLOSE sample vessel inlet valve.

4.11.15 OPEN 3SSR–V232, “Low Level Waste Drain Tank 4B Grab Valve.”

4.11.16 REMOVE sample vessel from sample sink quick connects.

4.11.17 CLOSE 3SSR–V232, “Low Level Waste Drain Tank 4B Grab Valve.”

– End of Section 4.11 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
28 of 60

#### 4.12 Waste Test Tank A Low Pressure Vessel Sample



ALARA



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

##### 4.12.1 IF sample is being collected during post-accident conditions, PERFORM the following:

- a. CONSULT with Health Physics and DETERMINE the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material
- b. NOTIFY MCRO OR SM/US that waste test tank A sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
29 of 60



4.12.2 VERIFY open 3SSR–V898, “Waste Test Tank 3A Sample Isolation.”

4.12.3 OPEN 3SSR–V228, “Waste Test Tank 3A Grab Valve.”

4.12.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

a. DETERMINE sample flow rate in lpm using one of the following methods:

- OBSERVE flow rate on 3SSR–FI137
- MEASURE flowrate at outlet of 3SSR–V228, “Waste Test Tank 3A Grab Valve”

b. DIVIDE 17 by sample flow rate in lpm to obtain purge time in minutes.

4.12.5 WHEN purge time has elapsed, INSERT sample vessel into quick connects inside sample sink.

4.12.6 CLOSE 3SSR–V228, “Waste Test Tank 3A Grab Valve.”

4.12.7 OPEN sample vessel inlet valve.

4.12.8 OPEN sample vessel outlet valve.

4.12.9 CLOSE sample vessel outlet valve.

4.12.10 VERIFY sample vessel does not leak.

4.12.11 OPEN sample vessel outlet valve.

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
30 of 60

4.12.12 CALCULATE sample vessel purge time as follows:

**NOTE**

The sample vessel volume is normally stamped on the sample vessel.

- a. MULTIPLY sample vessel volume in liters by 5 to obtain purge volume in liters.

\_\_\_\_\_ liters • 5 = \_\_\_\_\_ purge volume

- b. OBSERVE flow rate on 3SSR–FI137.

- c. DIVIDE purge volume in liters by sample flow rate in lpm to obtain sample vessel purge time in minutes.

4.12.13 WHEN sample vessel purge time has elapsed, CLOSE sample vessel outlet valve.

4.12.14 CLOSE sample vessel inlet valve.

4.12.15 OPEN 3SSR–V228, “Waste Test Tank 3A Grab Valve.”

4.12.16 REMOVE sample vessel from sample sink quick connects.

4.12.17 CLOSE 3SSR–V228, “Waste Test Tank 3A Grab Valve.”

– End of Section 4.12 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
31 of 60

#### 4.13 Waste Test Tank B Low Pressure Vessel Sample



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.13.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that waste test tank B sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
32 of 60

4.13.2 VERIFY open 3SSR – V871, “Waste Test Tank 3B Sample Isolation.”

4.13.3 OPEN 3SSR – V856, “Waste Test Tank 3B Sample Grab Valve.”

4.13.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

a. DETERMINE sample flow rate in lpm using one of the following methods:

- OBSERVE flow rate on 3SSR – FI259
- MEASURE flowrate at outlet of 3SSR – V856, “Waste Test Tank 3B Sample Grab Valve”

b. DIVIDE 17 by sample flow rate in lpm to obtain purge time in minutes.

4.13.5 WHEN purge time has elapsed, INSERT sample vessel into quick connects inside sample sink.

4.13.6 CLOSE 3SSR – V856, “Waste Test Tank 3B Sample Grab Valve.”

4.13.7 OPEN sample vessel inlet valve.

4.13.8 OPEN sample vessel outlet valve.

4.13.9 CLOSE sample vessel outlet valve.

4.13.10 VERIFY sample vessel does not leak.

4.13.11 OPEN sample vessel outlet valve.

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
33 of 60

4.13.12 CALCULATE sample vessel purge time as follows:

**NOTE**

The sample vessel volume is normally stamped on the sample vessel.

- a. MULTIPLY sample vessel volume in liters by 5 to obtain purge volume in liters.

\_\_\_\_\_ liters • 5 = \_\_\_\_\_ purge volume

- b. OBSERVE flow rate on 3SSR–FI259.

- c. DIVIDE purge volume in liters by sample flow rate in lpm to obtain sample vessel purge time in minutes.

4.13.13 WHEN sample vessel purge time has elapsed, CLOSE sample vessel outlet valve.

4.13.14 CLOSE sample vessel inlet valve.

4.13.15 OPEN 3SSR–V856, “Waste Test Tank 3B Sample Grab Valve.”

4.13.16 REMOVE sample vessel from sample sink quick connects.

4.13.17 CLOSE 3SSR–V856, “Waste Test Tank 3B Sample Grab Valve.”

– End of Section 4.13 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
34 of 60

#### 4.14 High Level Waste Drain Tank A Low Pressure Vessel Sample



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.14.1 IF sample is being collected during post--accident conditions, **PERFORM** the following:

a. **CONSULT** with Health Physics and **DETERMINE** the following:

- Protective clothing
- Respiratory protection
- Dosimetry
- Route to be followed to and from liquid waste sample sink
- Stay times
- Expected dose and dose rate
- Sample volume
- Sample handling precautions
- Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material

b. **NOTIFY MCRO OR SM/US** that high level waste drain tank A sample will be collected by a Liquid Waste PASS Team consisting of the following:

- At least one Chemistry Technician
- At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
35 of 60

- 4.14.2 VERIFY open 3SSR–V900, “High Level Waste Drain Tank 1A Sample Isolation.”
- 4.14.3 OPEN 3SSR–V224, “High Level Waste Drain Tank 1A Grab Valve.”
- 4.14.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR–FI250A
  - MEASURE flowrate at outlet of 3SSR–V224, “High Level Waste Drain Tank 1A Grab Valve”
- b. DIVIDE 5 by sample flow rate in lpm to obtain purge time in minutes.
- 4.14.5 WHEN purge time has elapsed, INSERT sample vessel into quick connects inside sample sink.
- 4.14.6 CLOSE 3SSR–V224, “High Level Waste Drain Tank 1A Grab Valve.”
- 4.14.7 OPEN sample vessel inlet valve.
- 4.14.8 OPEN sample vessel outlet valve.
- 4.14.9 CLOSE sample vessel outlet valve.
- 4.14.10 VERIFY sample vessel does not leak.
- 4.14.11 OPEN sample vessel outlet valve.



4.14.12 CALCULATE sample vessel purge time as follows:

**NOTE**

The sample vessel volume is normally stamped on the sample vessel.

- a. MULTIPLY sample vessel volume in liters by 5 to obtain purge volume in liters.

\_\_\_\_\_ liters • 5 = \_\_\_\_\_ purge volume

- b. OBSERVE flow rate on 3SSR–FI250A.

- c. DIVIDE purge volume in liters by sample flow rate in lpm to obtain sample vessel purge time in minutes.

4.14.13 WHEN sample vessel purge time has elapsed, CLOSE sample vessel outlet valve.

4.14.14 CLOSE sample vessel inlet valve.

4.14.15 OPEN 3SSR–V224, “High Level Waste Drain Tank 1A Grab Valve.”

4.14.16 REMOVE sample vessel from sample sink quick connects.

4.14.17 CLOSE 3SSR–V224, “High Level Waste Drain Tank 1A Grab Valve.”

– End of Section 4.14 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
37 of 60



#### 4.15 High Level Waste Drain Tank B Low Pressure Vessel Sample



ALARA



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.15.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

a. **CONSULT** with Health Physics and **DETERMINE** the following:

- Protective clothing
- Respiratory protection
- Dosimetry
- Route to be followed to and from liquid waste sample sink
- Stay times
- Expected dose and dose rate
- Sample volume
- Sample handling precautions
- Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material

b. **NOTIFY MCRO OR SM/US** that high level waste drain tank B sample will be collected by a Liquid Waste PASS Team consisting of the following:

- At least one Chemistry Technician
- At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
38 of 60

4.15.2 VERIFY open 3SSR – V899, “High Level Waste Drain Tank 1B Sample Isolation.”

4.15.3 OPEN 3SSR – V226, “High Level Waste Drain Tank 1B Grab Valve.”

4.15.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

a. DETERMINE sample flow rate in lpm using one of the following methods:

- OBSERVE flow rate on 3SSR – FI250B
- MEASURE flowrate at outlet of 3SSR – V226, “High Level Waste Drain Tank 1B Grab Valve”

b. DIVIDE 5 by sample flow rate in lpm to obtain purge time in minutes.

4.15.5 WHEN purge time has elapsed, INSERT sample vessel into quick connects inside sample sink.

4.15.6 CLOSE 3SSR – V226, “High Level Waste Drain Tank 1B Grab Valve.”

4.15.7 OPEN sample vessel inlet valve.

4.15.8 OPEN sample vessel outlet valve.

4.15.9 CLOSE sample vessel outlet valve.

4.15.10 VERIFY sample vessel does not leak.

4.15.11 OPEN sample vessel outlet valve.

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
39 of 60

4.15.12 CALCULATE sample vessel purge time as follows:

**NOTE**

The sample vessel volume is normally stamped on the sample vessel.

- a. MULTIPLY sample vessel volume in liters by 5 to obtain purge volume in liters.

\_\_\_\_\_ liters • 5 = \_\_\_\_\_ purge volume

- b. OBSERVE flow rate on 3SSR–FI250B.

- c. DIVIDE purge volume in liters by sample flow rate in lpm to obtain sample vessel purge time in minutes.

4.15.13 WHEN sample vessel purge time has elapsed, CLOSE sample vessel outlet valve.

4.15.14 CLOSE sample vessel inlet valve.

4.15.15 OPEN 3SSR–V226, “High Level Waste Drain Tank 1B Grab Valve.”

4.15.16 REMOVE sample vessel from sample sink quick connects.

4.15.17 CLOSE 3SSR–V226, “High Level Waste Drain Tank 1B Grab Valve.”

– End of Section 4.15 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
40 of 60

#### 4.16 Waste Demineralizer Effluent Low Pressure Vessel Sample



**A L A R A**



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.16.1 **IF** sample is being collected during post-accident conditions, **PERFORM** the following:

a. **CONSULT** with Health Physics and **DETERMINE** the following:

- Protective clothing
- Respiratory protection
- Dosimetry
- Route to be followed to and from liquid waste sample sink
- Stay times
- Expected dose and dose rate
- Sample volume
- Sample handling precautions
- Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material

b. **NOTIFY MCRO OR SM/US** that waste demineralizer effluent sample will be collected by a Liquid Waste PASS Team consisting of the following:

- At least one Chemistry Technician
- At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
41 of 60

- 4.16.2 VERIFY open 3SSR–V895, “Waste Demineralizer Effluent Sample Isolation.”
- 4.16.3 OPEN 3SSR–V234, “Waste Demineralizer Effluent Grab Valve.”
- 4.16.4 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR–FI253
  - MEASURE flowrate at outlet of 3SSR–V234, “Waste Demineralizer Effluent Grab Valve”
- b. DIVIDE 4 by sample flow rate in lpm to obtain purge time in minutes.
- 4.16.5 WHEN purge time has elapsed, INSERT sample vessel into quick connects inside sample sink.
- 4.16.6 CLOSE 3SSR–V234, “Waste Demineralizer Effluent Grab Valve.”
- 4.16.7 OPEN sample vessel inlet valve.
- 4.16.8 OPEN sample vessel outlet valve.
- 4.16.9 CLOSE sample vessel outlet valve.
- 4.16.10 VERIFY sample vessel does not leak.
- 4.16.11 OPEN sample vessel outlet valve.

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
42 of 60

4.16.12 CALCULATE sample vessel purge time as follows:

**NOTE**

The sample vessel volume is normally stamped on the sample vessel.

- a. MULTIPLY sample vessel volume in liters by 5 to obtain purge volume in liters.

\_\_\_\_\_ liters • 5 = \_\_\_\_\_ purge volume

- b. OBSERVE flow rate on 3SSR–FI253.

- c. DIVIDE purge volume in liters by sample flow rate in lpm to obtain sample vessel purge time in minutes.

4.16.13 WHEN sample vessel purge time has elapsed, CLOSE sample vessel outlet valve.

4.16.14 CLOSE sample vessel inlet valve.

4.16.15 OPEN 3SSR–V234, “Waste Demineralizer Effluent Grab Valve.”

4.16.16 REMOVE sample vessel from sample sink quick connects.

4.16.17 CLOSE 3SSR–V234, “Waste Demineralizer Effluent Grab Valve.”

– End of Section 4.16 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
43 of 60

#### 4.17 Containment Drains Sump Low Pressure Vessel Sample



ALARA



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.17.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that containment drains sump sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
44 of 60

### NOTE

A containment sump sample is routinely collected to monitor the “normal” concentrations of various parameters in the containment drains sump. This information is useful when attempting to identify the possible sources of leakage into the sump when a leak occurs inside containment.

- 4.17.2 COORDINATE with SM/US to allow containment drains sump level to increase prior to starting 3DAS–P2A or 3DAS–P2B.
- 4.17.3 INSERT sample vessel into quick connects inside sample sink.
- 4.17.4 OPEN sample vessel inlet valve.
- 4.17.5 OPEN sample vessel outlet valve.
- 4.17.6 OPEN 3SSR–V713, “Containment Sump Liquid Sample Isolation.”
- 4.17.7 REQUEST SM/US start 3DAS–P2A or 3DAS–P2B.

### NOTE

The containment drains sump sample line purge volume is 6.240 liters. Due to the size of the sump and the capacity of the sump pumps, the pumps typically run for less than 1 minute when sump pumpdown is initiated. This short runtime does not allow for sufficient purge and sample collection. Because the containment drains sump pump discharge is the only input into this sample line, any sample collected from this point is representative of the contents of this sump at some time in the past. If desired, this section can be repeated several times to determine the present contents of the sump.

- 4.17.8 CALCULATE sample vessel purge time as follows:

### NOTE

The sample vessel volume is normally stamped on the sample vessel.

- a. MULTIPLY sample vessel volume in liters by 5 to obtain purge volume in liters.

\_\_\_\_\_ liters • 5 = \_\_\_\_\_ purge volume

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
45 of 60



- b. OBSERVE flow rate on 3SSR–FI294.
  - c. DIVIDE purge volume in liters by sample flow rate in lpm to obtain sample vessel purge time in minutes.
- 4.17.9 WHEN sample vessel purge time has elapsed, CLOSE sample vessel outlet valve.
- 4.17.10 CLOSE sample vessel inlet valve.
- 4.17.11 OPEN 3SSR–V779, “Containment Sump Liquid Sample Grab Valve.”
- 4.17.12 REMOVE sample vessel from sample sink quick connects.
- 4.17.13 CLOSE 3SSR–V779, “Containment Sump Liquid Sample Grab Valve.”
- 4.17.14 CLOSE 3SSR–V713, “Containment Sump Liquid Sample Isolation.”
- 4.17.15 NOTIFY SM/US that you have completed sampling containment drains sump.

– End of Section 4.17 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
46 of 60

#### 4.18 Waste Bottom Holding Tank Low Pressure Vessel Sample



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.18.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from liquid waste sample sink
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that waste bottom holding tank sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
47 of 60

- 4.18.2 REQUEST Chemistry Supervision provide purge volume.
- 4.18.3 VERIFY open 3SSR – V782, “Waste Bottom Sample Isolation.”
- 4.18.4 OPEN 3SSR – V777, “Waste Bottom Sample Grab Valve.”
- 4.18.5 CALCULATE purge time as follows:

**NOTE**

16 gallons/hour = 1 liter/minute

- a. DETERMINE sample flow rate in lpm using one of the following methods:
- OBSERVE flow rate on 3SSR – FI296
  - MEASURE flowrate at outlet of 3SSR – V777, “Waste Bottom Sample Grab Valve”
- b. DIVIDE purge volume provided by Chemistry Supervision by sample flow rate in lpm to obtain purge time in minutes.
- 4.18.6 WHEN purge time has elapsed, INSERT sample vessel into quick connects inside sample sink.
- 4.18.7 CLOSE 3SSR – V777, “Waste Bottom Sample Grab Valve.”
- 4.18.8 OPEN sample vessel inlet valve.
- 4.18.9 OPEN sample vessel outlet valve.
- 4.18.10 CLOSE sample vessel outlet valve.
- 4.18.11 VERIFY sample vessel does not leak.
- 4.18.12 OPEN sample vessel outlet valve.

4.18.13 CALCULATE sample vessel purge time as follows:

**NOTE**

The sample vessel volume is normally stamped on the sample vessel.

- a. MULTIPLY sample vessel volume in liters by 5 to obtain purge volume in liters.

\_\_\_\_\_ liters • 5 = \_\_\_\_\_ purge volume

- b. OBSERVE flow rate on 3SSR–FI296.

- c. DIVIDE purge volume in liters by sample flow rate in lpm to obtain sample vessel purge time in minutes.

4.18.14 WHEN sample vessel purge time has elapsed, CLOSE sample vessel outlet valve.

4.18.15 CLOSE sample vessel inlet valve.

4.18.16 OPEN 3SSR–V777, “Waste Bottom Sample Grab Valve.”

4.18.17 REMOVE sample vessel from sample sink quick connects.

4.18.18 CLOSE 3SSR–V777, “Waste Bottom Sample Grab Valve.”

– End of Section 4.18 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
49 of 60

#### 4.19 Low Level Waste Drain Tank A Alternate Sample Point



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.19.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from sample point
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that low level waste drain tank A sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
50 of 60

4.19.2 PROCEED to 3LWS-PI68A, "Low Level Waste Drain Pump 3LWS-P7A Discharge Pressure Instrument," with the following:

- 9/16" wrench or adjustable wrench
- Purge bottle (minimum volume 1.5 liter)
- Sample bottles

4.19.3 Refer To Attachment 2 and REMOVE cap from test connection.

4.19.4 OPEN test valve and PURGE at least 1.5 liters and CLOSE test valve.

4.19.5 OPEN test valve and COLLECT sample and CLOSE test valve.

4.19.6 REPEAT step 4.19.5 for additional samples.

4.19.7 CAP test connection.

– End of Section 4.19 –

#### 4.20 Low Level Waste Drain Tank B Alternate Sample Point



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.20.1 IF sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from sample point
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that low level waste drain tank B sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
52 of 60

4.20.2 PROCEED to 3LWS–PI68B, “Low Level Waste Drain Pump 3LWS–P7B Discharge Pressure Instrument,” with the following:

- 9/16” wrench or adjustable wrench
- Purge bottle (minimum volume 1.5 liter)
- Sample bottle(s)

4.20.3 Refer To Attachment 2 and REMOVE cap from test connection.

4.20.4 OPEN test valve and PURGE at least 1.5 liters and CLOSE test valve.

4.20.5 OPEN test valve and COLLECT sample and CLOSE test valve.

4.20.6 REPEAT Step 4.20.5 for additional samples.

4.20.7 CAP test connection.

– End of Section 4.20 –

Level of Use  
Reference



CP 3804AC  
Rev. 003–00  
53 of 60



#### 4.21 Waste Test Tank A Alternate Sample Point



**A L A R A**



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.21.1 **IF** sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from sample point
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure **ALARA** and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that waste test tank A sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
54 of 60

4.21.2 PROCEED to 3LWS-PI55A, "Waste Test Tank Pump 3LWS-P6A Discharge Pressure Instrument," with the following:

- 9/16" wrench or adjustable wrench
- Purge bottle (minimum volume 1.5 liter)
- Sample bottles

4.21.3 Refer To Attachment 2 and REMOVE cap from test connection.

4.21.4 OPEN test valve and PURGE at least 1.5 liters and CLOSE test valve.

4.21.5 OPEN test valve and COLLECT sample and CLOSE test valve.

4.21.6 REPEAT Step 4.21.5 for additional samples.

4.21.7 CAP test connection.

– End of Section 4.21 –

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
55 of 60

#### 4.22 Waste Test Tank B Alternate Sample Point



A L A R A



Radiological conditions may be more severe following an accident. Health Physics assessment and support is necessary when sampling during post-accident conditions.

4.22.1 **IF** sample is being collected during post-accident conditions, **PERFORM** the following:

- a. **CONSULT** with Health Physics and **DETERMINE** the following:
  - Protective clothing
  - Respiratory protection
  - Dosimetry
  - Route to be followed to and from sample point
  - Stay times
  - Expected dose and dose rate
  - Sample volume
  - Sample handling precautions
  - Any other Health Physics requirements needed to keep liquid PASS team personnel radiation exposure ALARA and to reduce the spread of radioactive material
- b. **NOTIFY MCRO OR SM/US** that waste test tank A sample will be collected by a Liquid Waste PASS Team consisting of the following:
  - At least one Chemistry Technician
  - At least one Health Physics Technician

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
56 of 60

4.22.2 PROCEED to 3LWS-PI55B, "Waste Test Tank Pump 3LWS-P6B Discharge Pressure Instrument," with the following:

- 9/16" wrench or adjustable wrench
- Purge bottle (minimum volume 1.5 liter)
- Sample bottles

4.22.3 Refer To Attachment 2 and REMOVE cap from test connection.

4.22.4 OPEN test valve and PURGE at least 1.5 liters and CLOSE test valve.

4.22.5 OPEN test valve and COLLECT sample and CLOSE test valve.

4.22.6 REPEAT Step 4.22.5 for additional samples.

4.22.7 CAP test connection.

– End of Section 4.22 –

## 5. REVIEW AND SIGNOFF

5.1 N/A

## 6. REFERENCES

- 6.1 Millstone DWG. No. 12179-EM-106A, "Radioactive Liquid Waste & Aerated Drains"
- 6.2 Millstone DWG. No. 12179-EM-106B, "Radioactive Liquid Waste & Aerated Drains"
- 6.3 Millstone DWG. No. 12179-EM-106C, "Radioactive Liquid Waste & Aerated Drains"
- 6.4 Millstone DWG. No. 12179-EM-144D, "Reactor Plant Sampling"
- 6.5 Millstone Unit 3 "Technical Data Summary"
- 6.6 OPS Form 3311A-1, "Reactor Plant Sample Panel Pre-Start Lineup"
- 6.7 REMODCM, Section I, Table C-3, Note b
- 6.8 Unit 3 FSAR

## 7. SUMMARY OF CHANGES

Summary of Changes Rev 003-00

- 7.1 Revised Section 4.8, "Containment Drains Sump Grab Sample"

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
58 of 60

**Attachment 1**  
**Recirculation Times, Liquid Waste Tanks and Sumps**  
(Sheet 1 of 1)

(1) MAXIMUM OPERATING VOLUME  
(2) AVG PUMP FLOW RATE AT DISCHARGE HEAD

TANK SUMP ID	A(1) TANK SUMP CAPACITY	PUMP IDENTIFICATION	B(2) PUMP CAPACITY (GPM/HEAD)	EDUCTOR (✓) OR N/A	EDUCTOR RECIRC/ FLOW RATE	RECIRC TIMES (2 VOLUME)
HIGH LEVEL WASTE DISTILLATE TANK 3LWS-TK1A/B	25,000 gal (each)	3LWS-P1A/B	(35 gpm/187 ft)	✓	140 gpm	357 min
WASTE DISTILLATE TANK 3LWS-TK2	500 gal	3LWS-P5	(50 gpm/212 ft)	N/A	N/A	20 min
WASTE TEST TANKS 3LWS-TK3A/3B	21,000 gal (each)	3LWS-P8A/8B	(60 gpm/97 ft)	✓	240 gpm	175 min
LOW LEVEL WASTE DRAINS TANK 3LWS-TK4A/4B	4,000 gal (each)	3LWS-P7A/7B	(50 gpm/97 ft)	✓	200 gpm	40 min
WASTE BOTTOMS HOLDING TANK 3LWS-TK5	3,000 gal	3LWS-P9	(50 gpm/65 ft)	N/A	N/A	120 min

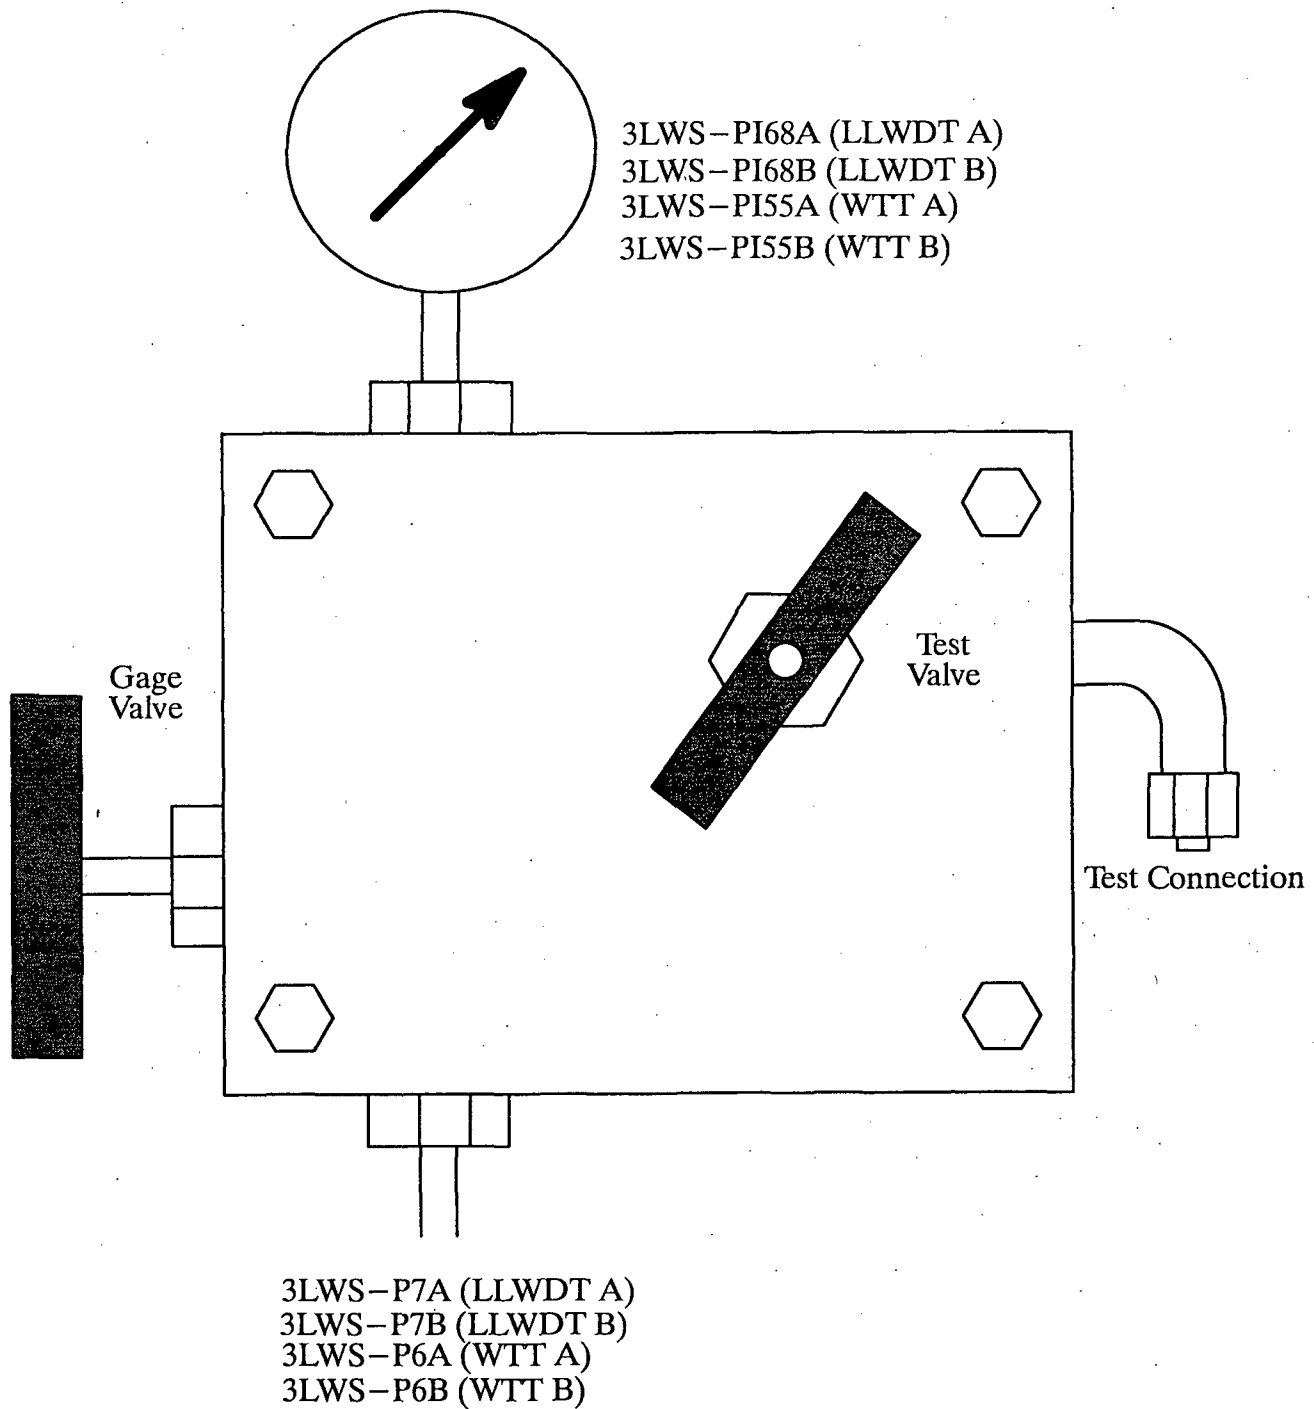
NOTE: Taken from figure 6.1, "Recirculation Times, Liquid Waste Tanks and Sumps" of Millstone Unit 3 "Technical Data Summary"

Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
59 of 60

**Attachment 2**  
**Instrument Valve Block Configuration**  
(Sheet 1 of 1)



Level of Use  
Reference



CP 3804AC  
Rev. 003-00  
60 of 60