


INFORMATION ONLY

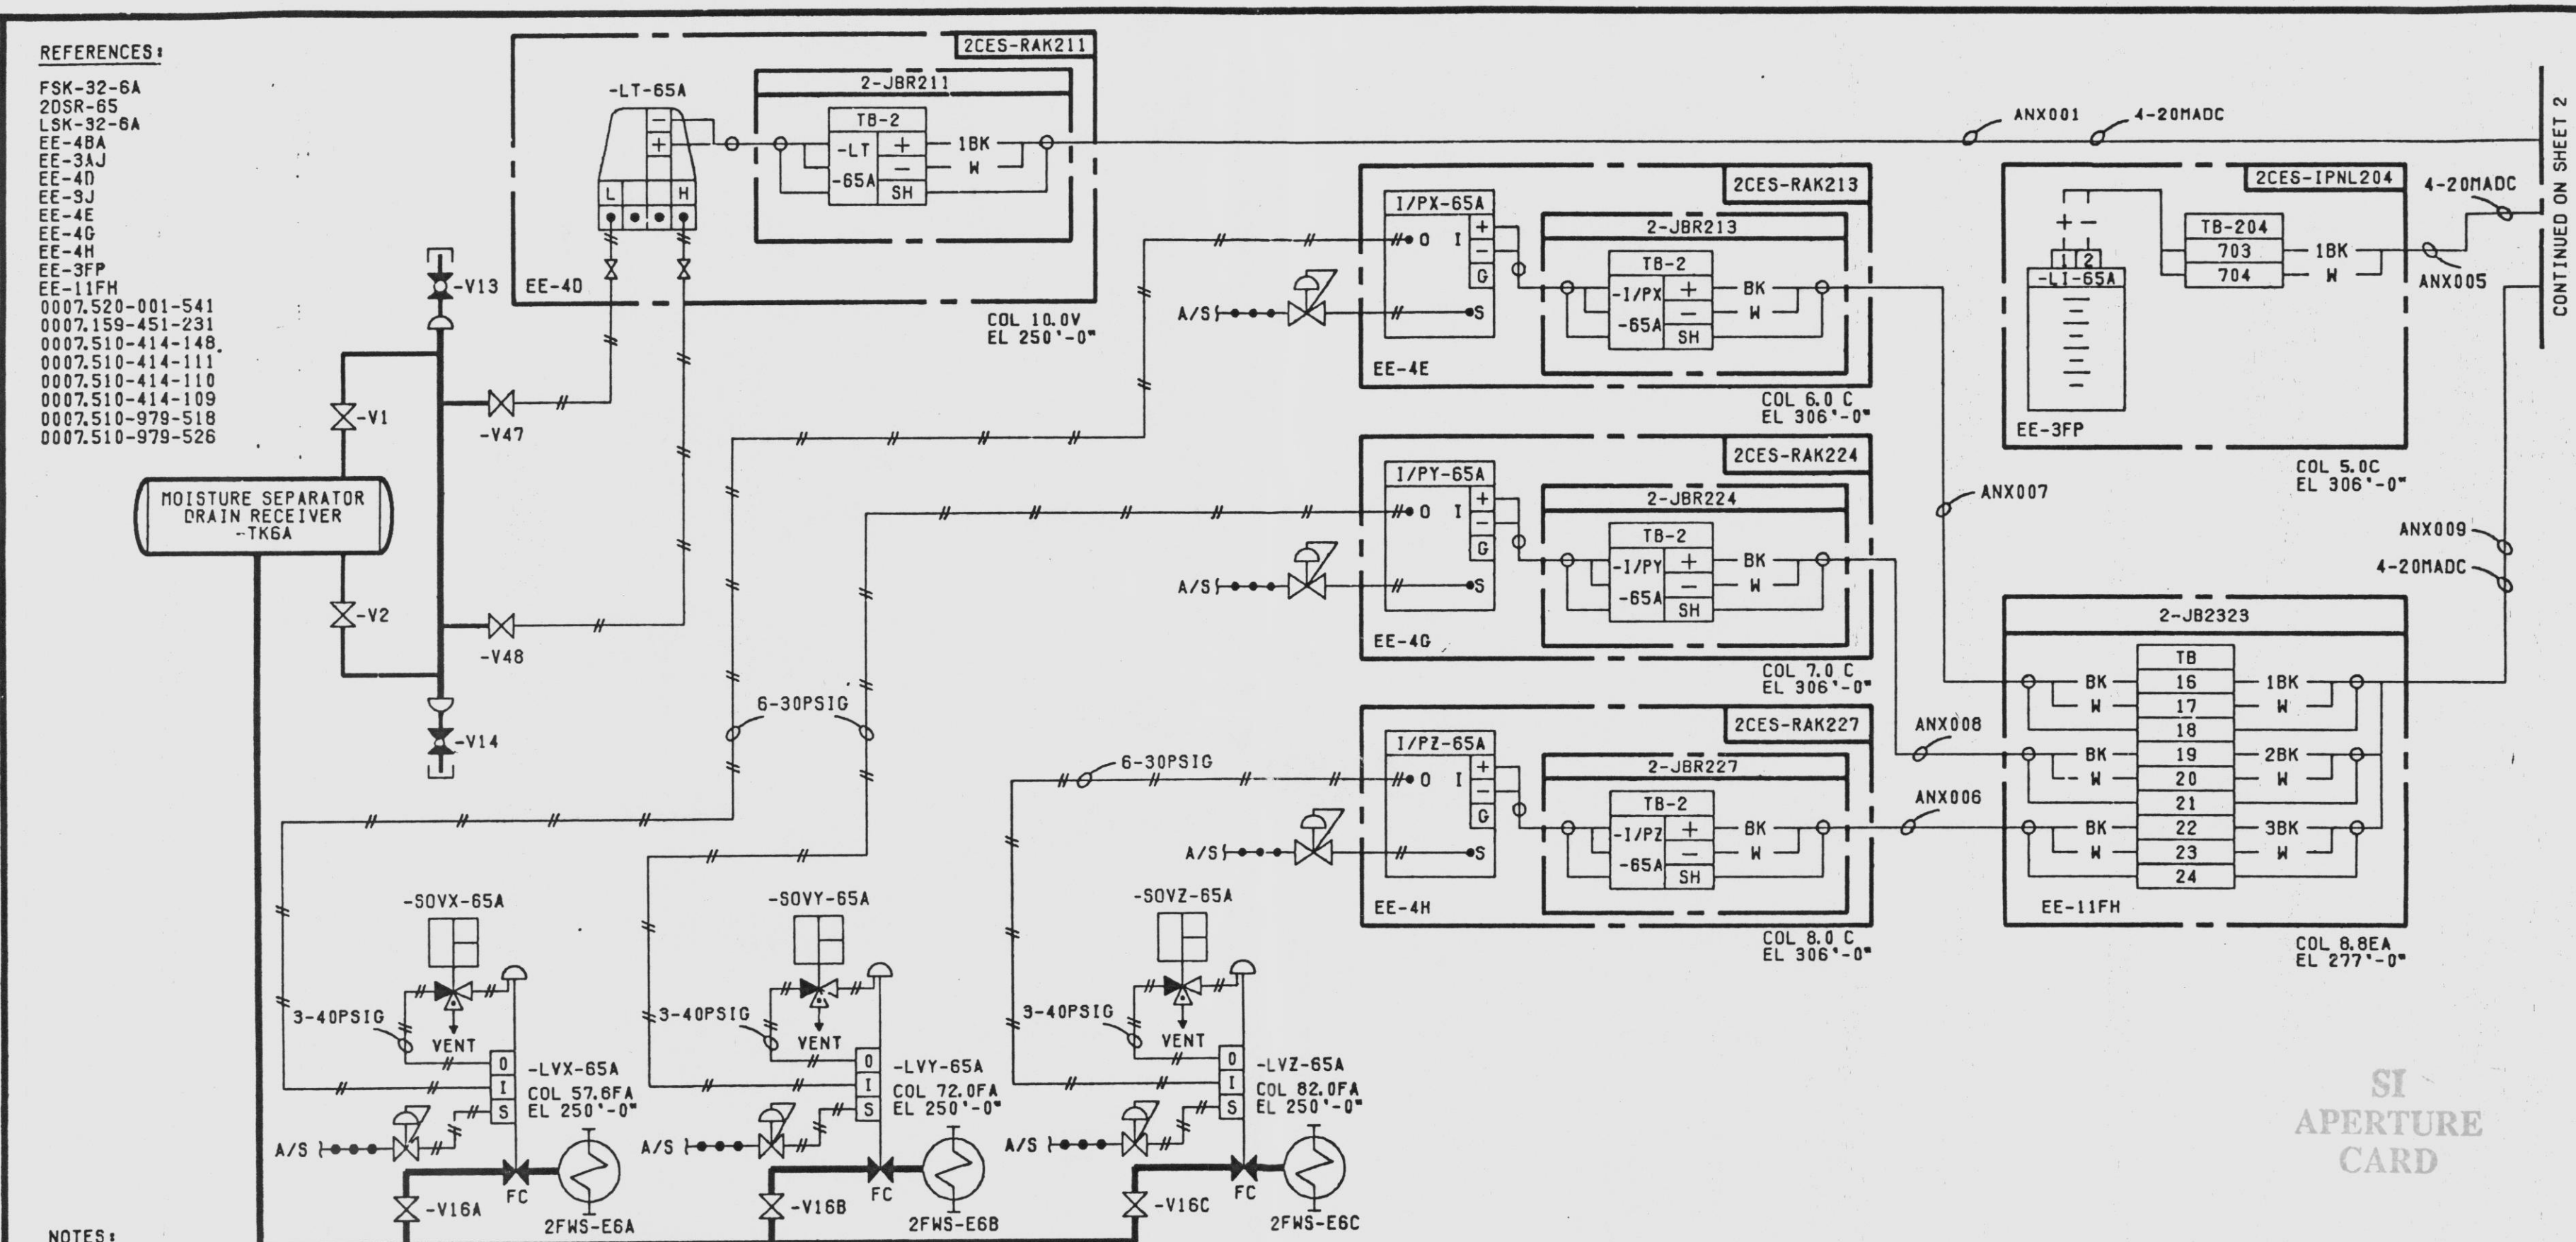

- REFERENCES:
- FSK-32-6A
 - 2DSR-65
 - LSK-32-6A
 - EE-4BA
 - EE-3AJ
 - EE-4D
 - EE-3J
 - EE-4E
 - EE-4G
 - EE-4H
 - EE-3FP
 - EE-11FH
 - 0007.520-001-541
 - 0007.159-451-231
 - 0007.510-414-148
 - 0007.510-414-111
 - 0007.510-414-110
 - 0007.510-414-109
 - 0007.510-979-518
 - 0007.510-979-526

NOTES:

- FOR TEST PURPOSES ONLY-NOT TO BE USED FOR CONSTRUCTION.
- ALL INSTRUMENT AND EQUIPMENT NUMBERS ARE TO BE PREFIXED WITH "2DSR" EXCEPT WHERE A DIFFERENT PREFIX IS SHOWN.
- LOOP ACTION: LT-65A MONITORS MOISTURE SEPARATOR DRAIN RECEIVER TK6A WATER LEVEL AND PROVIDES A SIGNAL TO LC-65A, AND THE COMPUTER VIA PHRS-65A, AND TO LI-65A VIA PHRS-65A AND E/IW-65A. LC-65A COMPARES LT-65A LEVEL SIGNAL TO AN INTERNAL SETPOINT AND PROVIDES AN ERROR SIGNAL TO MODULATE VALVES LVX-65A, LUY-65A, AND LVZ-65A. LVX-65A WILL BE MODULATED BY EITHER LC-65A OR LIKX-65 (AUTO MANUAL CONTROL STATION) VIA E/IX-65A AND I/PX-65A IF SOVX-65A IS ENERGIZED (SEE TL2DSR-028). LUY-65A WILL BE MODULATED BY EITHER LC-65A OR LIKY-65A VIA E/IY-65A AND I/PY-65A IF SOVY-65A IS ENERGIZED (SEE TL2DSR-030). LVZ-65A WILL BE MODULATED BY EITHER LC-65A OR LIKZ-65A VIA E/IZ-65A AND I/PZ-65A IF SOVZ-65A IS ENERGIZED (SEE TLDSR-032). WHEN LIKX-65A, LIKY-65A OR LIKZ-65A IS IN THE MANUAL POSITION IT WILL BE USED TO CONTROL ITS RESPECTIVE CONTROL VALVE. IF LIKX-65A, LIKY-65A OR LIKZ-65A IS IN THE AUTO POSITION, THEN THE RESPECTIVE CONTROL VALVE WILL BE CONTROLLED BY LC-65A, VIA ITS RESPECTIVE E/I AND I/P.

TURBINE BLDG

SI APERTURE CARD

QA CAT II

TEST LOOP DIAGRAM
 2DSR-TK6A NORM WTR LVL DR CONTROL
 2DSR-LT-65A

NINE MILE POINT NUCLEAR STATION-UNIT 2
 NIAGARA MOHAWK POWER CORPORATION

STONE & WEBSTER ENGINEERING CORPORATION

SHEET 1 OF 2
 12177-TL2DSR-026

DATE	DATE	DATE	DATE	DATE	DATE
4	3	2	1	0	0
PREPARED	PREPARED	PREPARED	PREPARED	PREPARED	PREPARED
APPROVED	APPROVED	APPROVED	APPROVED	APPROVED	APPROVED

9305070255

INFORMATION ONLY

255