


DEVICE	FUNCTION	WFR / TYPE	REMARKS
49X	AUX. RELAY	2180-ED1A	120V AC

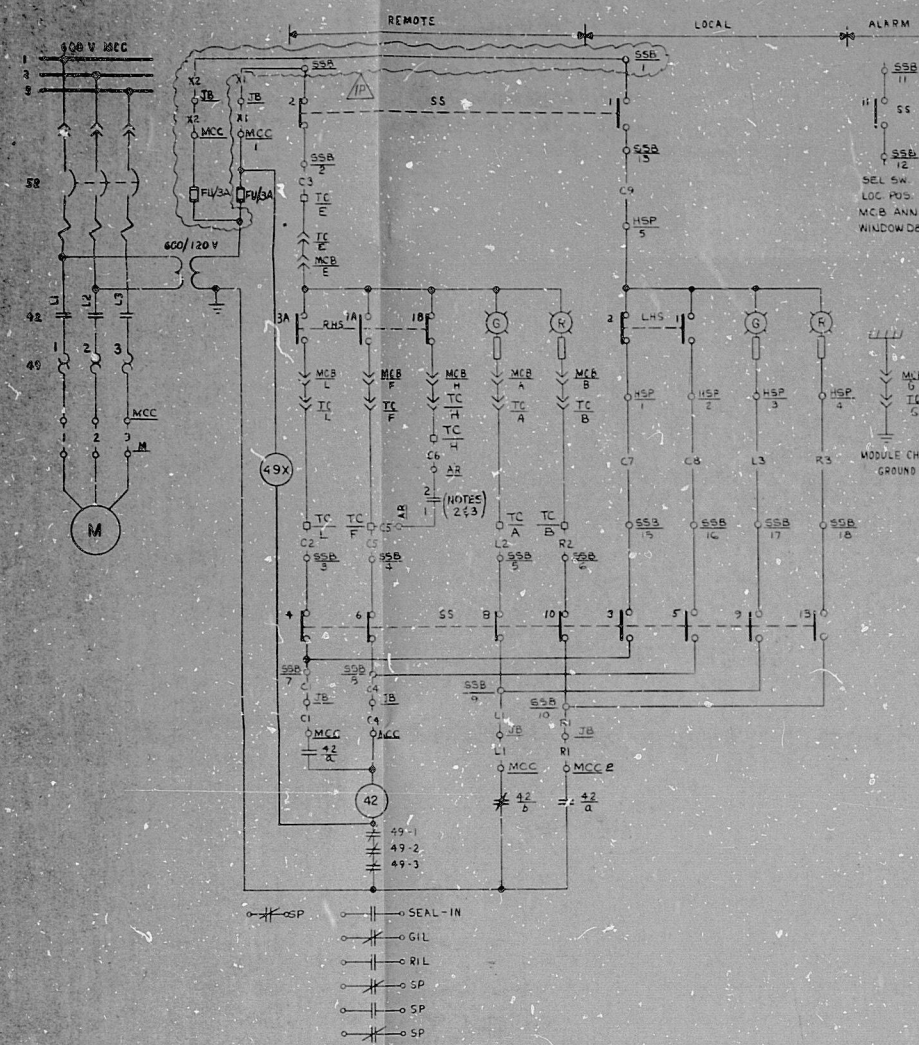


STOP	START	STOP	START	STOP	START
SP	SP	SP	SP	SP	SP
SP	SP	SP	SP	SP	SP
SP	SP	SP	SP	SP	SP
SP	SP	SP	SP	SP	SP
SP	SP	SP	SP	SP	SP

REMOTE HANDSWITCH
GEMCO CAT NA 406534222-Y-007-5M1-7-40
SPRING RETURN TO AUTO FROM START ONLY

LOCAL	REMOTE	STOP	START
SP	SP	SP	SP
SP	SP	SP	SP
SP	SP	SP	SP
SP	SP	SP	SP
SP	SP	SP	SP

SELECTOR SWITCH
GE 5BM TYPE MODEL 1-5
SIMILAR TO 10A0066
MAINTAINED POSITION
OVAL HANDLE

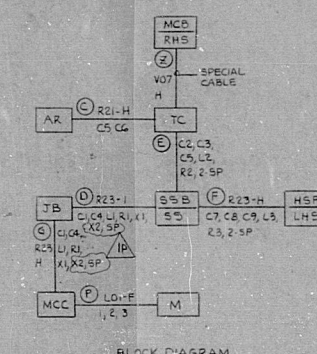

- NOTES
- FOR MOTOR AND STARTER SIZE SEE DWG. B-7556 SHEETS 1 AND 4.
 - FOR RELAY CONTACT SEE TABLE
 - FOR PUMP 1A - SEE DWG. D-207097
FOR PUMP 1B - SEE DWG. D-207098

REFERENCE DRAWINGS
A-177538 - ELECTRICAL GENERAL DETAILS AND NOTES

			MCB	M	TC	MCB	HSP	PHS	AR			HS	SE	SDB	TB	
SERVICE	FAC	SCHEME	MCC CUB/FILE	MOTOR	TERMINATION CABINET	MAIN CONTROL BOARD	LOCAL HOT SHUTDOWN PNL	REMOTE HANDSWITCH	AUXILIARY RELAY RACK	START-UP NUMBER	DRAWING-SSI ACCESS N	RELAY CONT & AR TERM. N	LOCAL HANDSWITCH	SELECTOR SWITCH	SELECTOR SWITCH BOX	JUNCTION BOX
BORIC ACID TRANSFER PUMP MOTOR	2B	2V	8FB-24	FB-24	Q2E21M005B-5	Q2E25L027-B	Q2E21H4B	Q2E21H500M-5	Q2E21H500M-5	40	U-20706-B	AR-2-1-M005B-5 T200-2 1 1 T200-11	Q2E21-H500M-5	Q2E21-H500M-5	Q2E21-H500M-5	BUT000B

SERVICE	TC	TERMINAL	NUMBERS	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
BORIC ACID TRANSFER PUMP MOTOR	B	3TB2-7	3TB2-8	3TB2-9	3TB2-10	3TB2-11	3TB2-12	TA-44	TA-45	TA-46	TA-47	TA-48	TA-49	TA-50	TA-51	TA-52	TA-53	TA-54	TA-55	TA-56	TA-57	TA-58	TA-59

PRELIMINARY

TERA APERTURE CARD

BECHTEL CORPORATION
JOB 7597-20
SOUTHERN SERVICES INC.
FOR
ALABAMA POWER COMPANY
JOB JOSEPH M. FARLEY NUCLEAR PLANT UNIT NO. 2
DETAIL ELEMENTARY DIAGRAM
BORIC ACID TRANSFER PUMPS 2A & 2B
SCALE NONE
SHEET 2 OF 2 SHEETS
D-207224
REV 1P

PIDS-PDR

8/02/00307

