


SIDE 1

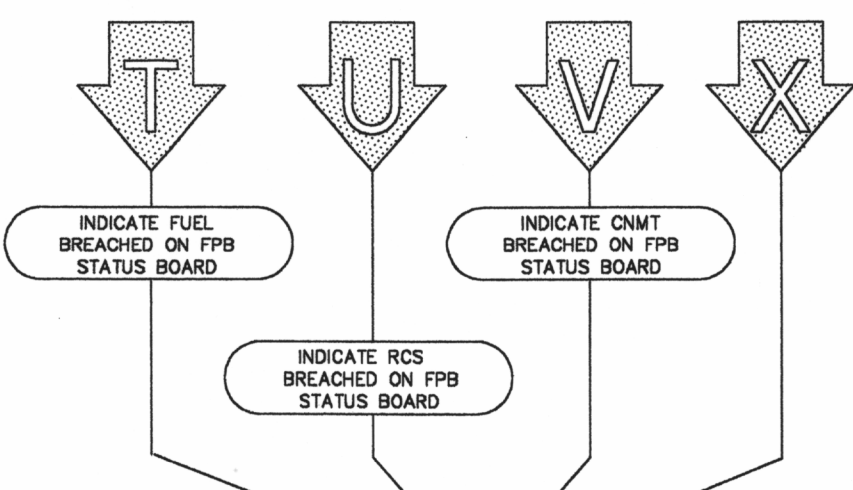

FPB STATUS BOARD		
FUEL FPB	RCS FPB	CONTAINMENT FPB
INTACT	INTACT	INTACT
JEOPARDIZED	JEOPARDIZED	JEOPARDIZED
BREACHED	BREACHED	BREACHED

EAL TABLE 1
RADIATION MONITOR TAG NUMBERS

MONITOR DESCRIPTION	INSTRUMENT TAG NO.	RM-11 CHANNEL ID NO.	ERTIS POINT ID NO.
CNMT LEAK DETECTION MONITOR	RM-11T-3502A-SA	20S303	RLT3502B
CNMT HI RANGE ACCIDENT MONITOR	RM-10R-3588-SA RM-10R-3588-SB	2AX162 2AX163	RCS3588A RCS3588B
PLANT VENT STACK #1 W/GRM EFFLUENT CHANNEL	RM-21AV-3509-1SA	1EX817	RAV3509H
TURBINE BUILDING STACK 3A W/GRM EFFLUENT CHANNEL	RM-11TV-3536-1	2EX827	RTV3536D
MAIN STEAM LINE MONITORS:			
VOLUME CONTROL TANK RM	RM-1RS-3591-SB	5AX164	RMS3591A
CHARGING PUMP 1A ROOM	RM-1RS-3592-SB	5AX165	RMS3592A
CHARGING PUMP 1B ROOM	RM-1RS-3593-SB	5AX166	RMS3593A
CHARGING PUMP 1C ROOM	RM-1RR-3595	1AA056	RRR3595A
CHARGING PUMP 1D ROOM	RM-1RR-3598A	1AA060	RRR3598A
CHARGING PUMP 1E ROOM	RM-1RR-3598B	1AA061	RRR3598B
CHARGING PUMP 1F ROOM	RM-1RR-3598C	1AA062	RRR3598C
RECYCLE EVAP. VLV. GAL.	RM-1RR-3600	1AA063	RRR3600A
LETDOWN HX VALVE GAL.	RM-1RR-3601	1AA064	RRR3601A
MODERATING HX VLV. GAL.	RM-1RR-3602	1AA065	RRR3602A
STACK #5 MONITOR W/GRM EFFLUENT CHANNEL	RM-1WV-3546-1	4EX837	RWV3546H
STACK #6A MONITOR W/GRM EFFLUENT CHANNEL	RM-1WV-3547-1	4EX847	RWV3547H
LIQUID EFFLUENT MONITORS			
TREATED LAUNDRY & HOT SHOWER DISCHARGE	REM-1WL-3540	4LL866	RWL3540A
SECONDARY WASTE SAMPLE TANK DISCHARGE	REM-21WS-3542	4LL866	RWS3542A
WASTE MONITOR TANK DISCHARGE	REM-1WL-3541	4LL876	RWL3541A
TURBINE BLDG. DRAIN	REM-1MD-3528	2LL276	RMD3528A

EAL TABLE 2
FUEL BREACH AREA RAD MONITORS

- VOLUME CONTROL TANK RM
- CHARGING PUMP 1A ROOM
- CHARGING PUMP 1B ROOM
- CHARGING PUMP 1C ROOM
- RECYCLE EVAP. VLV. GAL.
- LETDOWN HX VALVE GAL.
- MODERATING HX VLV. GAL.

EAL TABLE 3
FUNCTIONS NEEDED TO ACHIEVE SHUTDOWN

	MODE 4-5	MODE 3
CAPABILITY FOR FW FLOW ≥ 222.5 KPPH	IF RCS PRESS. > 360 PSIG	X
SECONDARY HEAT SINK CAPABILITY	IF RCS PRESS. > 360 PSIG	X
RHR CAPABILITY	X	
COW CAPABILITY	X	
ESW CAPABILITY	X	X
CHARGING CAPABILITY	X	X
STEAM GENERATOR SAFETY VALVES	X	X
BORATION CAPABILITY	X	X
RCS PRESS. CONTROL CAPABILITY	X	X
ACCUM. ISOL. OR VENTING CAPABILITY	X	

X = REQUIRED

EAL STATUS BOARD

EAL REF. NO(S):

GENERAL EMERGENCY

SITE AREA EMERGENCY

ALERT

UNUSUAL EVENT

CONTINUING ACTION: TIME


BEGAN: _____

REQUIRED DURATION (MIN): _____

EXPIRES: _____

CURRENT CLASSIFICATION _____

NEW OR 'POTENTIAL' CLASSIFICATION _____

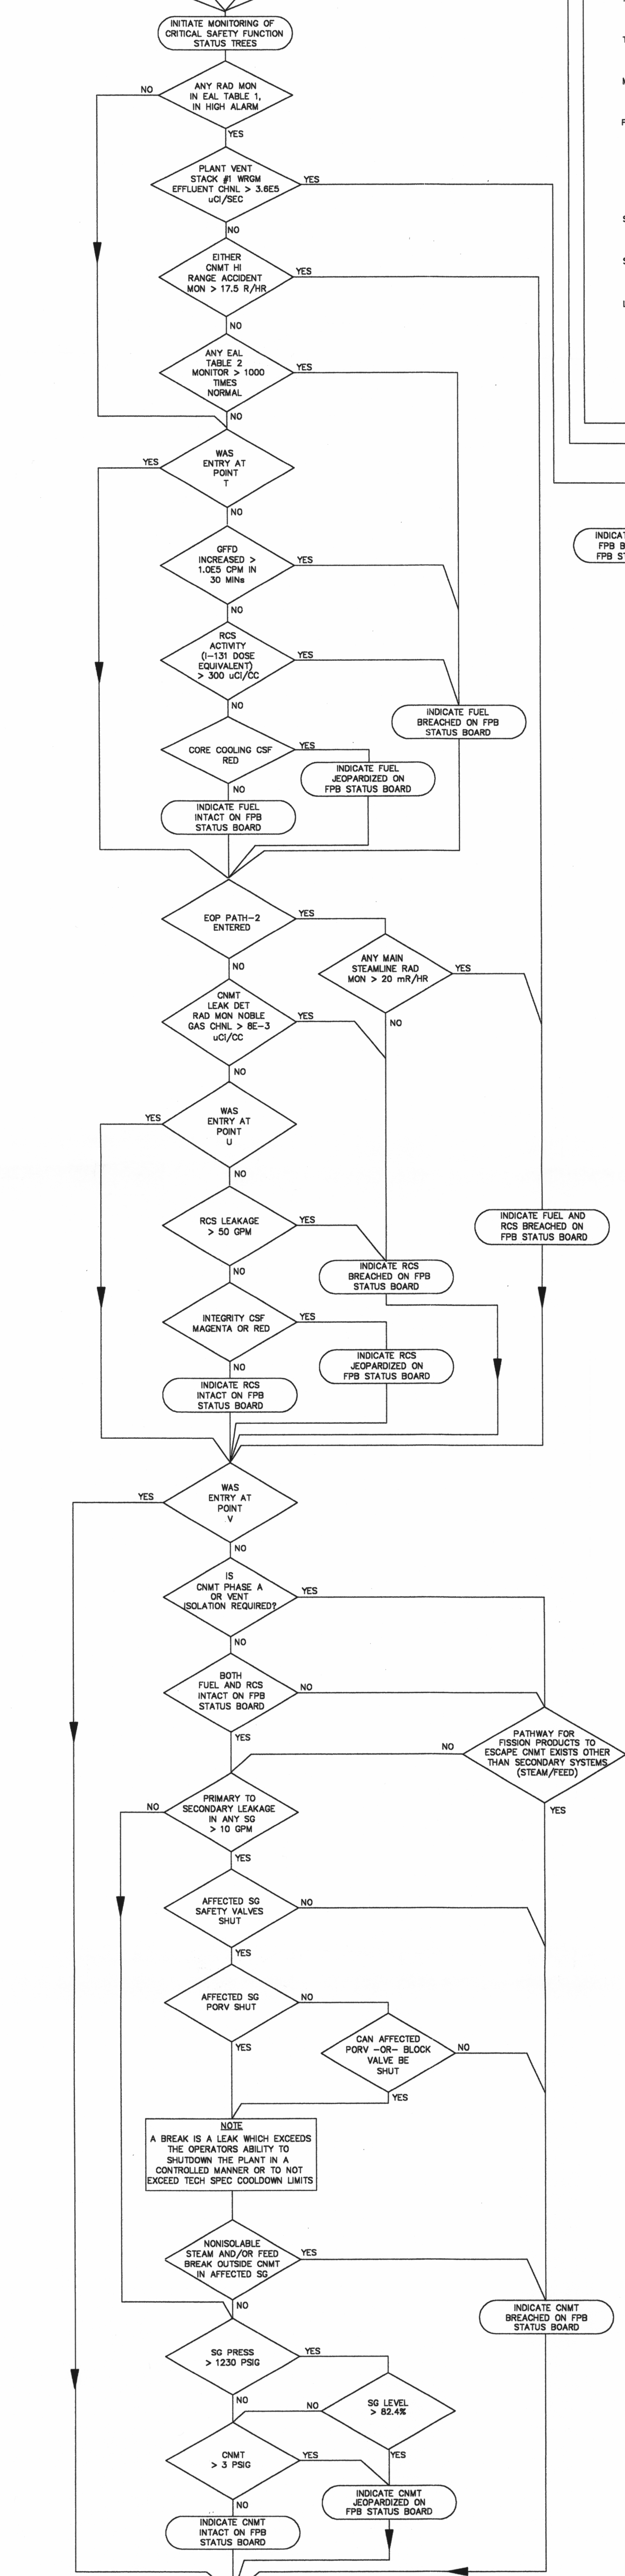

INDICATE ALL THREE FPB BREACHED ON FPB STATUS BOARD

INDICATE FUEL JEOPARDIZED ON FPB STATUS BOARD

INDICATE FUEL AND RCS BREACHED ON FPB STATUS BOARD

INDICATE RCS JEOPARDIZED ON FPB STATUS BOARD

INDICATE RCS INTACT ON FPB STATUS BOARD


INDICATE RCS JEOPARDIZED ON FPB STATUS BOARD

INDICATE RCS INTACT ON FPB STATUS BOARD

INDICATE CNMT BREACHED ON FPB STATUS BOARD

INDICATE CNMT INTACT ON FPB STATUS BOARD

INDICATE CNMT JEOPARDIZED ON FPB STATUS BOARD

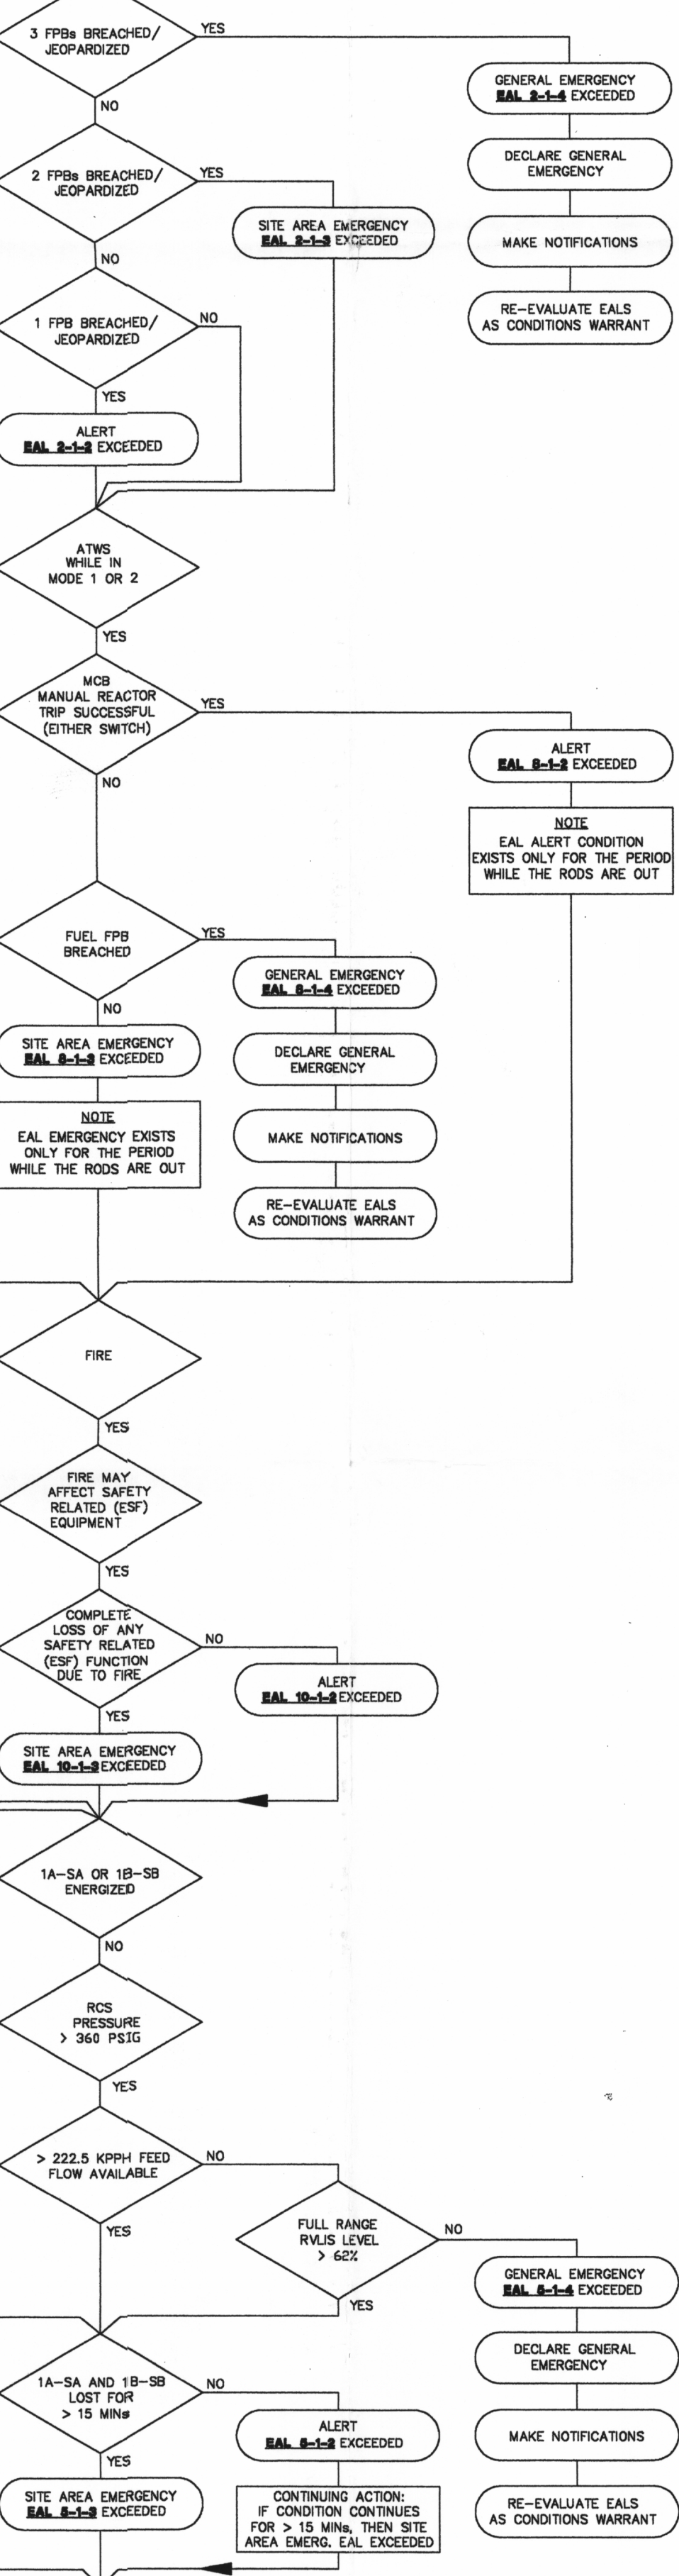

GENERAL EMERGENCY EAL 2-1-5 EXCEEDED

DECLARE GENERAL EMERGENCY

MAKE NOTIFICATIONS

RE-EVALUATE EALS AS CONDITIONS WARRANT

ALERT EAL 2-1-5 EXCEEDED

GENERAL EMERGENCY EAL 2-1-5 EXCEEDED

DECLARE GENERAL EMERGENCY

MAKE NOTIFICATIONS

RE-EVALUATE EALS AS CONDITIONS WARRANT

ALERT EAL 2-1-5 EXCEEDED


GENERAL EMERGENCY EAL 2-1-5 EXCEEDED

DECLARE GENERAL EMERGENCY

MAKE NOTIFICATIONS

RE-EVALUATE EALS AS CONDITIONS WARRANT

ALERT EAL 2-1-5 EXCEEDED

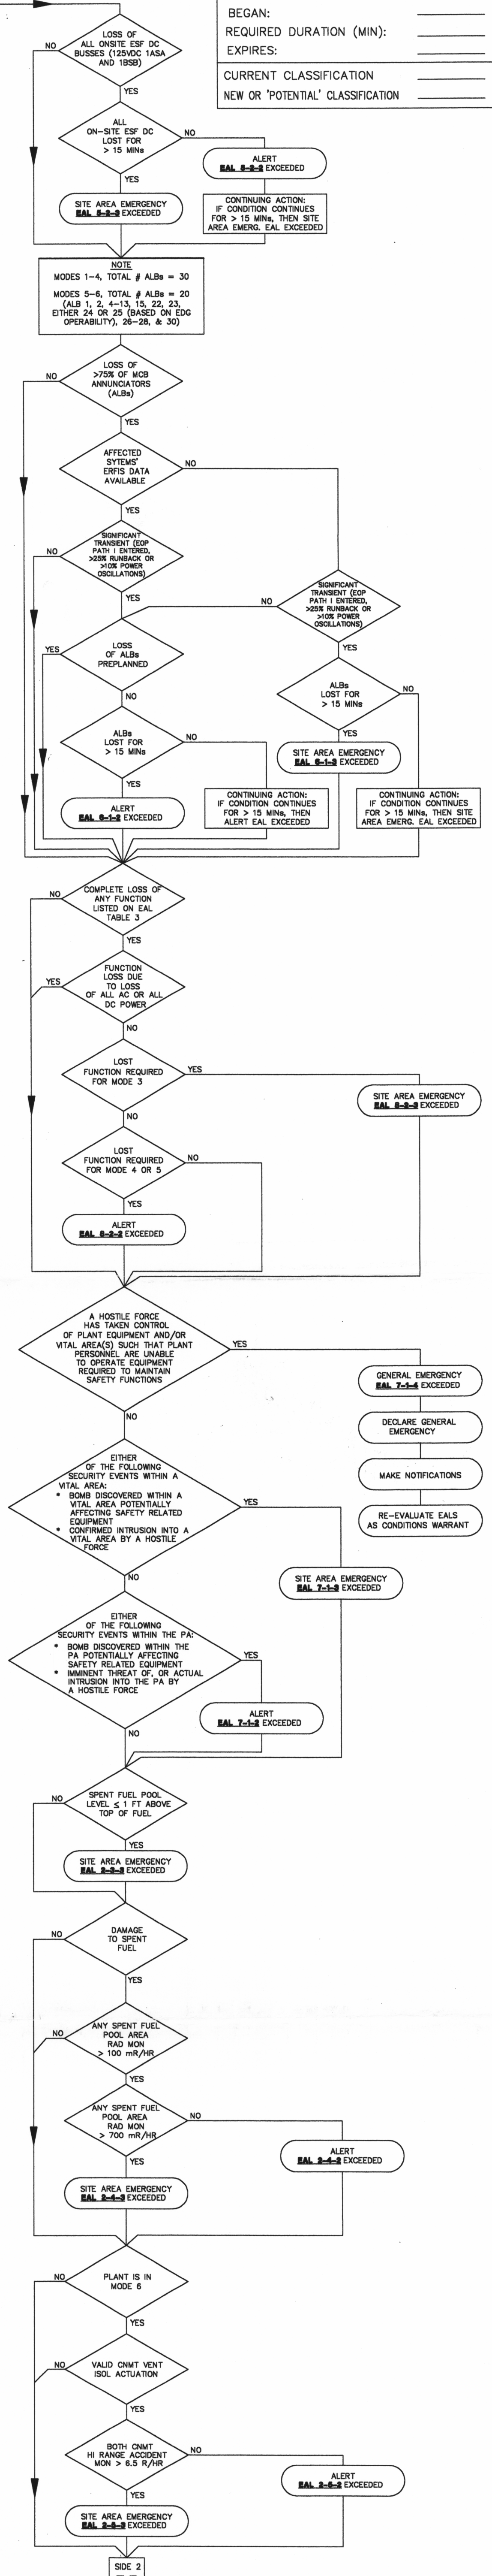

GENERAL EMERGENCY EAL 2-1-5 EXCEEDED

DECLARE GENERAL EMERGENCY

MAKE NOTIFICATIONS

RE-EVALUATE EALS AS CONDITIONS WARRANT

ALERT EAL 2-1-5 EXCEEDED

GENERAL EMERGENCY EAL 2-1-5 EXCEEDED

DECLARE GENERAL EMERGENCY

MAKE NOTIFICATIONS

RE-EVALUATE EALS AS CONDITIONS WARRANT

ALERT EAL 2-1-5 EXCEEDED

GENERAL EMERGENCY EAL 2-1-5 EXCEEDED

DECLARE GENERAL EMERGENCY

MAKE NOTIFICATIONS

RE-EVALUATE EALS AS CONDITIONS WARRANT

ALERT EAL 2-1-5 EXCEEDED

D1