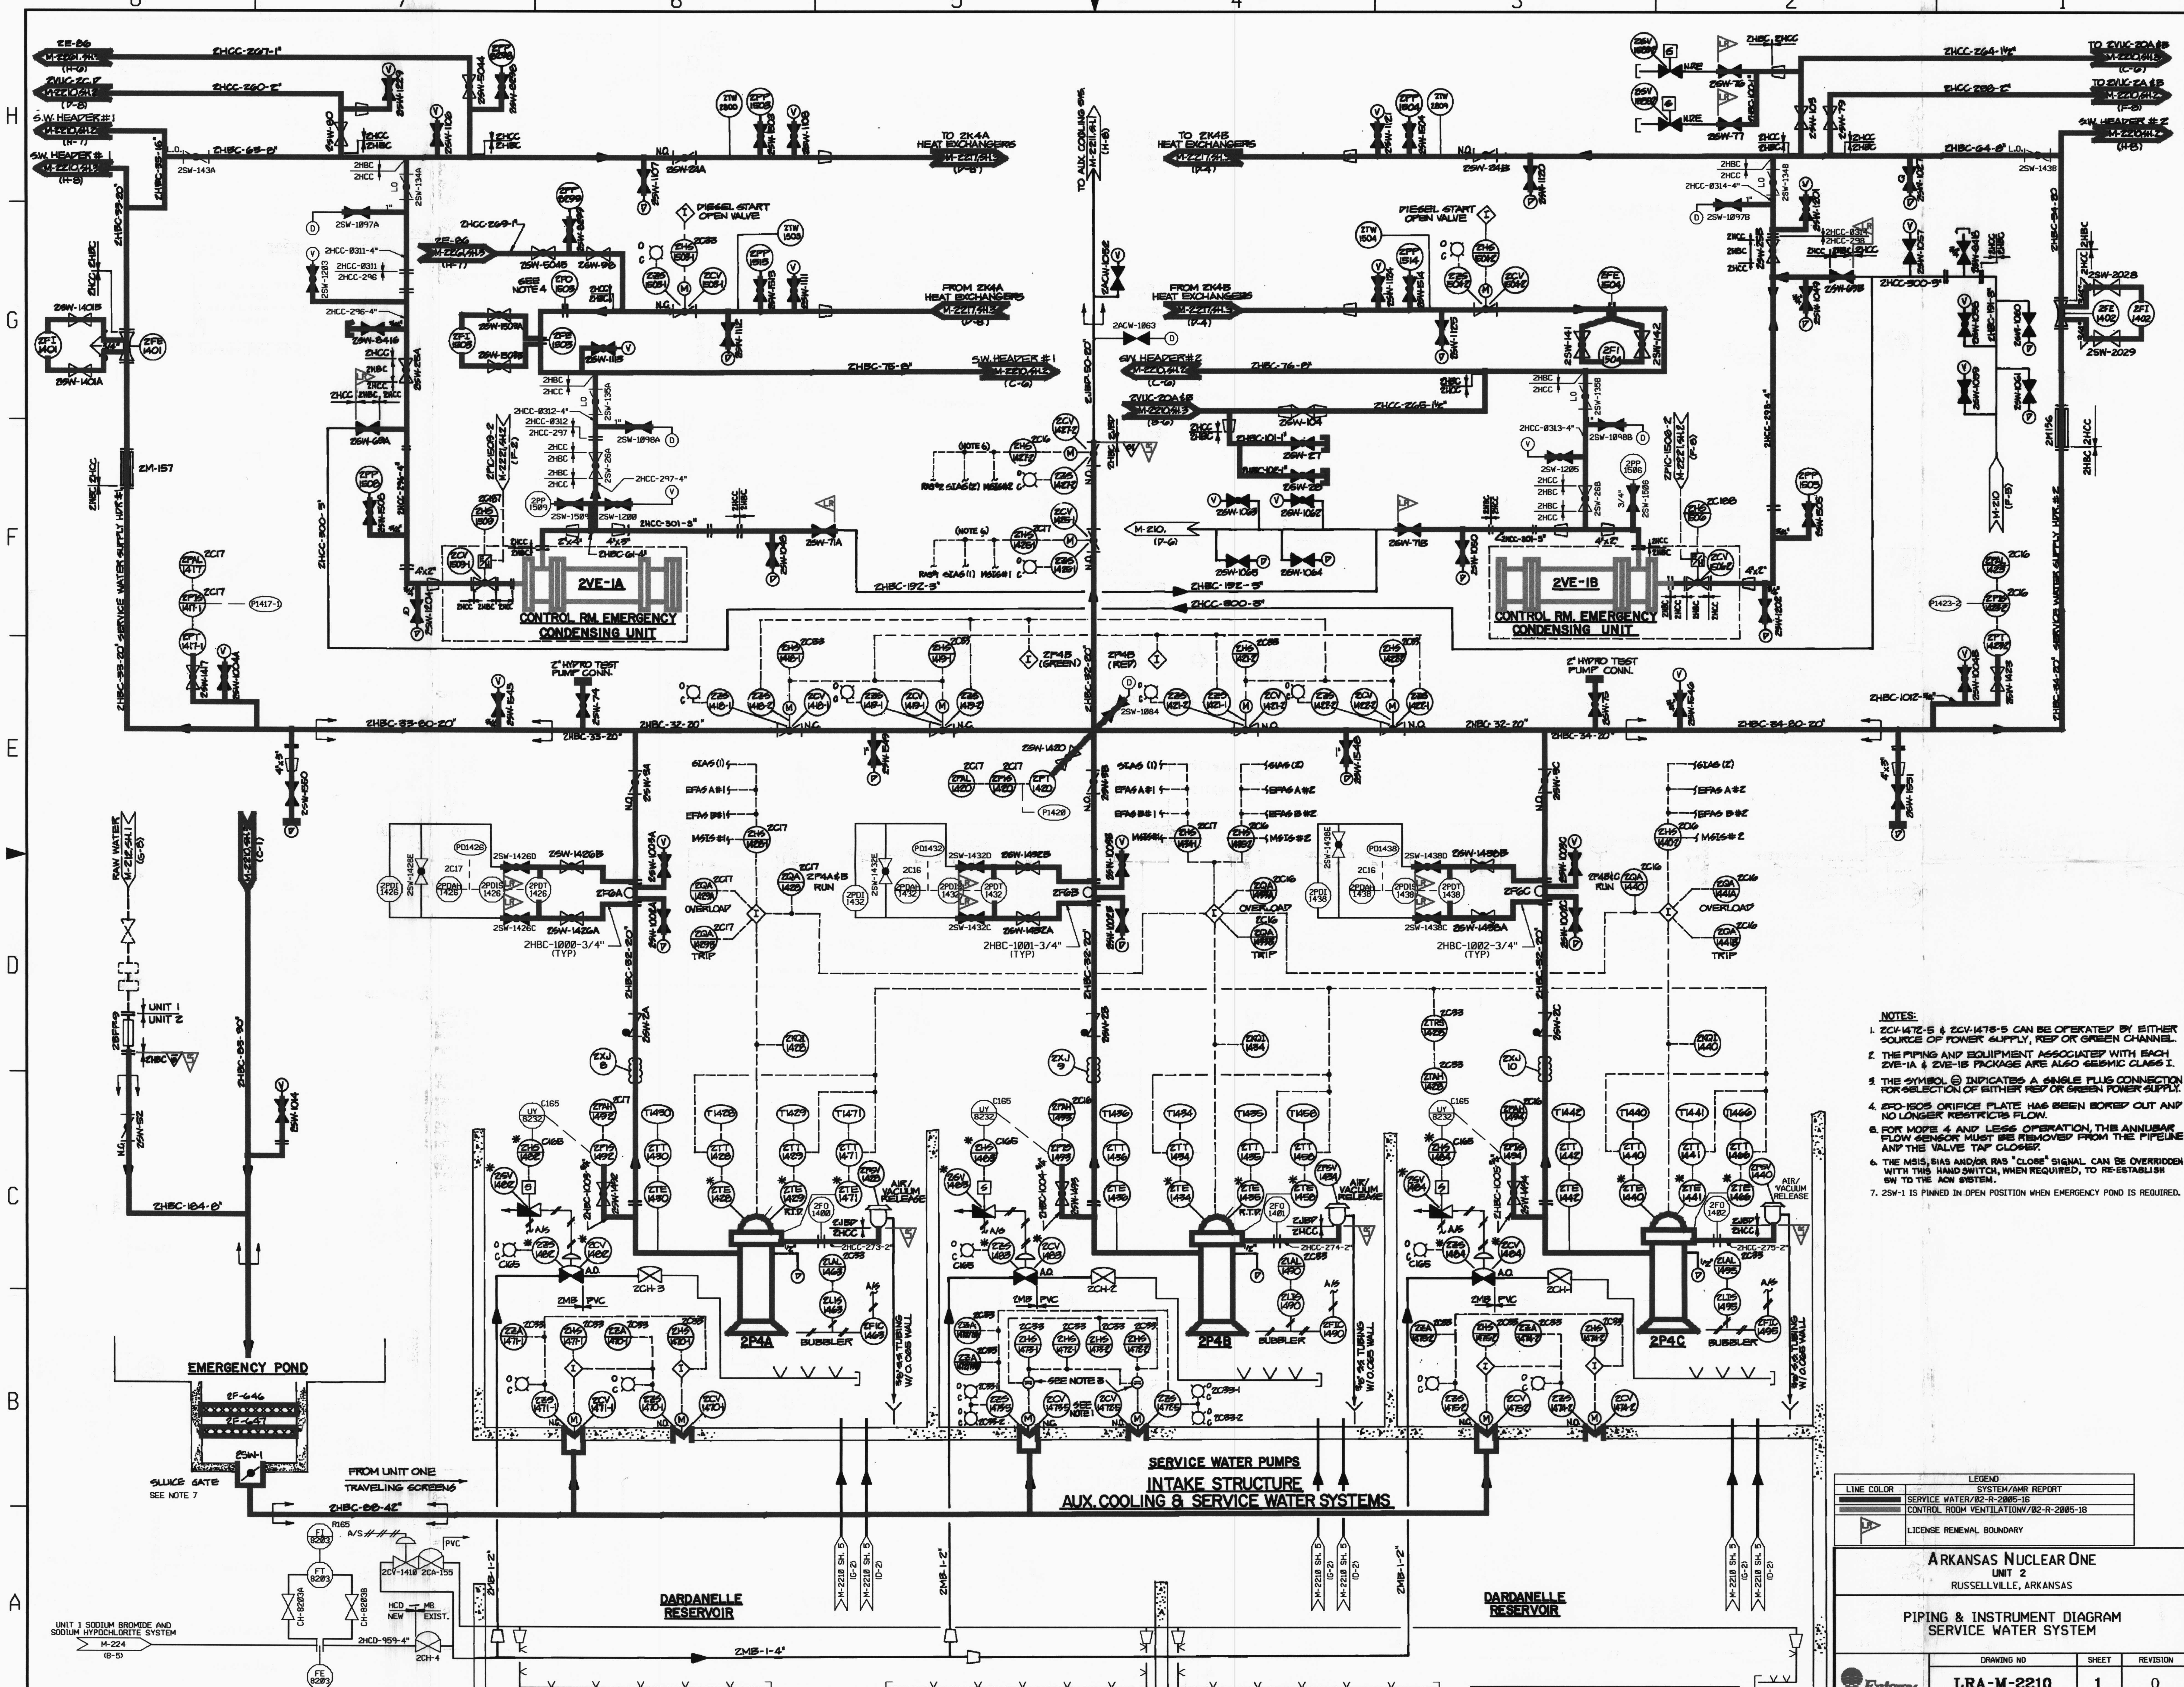

NOTES:

1. 2CV-1472-5 & 2CV-1473-5 CAN BE OPERATED BY EITHER SOURCE OF POWER SUPPLY, RED OR GREEN CHANNEL.
2. THE PIPING AND EQUIPMENT ASSOCIATED WITH EACH 2VE-1A & 2VE-1B PACKAGE ARE ALSO SEISMIC CLASS I.
3. THE SYMBOL ⊜ INDICATES A SINGLE PLUG CONNECTION FOR SELECTION OF EITHER RED OR GREEN POWER SUPPLY.
4. 2FO-1505 ORIFICE PLATE HAS BEEN BORED OUT AND NO LONGER RESTRICTS FLOW.
5. FOR MODE 4 AND LESS OPERATION, THE ANNUBAR FLOW SENSOR MUST BE REMOVED FROM THE PIPELINE AND THE VALVE TAP CLOSED.
6. THE MSIS, SIAS AND/OR RAS "CLOSE" SIGNAL CAN BE OVERRIDDEN WITH THIS HAND SWITCH, WHEN REQUIRED, TO RE-ESTABLISH SW TO THE ACW SYSTEM.
7. 2SW-1 IS PINNED IN OPEN POSITION WHEN EMERGENCY POND IS REQUIRED.

LEGEND	
LINE COLOR	SYSTEM/AMR REPORT
(dark line)	SERVICE WATER/02-R-2005-16
(grey line)	CONTROL ROOM VENTILATION/02-R-2005-18
(LR flag)	LICENSE RENEWAL BOUNDARY

ARKANSAS NUCLEAR ONE
UNIT 2
RUSSELLVILLE, ARKANSAS

PIPING & INSTRUMENT DIAGRAM
SERVICE WATER SYSTEM

DRAWING NO	SHEET	REVISION
LRA-M-2210	1	0

Entergy

0 SEP 23 2003 KLG TS1

BASED ON M-2210 SH 1 REV 84

RED "X" IF ORIGINAL

D-13